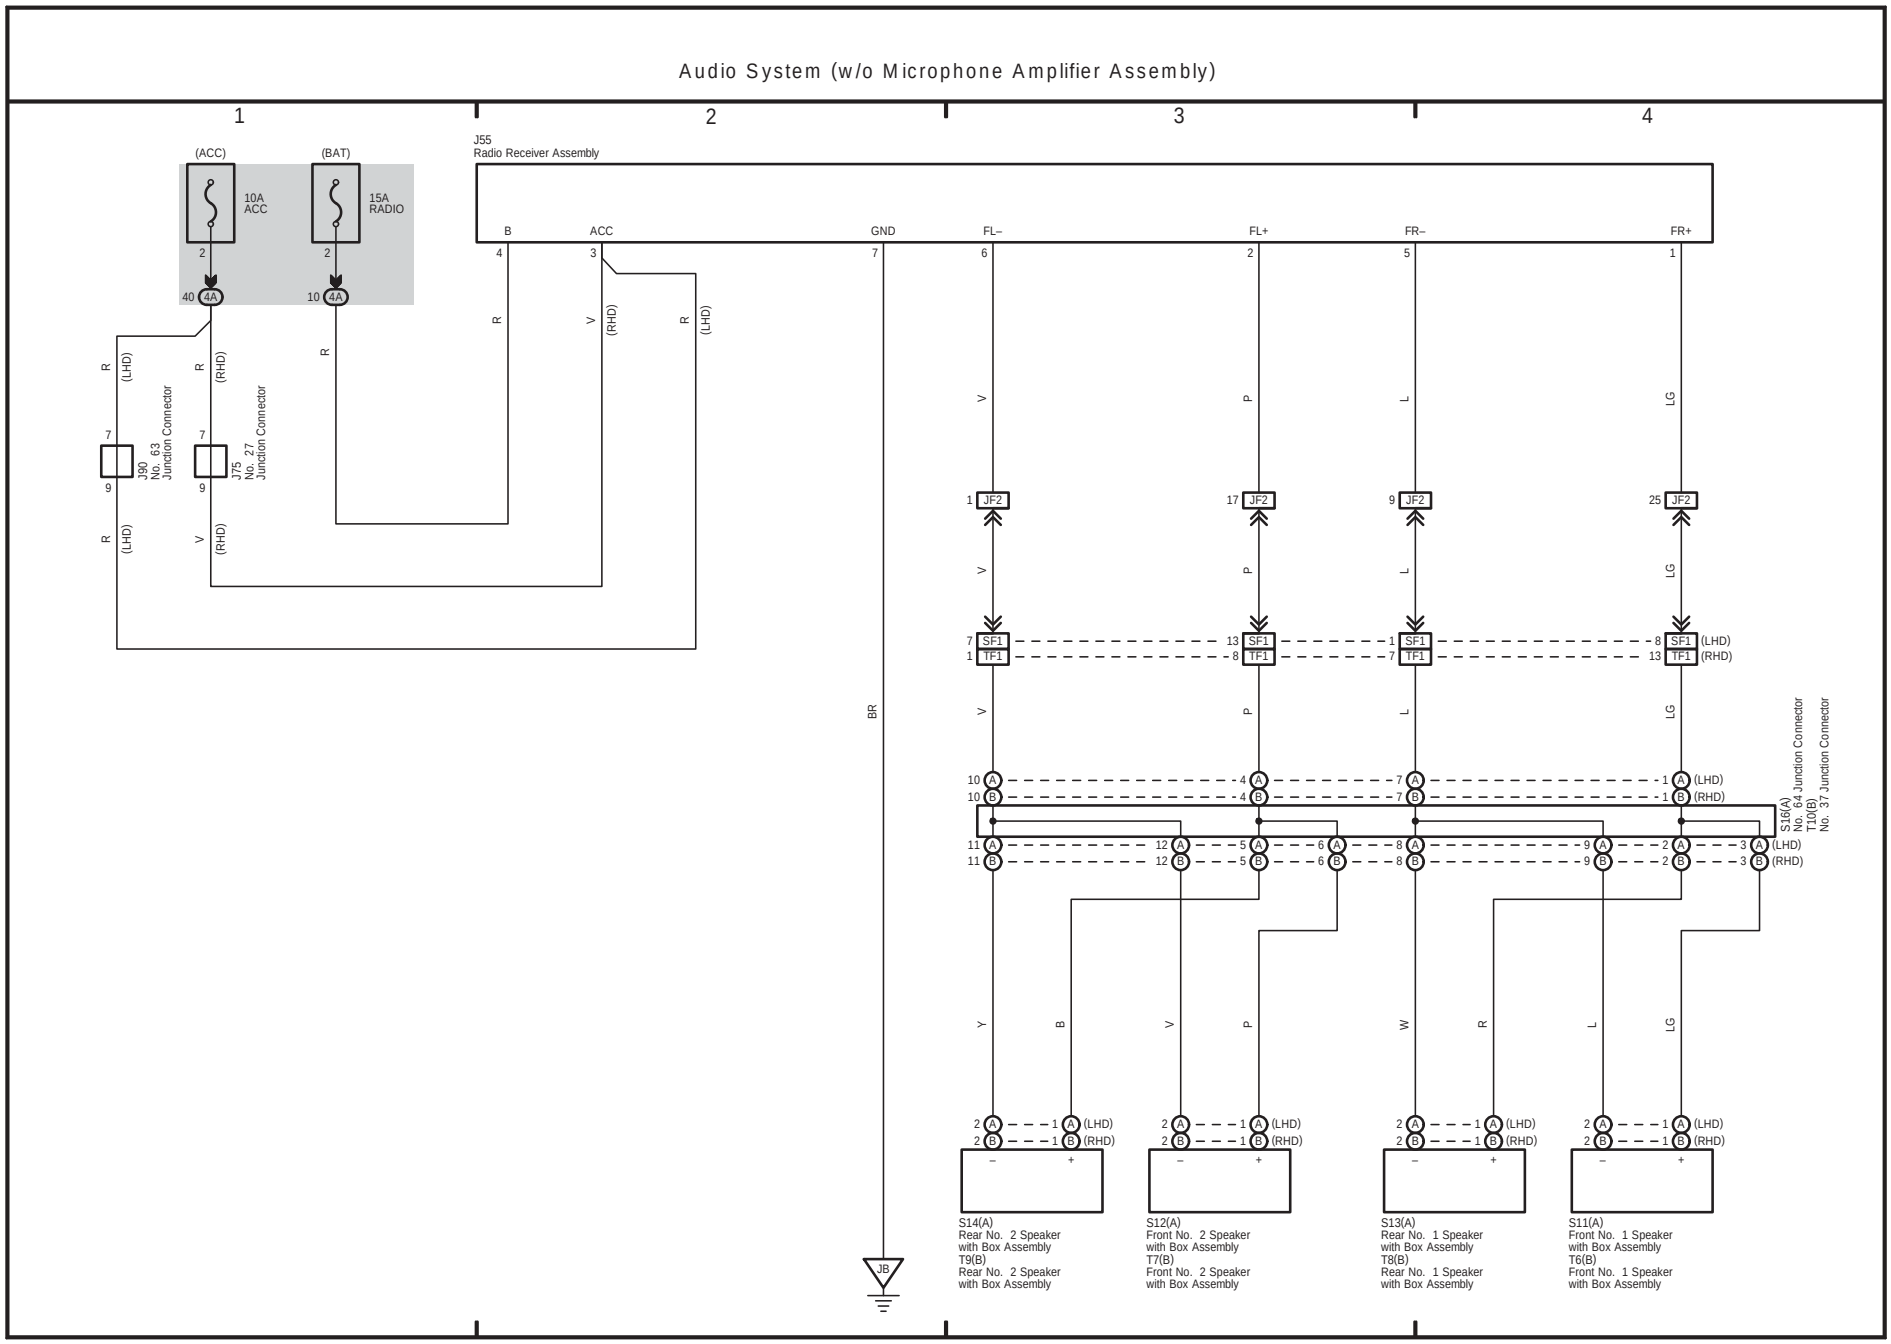

Audio System (w/o Microphone Amplifier Assembly)
1
2
3
4
(ACC)
(BAT)
10A
ACC
15A
RADIO
J55
Radio Receiver Assembly
B
ACC
GND
FL–
FL+
FR–
FR+
J90
No. 63
Junction Connector
J75
No. 27
Junction Connector
JF2
SF1
TF1
(LHD)
(RHD)
S16(A)
No. 64 Junction Connector
T10(B)
No. 37 Junction Connector
JB
S14(A)
Rear No. 2 Speaker
with Box Assembly
T9(B)
Rear No. 2 Speaker
with Box Assembly
S12(A)
Front No. 2 Speaker
with Box Assembly
T7(B)
Front No. 2 Speaker
with Box Assembly
S13(A)
Rear No. 1 Speaker
with Box Assembly
T8(B)
Rear No. 1 Speaker
with Box Assembly
S11(A)
Front No. 1 Speaker
with Box Assembly
T6(B)
Front No. 1 Speaker
with Box Assembly