




(BAT)
(IG)
(IG)
20A
IG1
NO. 4
20A
WASHER
5A
ECU–IG1
NO. 6
J68(A), J69(B)
No. 1 Integration Relay
IG
ACT–
+B
+S
RLA
RRA
SB
B
G
L
LG
J48
Windshield Washer Motor
and Pump Assembly
IG1 NO. 4
Relay
F29(A)
No. 53
Junction Connector
F39(B)
No. 22
Junction Connector
(LHD)
(RHD)
F1(A)
Front Wiper Motor &
Bracket Assembly
B
+S
+1
+2
E
W–B
F29(A)
No. 53
Junction Connector
F42(B)
No. 25
Junction Connector
AF4
JF3
FB


J68(A), J69(B)
No. 1 Integration Relay
E
WU
PA2
SPD
PA1
4 B
12 A
6 A
8 A
7 A
W–B
V
R
B
LG
J83
No. 32
Junction Connector
7
4 A
7 A
14 A
17 A
13 A
18 A
12 A (LHD)
19 A (RHD)
WF
+2
INT1
+1
10
9
8
Front Washer Switch
WF
EW
Off
On
Front Wiper Switch
+2
INT
+1
E
Off
Intermittent
Lo
Hi
EW
E
5 A (LHD)
6 A (RHD)
J65(A)
Windshield Wiper
Switch Assembly
11 A (LHD)
20 A (RHD)
W–B
W–B
W–B
JA


F 1
Black

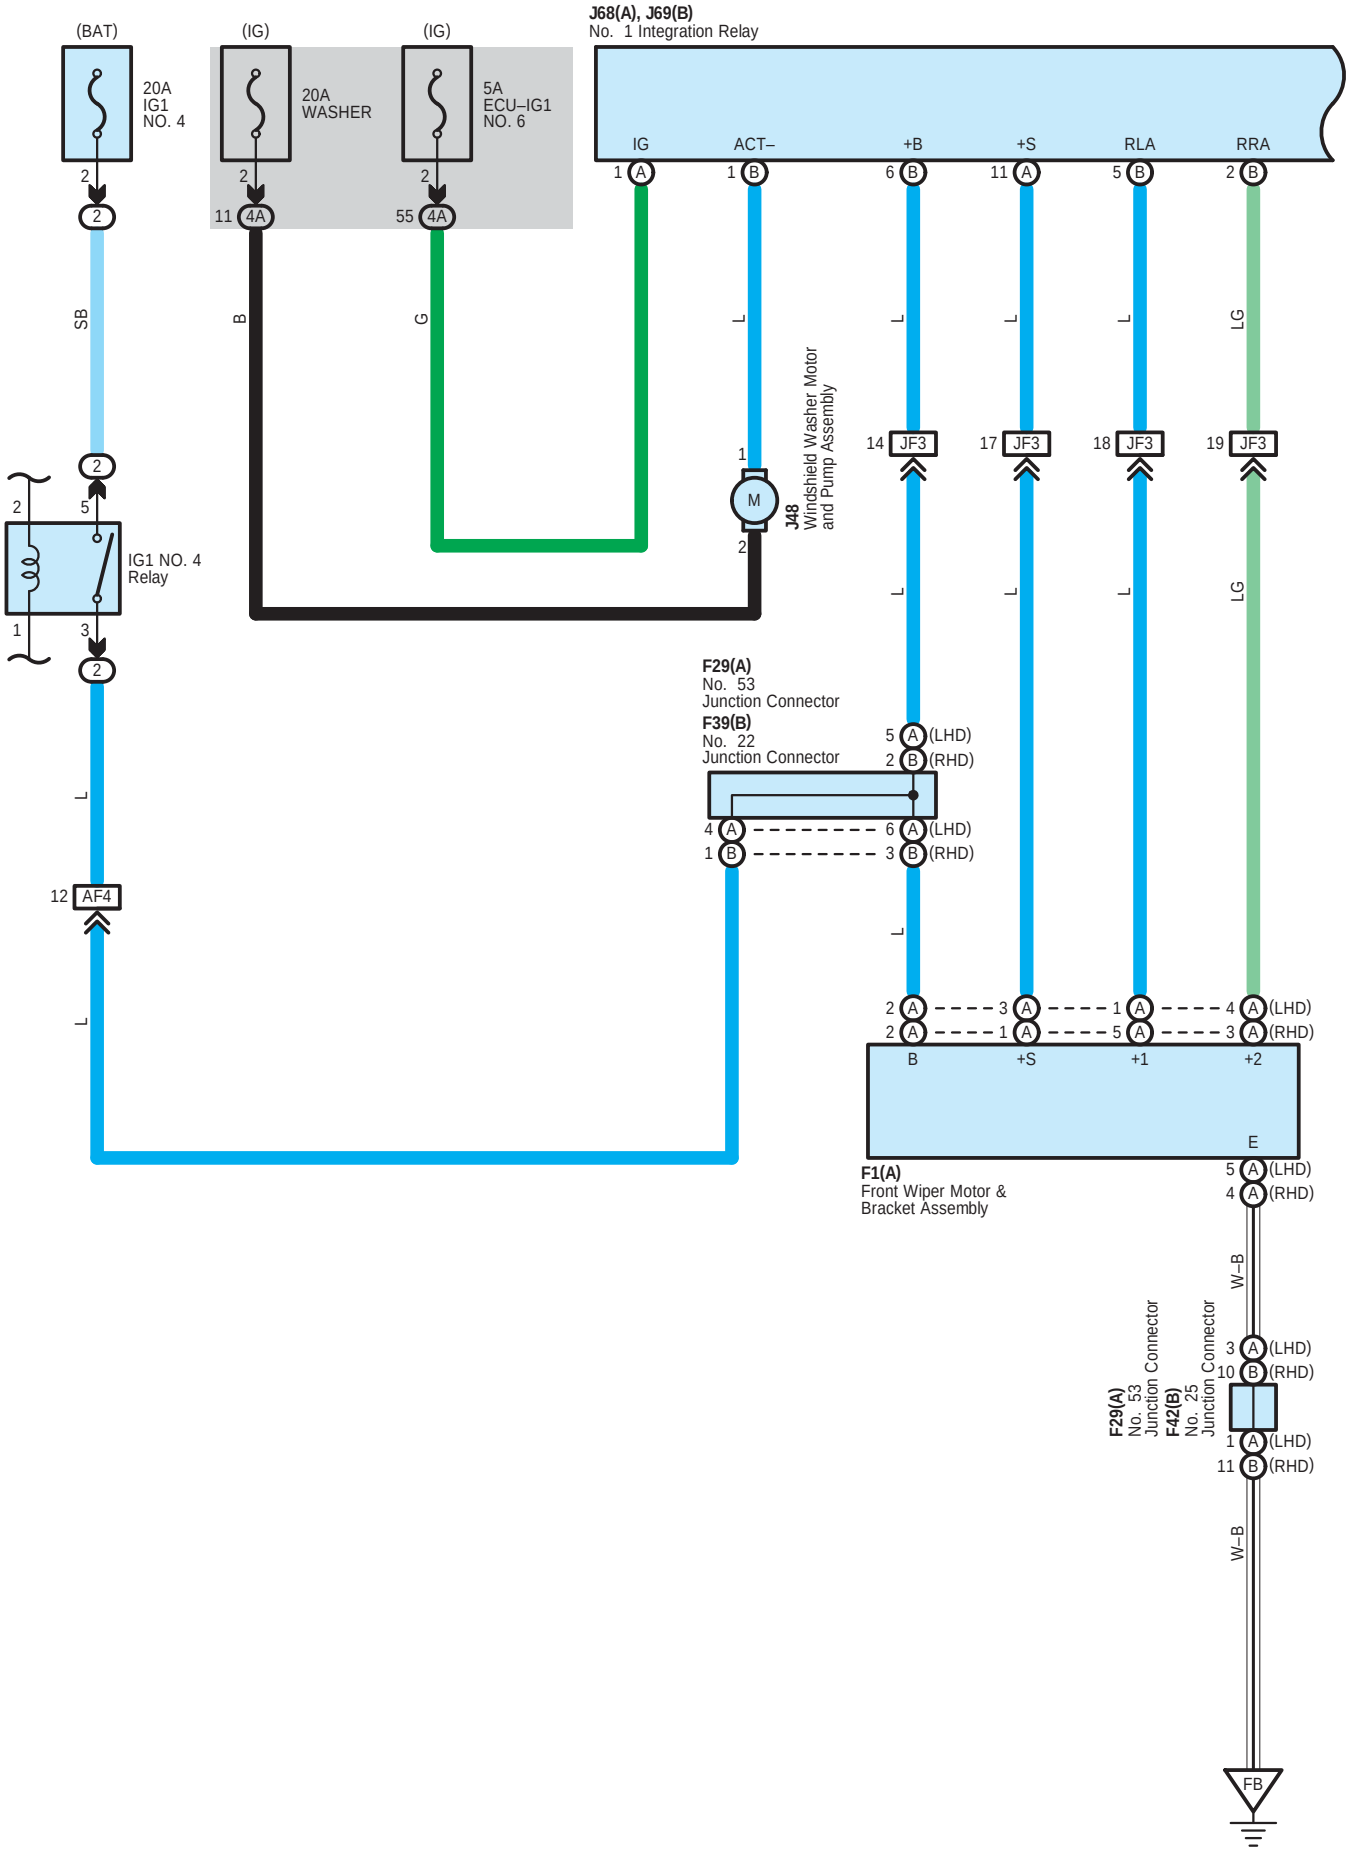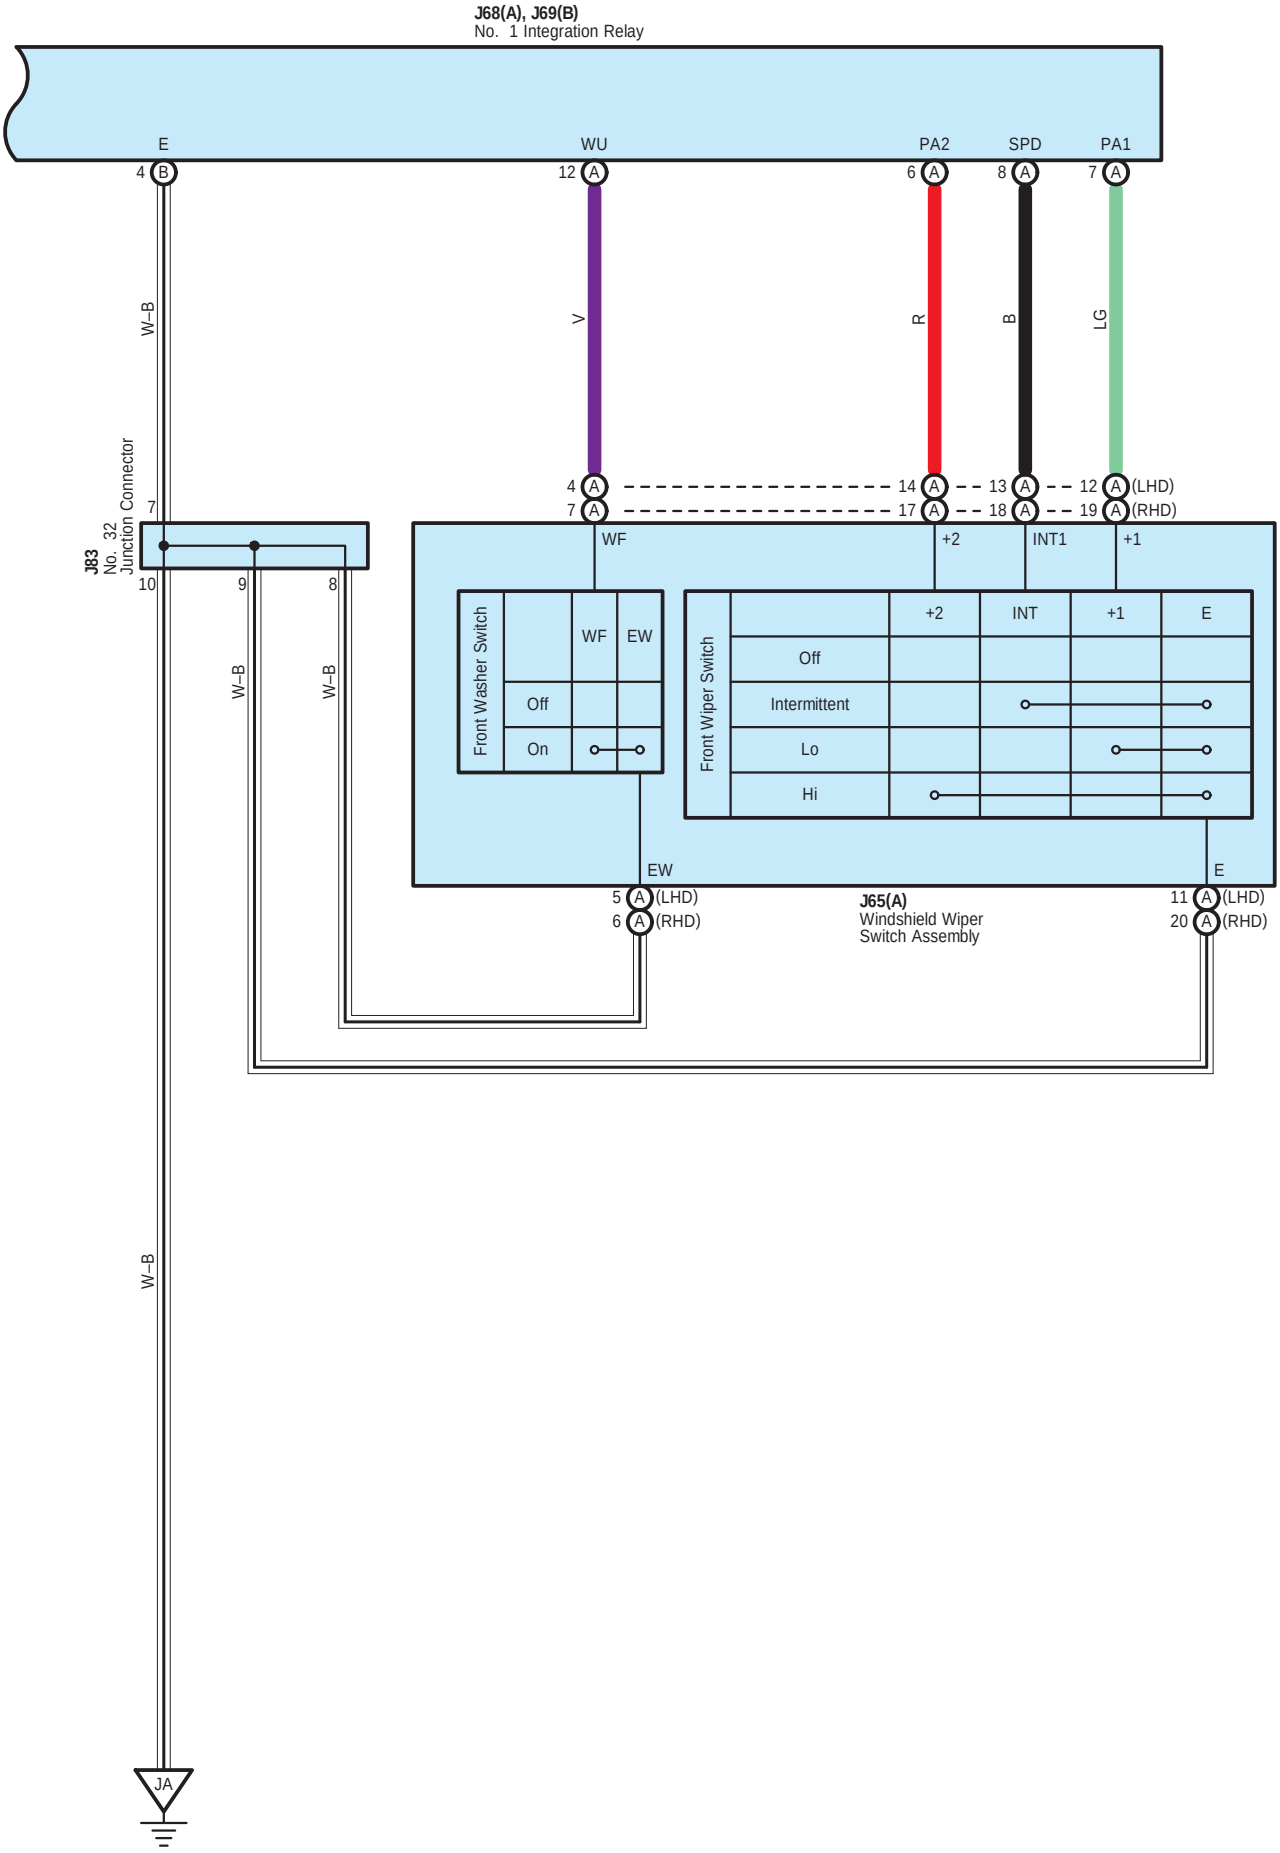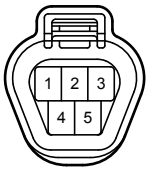


F 29
Black

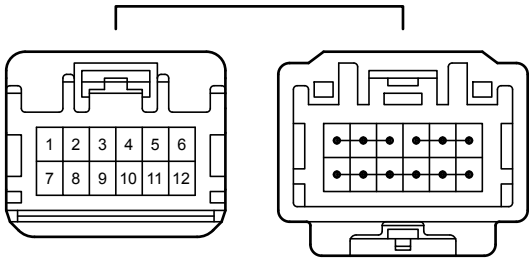


F 39
Black

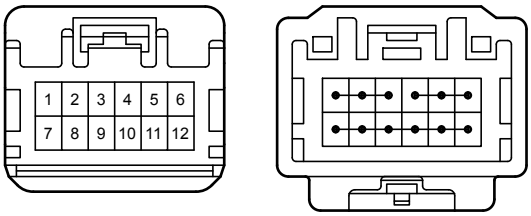


F 42
Black

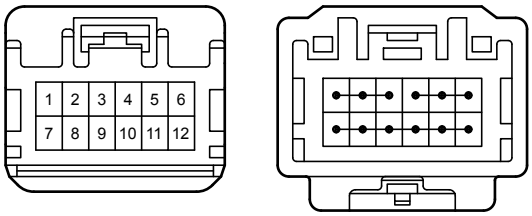


J 48
Gray

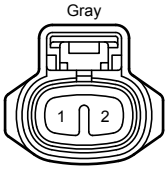


J 65
Black

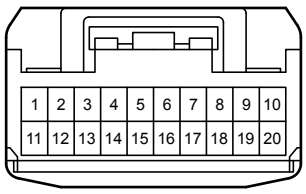


J 68
White

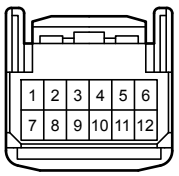


J 69
White

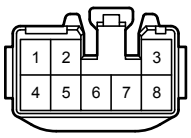


J 83
Black

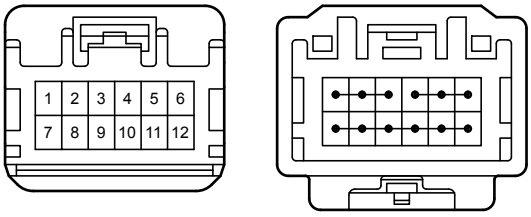



4A
White

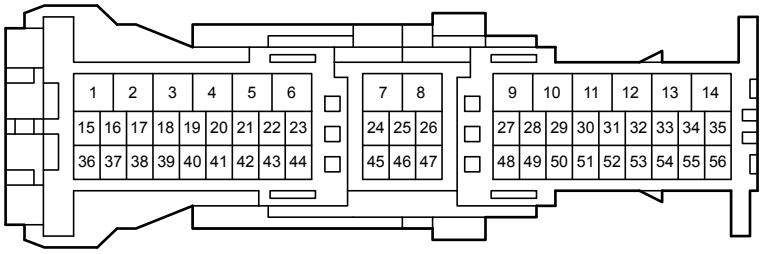

AF4
White

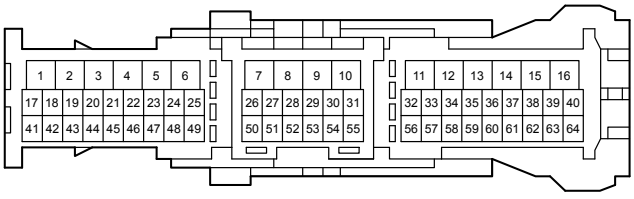

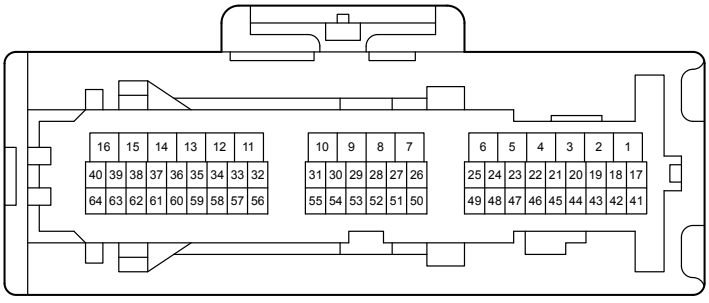

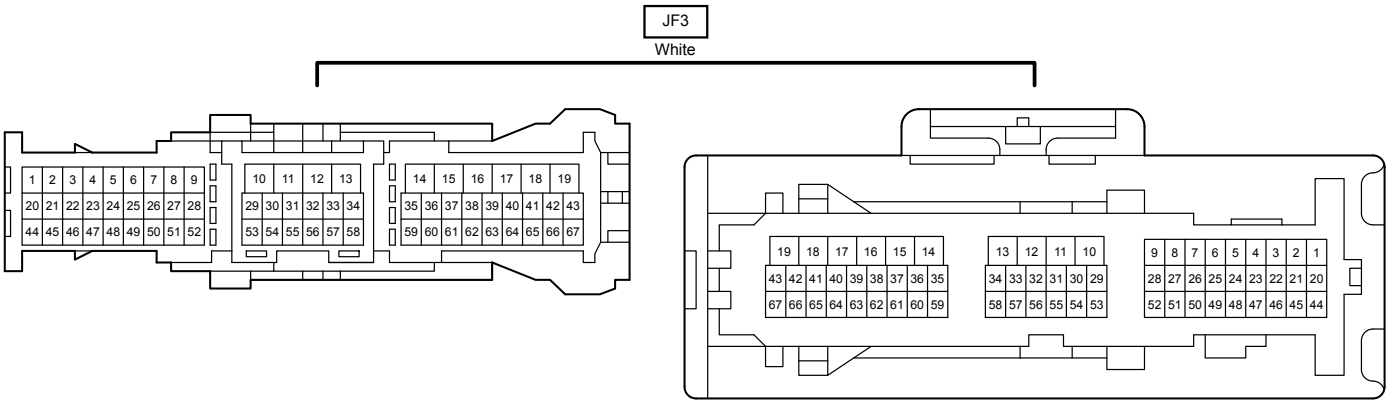
JF3
White
1 2 3 4 5 6 7 8 9
20 21 22 23 24 25 26 27 28
44 45 46 47 48 49 50 51 52
10 11 12 13
29 30 31 32 33 34
53 54 55 56 57 58
14 15 16 17 18 19
35 36 37 38 39 40 41 42 43
59 60 61 62 63 64 65 66 67
19 18 17 16 15 14
43 42 41 40 39 38 37 36 35
67 66 65 64 63 62 61 60 59
13 12 11 10
34 33 32 31 30 29
58 57 56 55 54 53
9 8 7 6 5 4 3 2 1
28 27 26 25 24 23 22 21 20
52 51 50 49 48 47 46 45 44