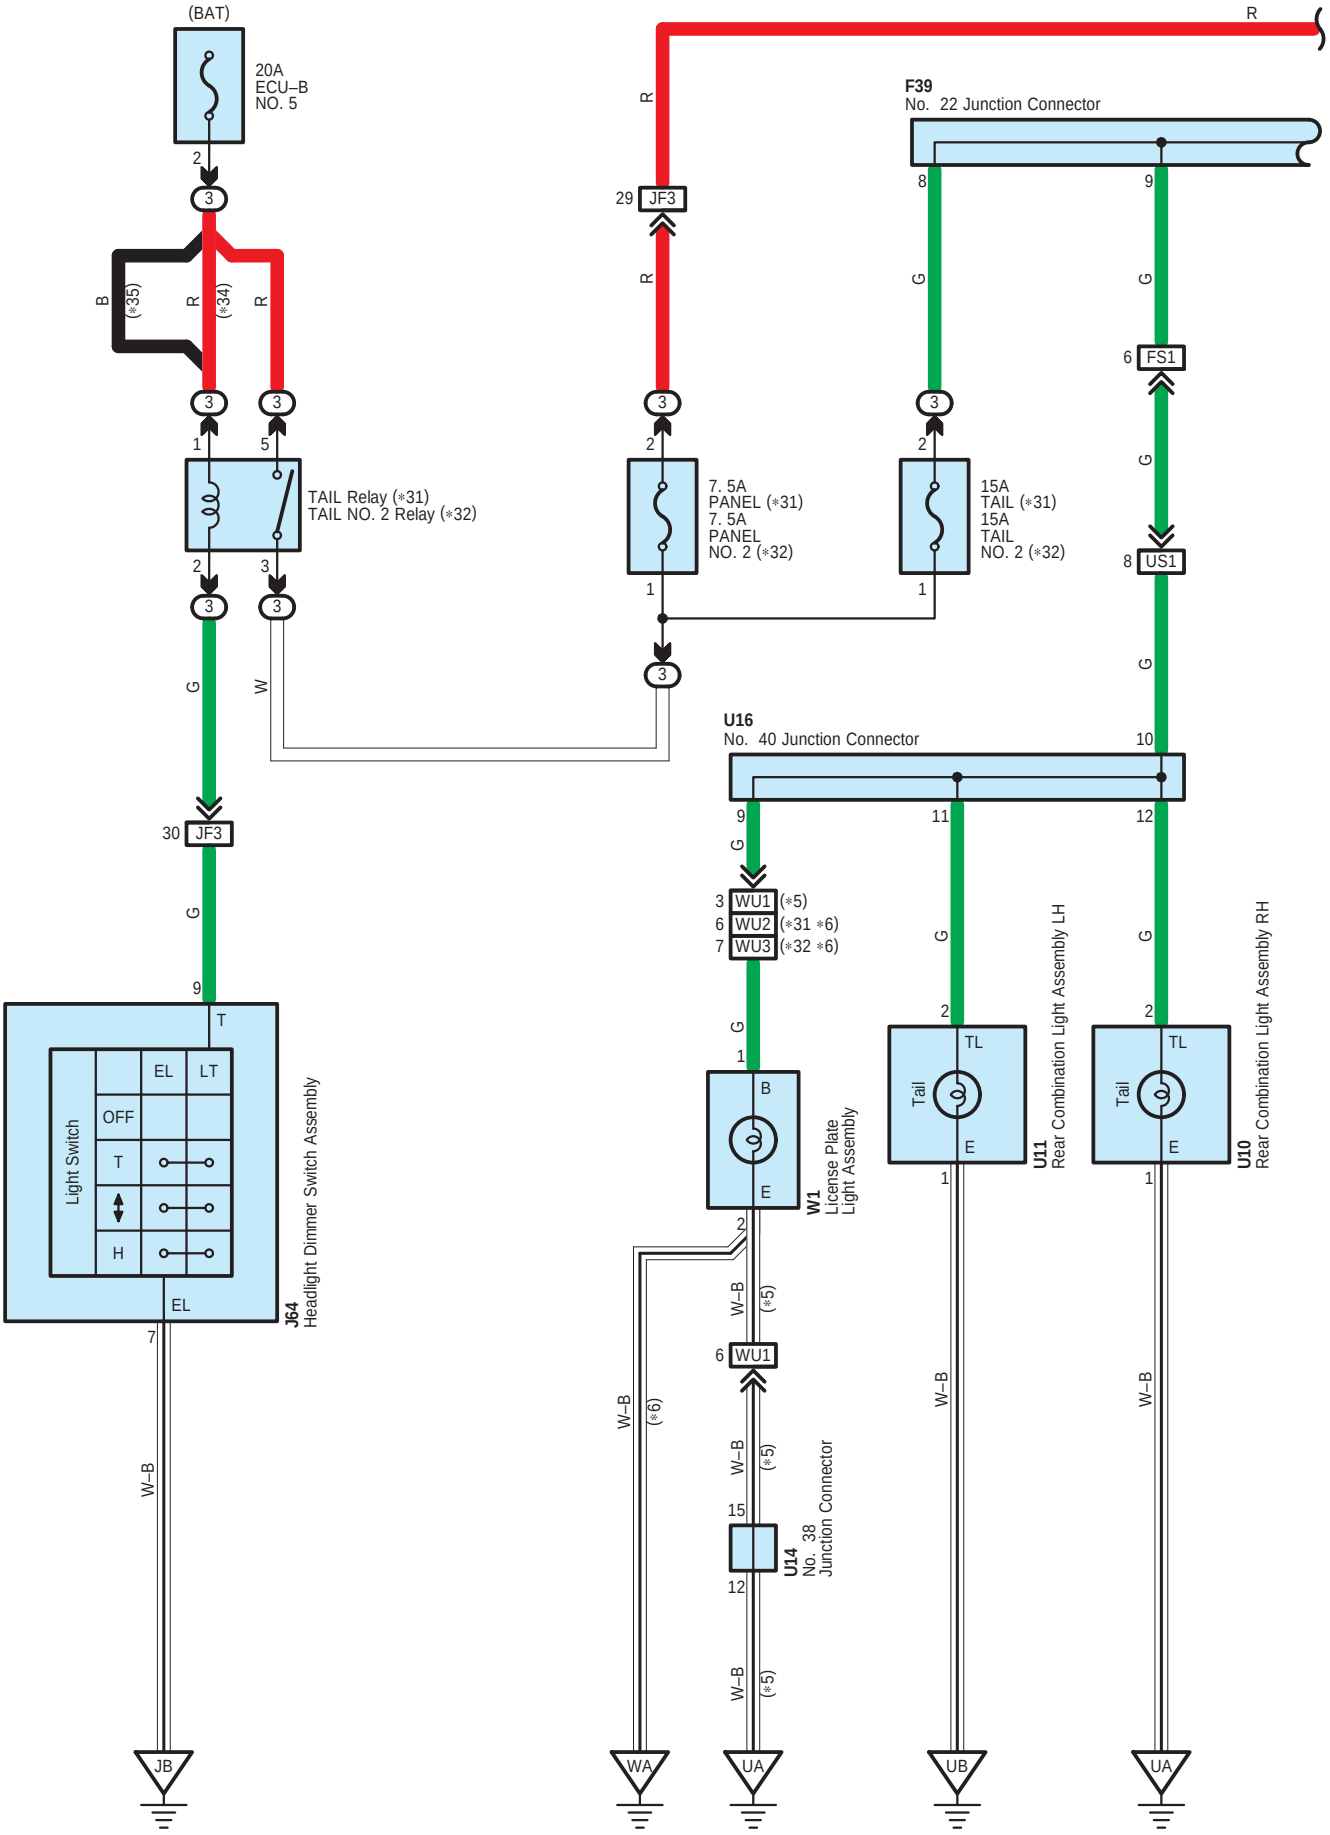
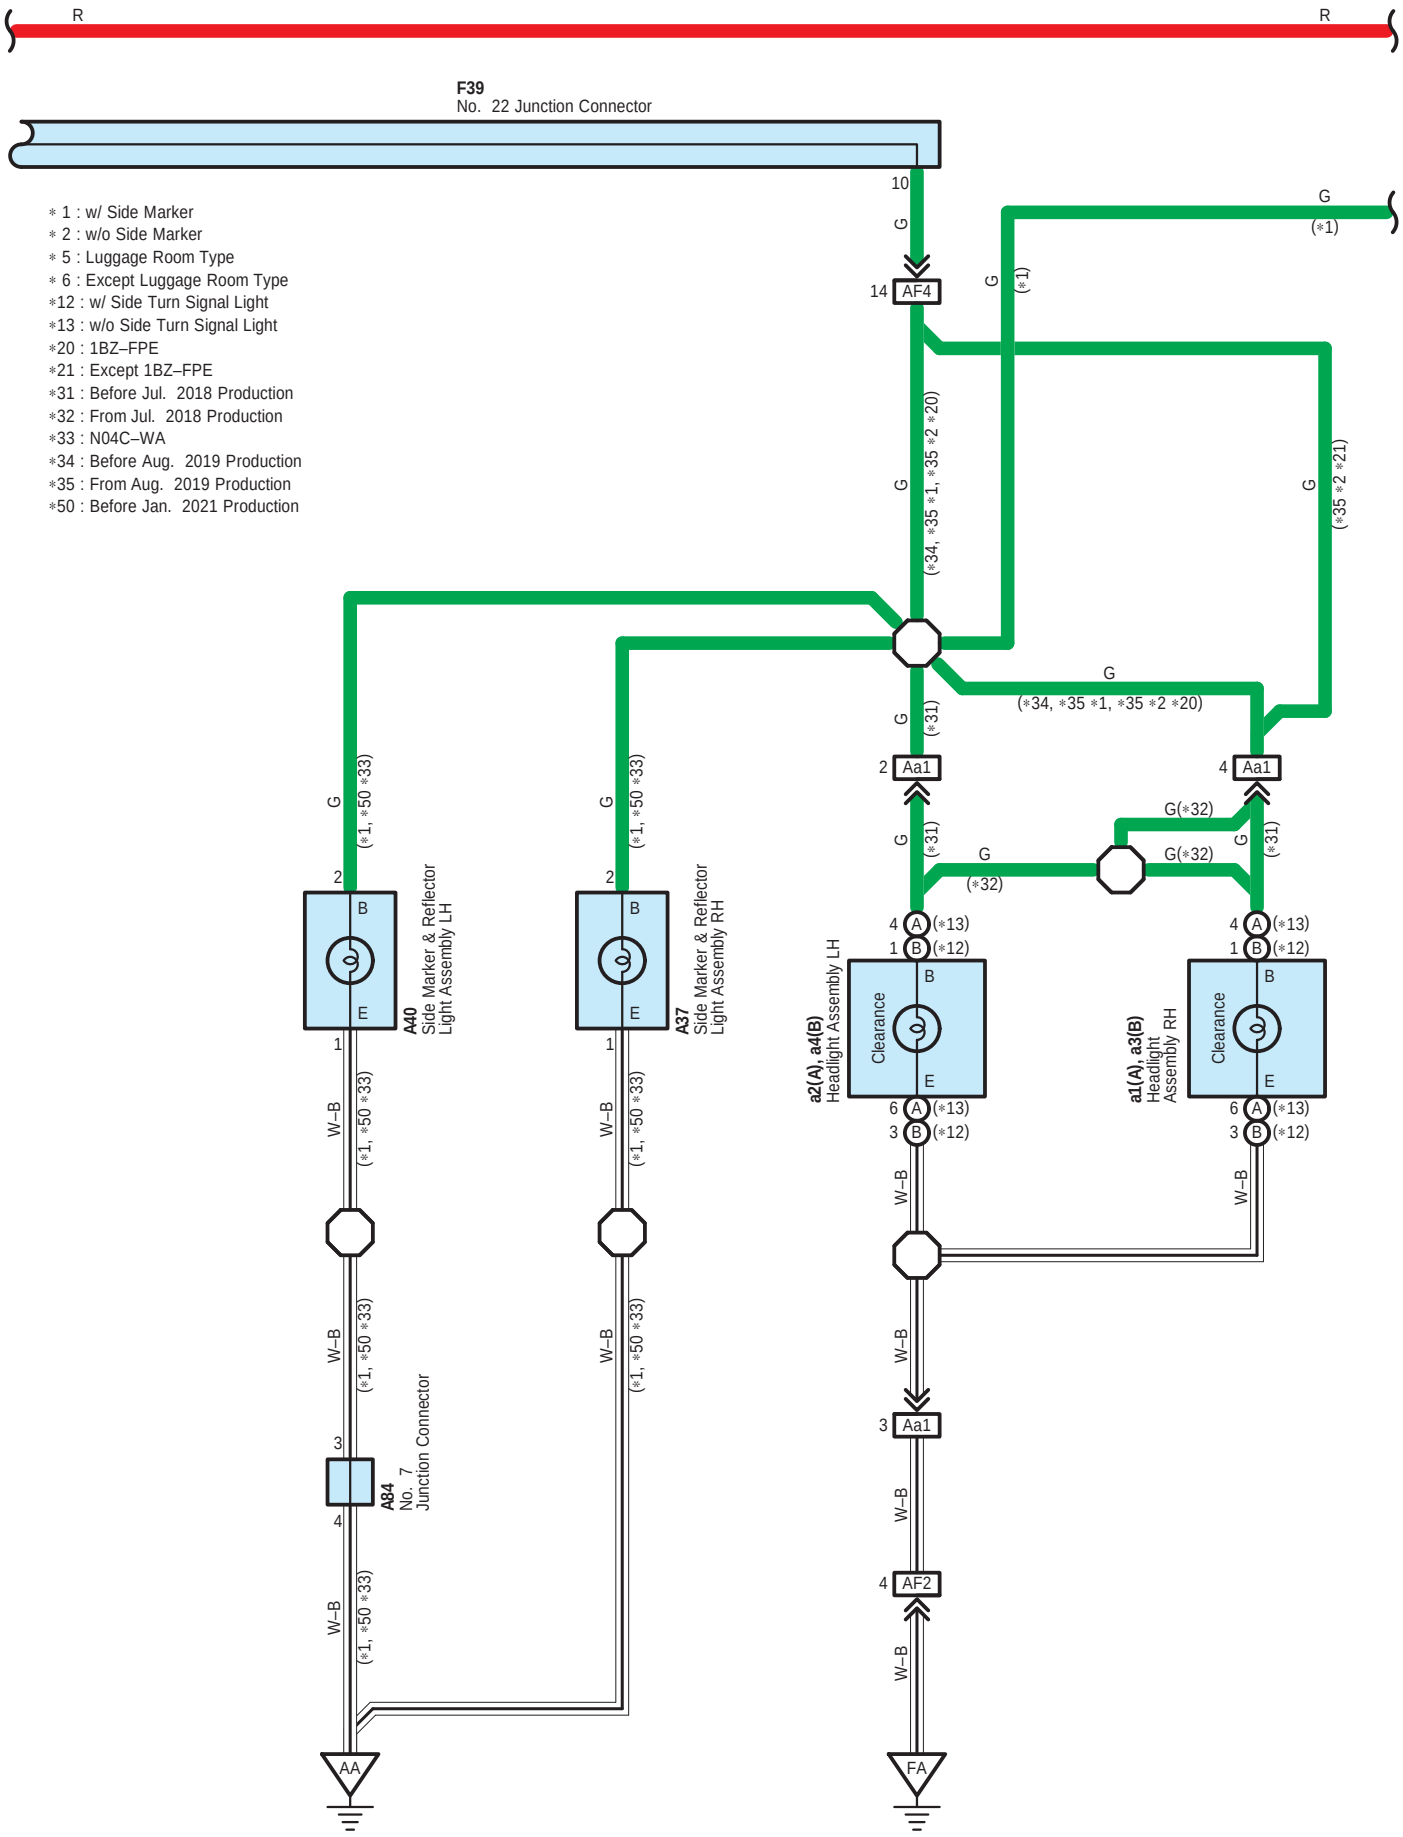
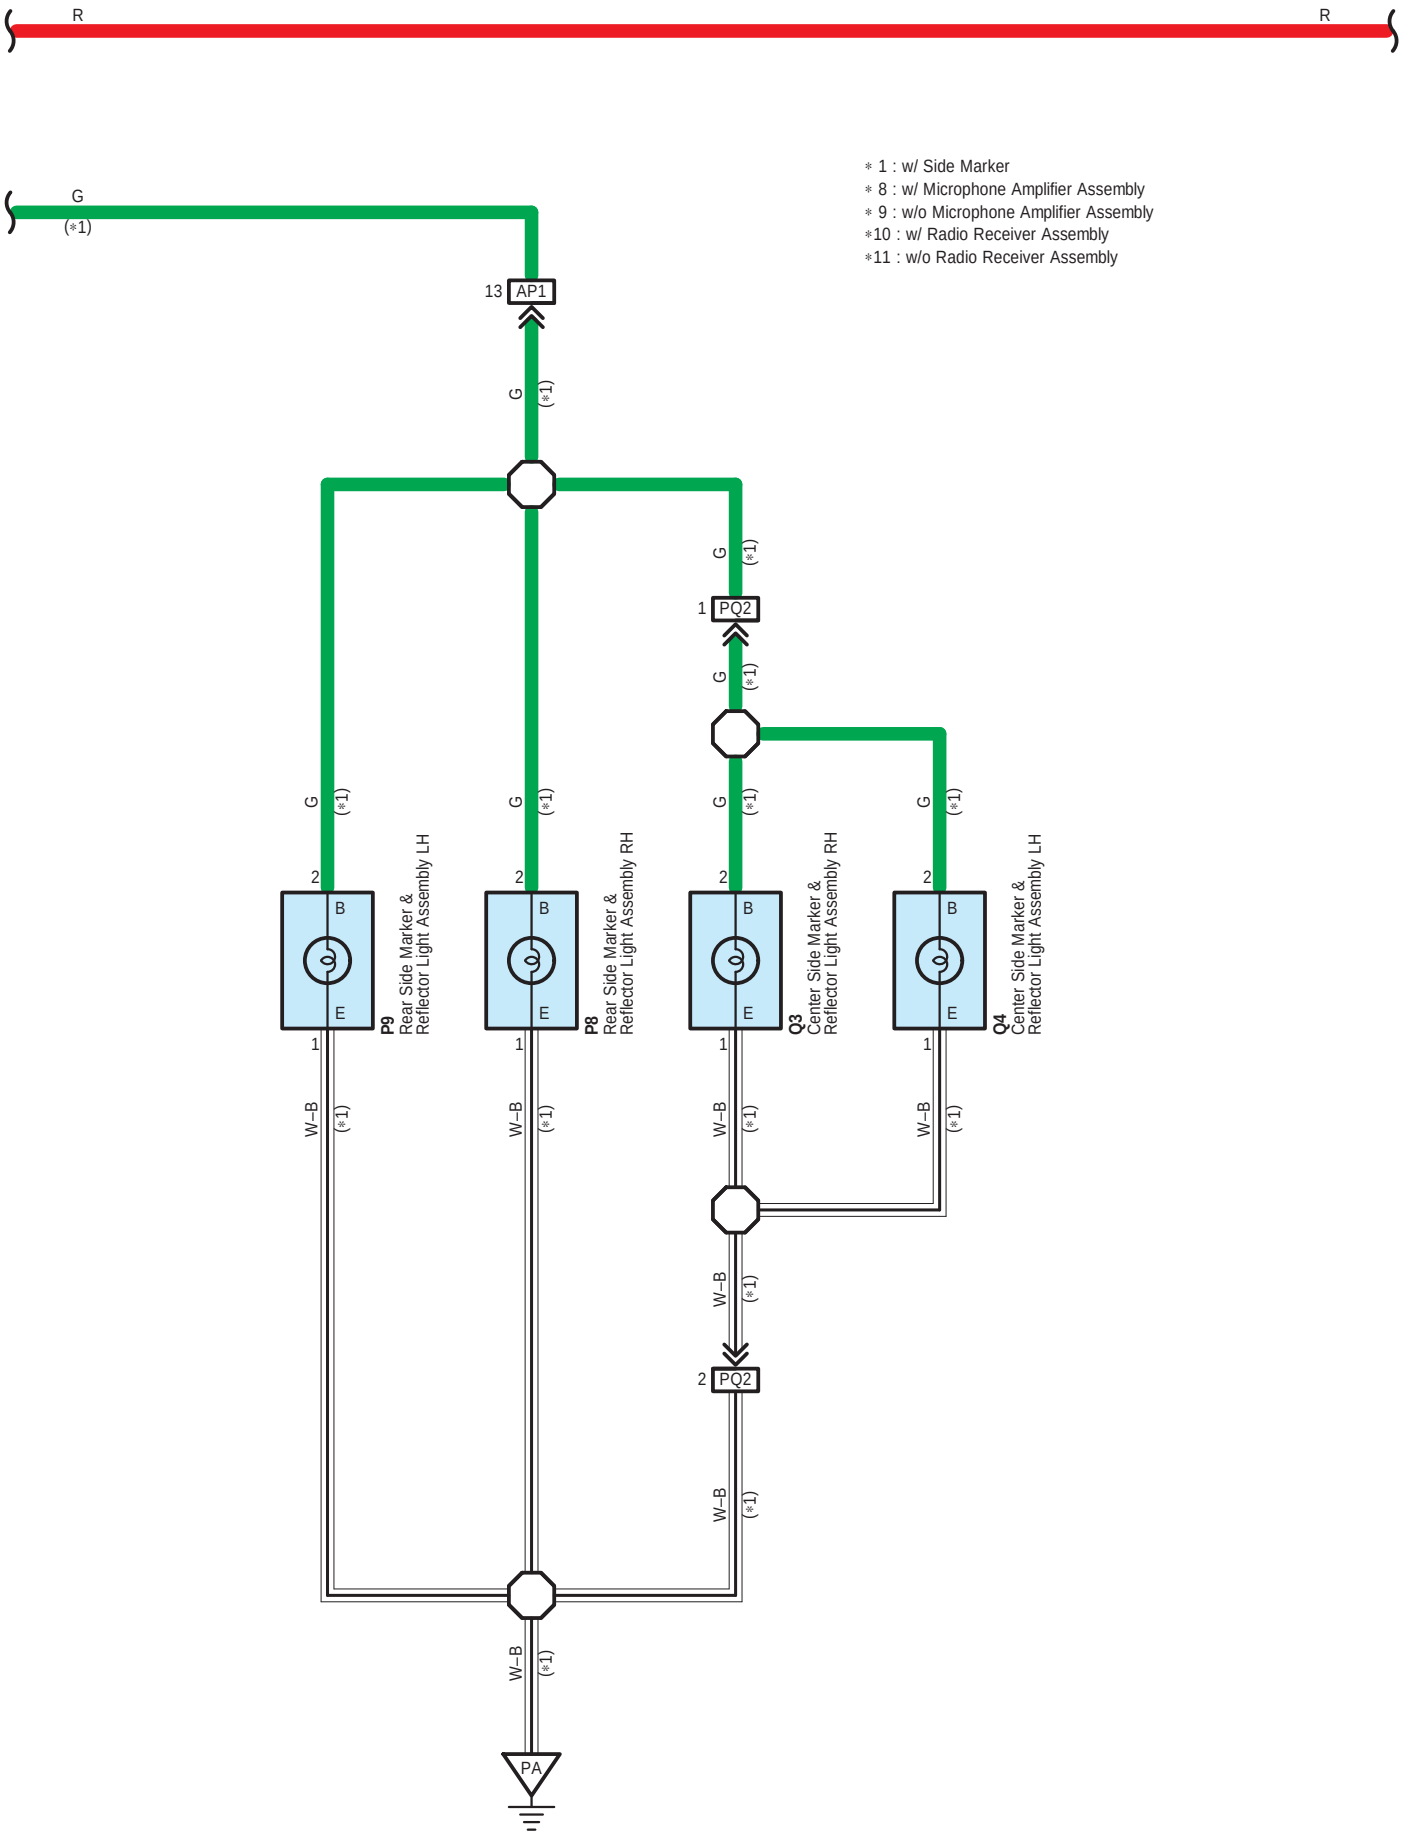
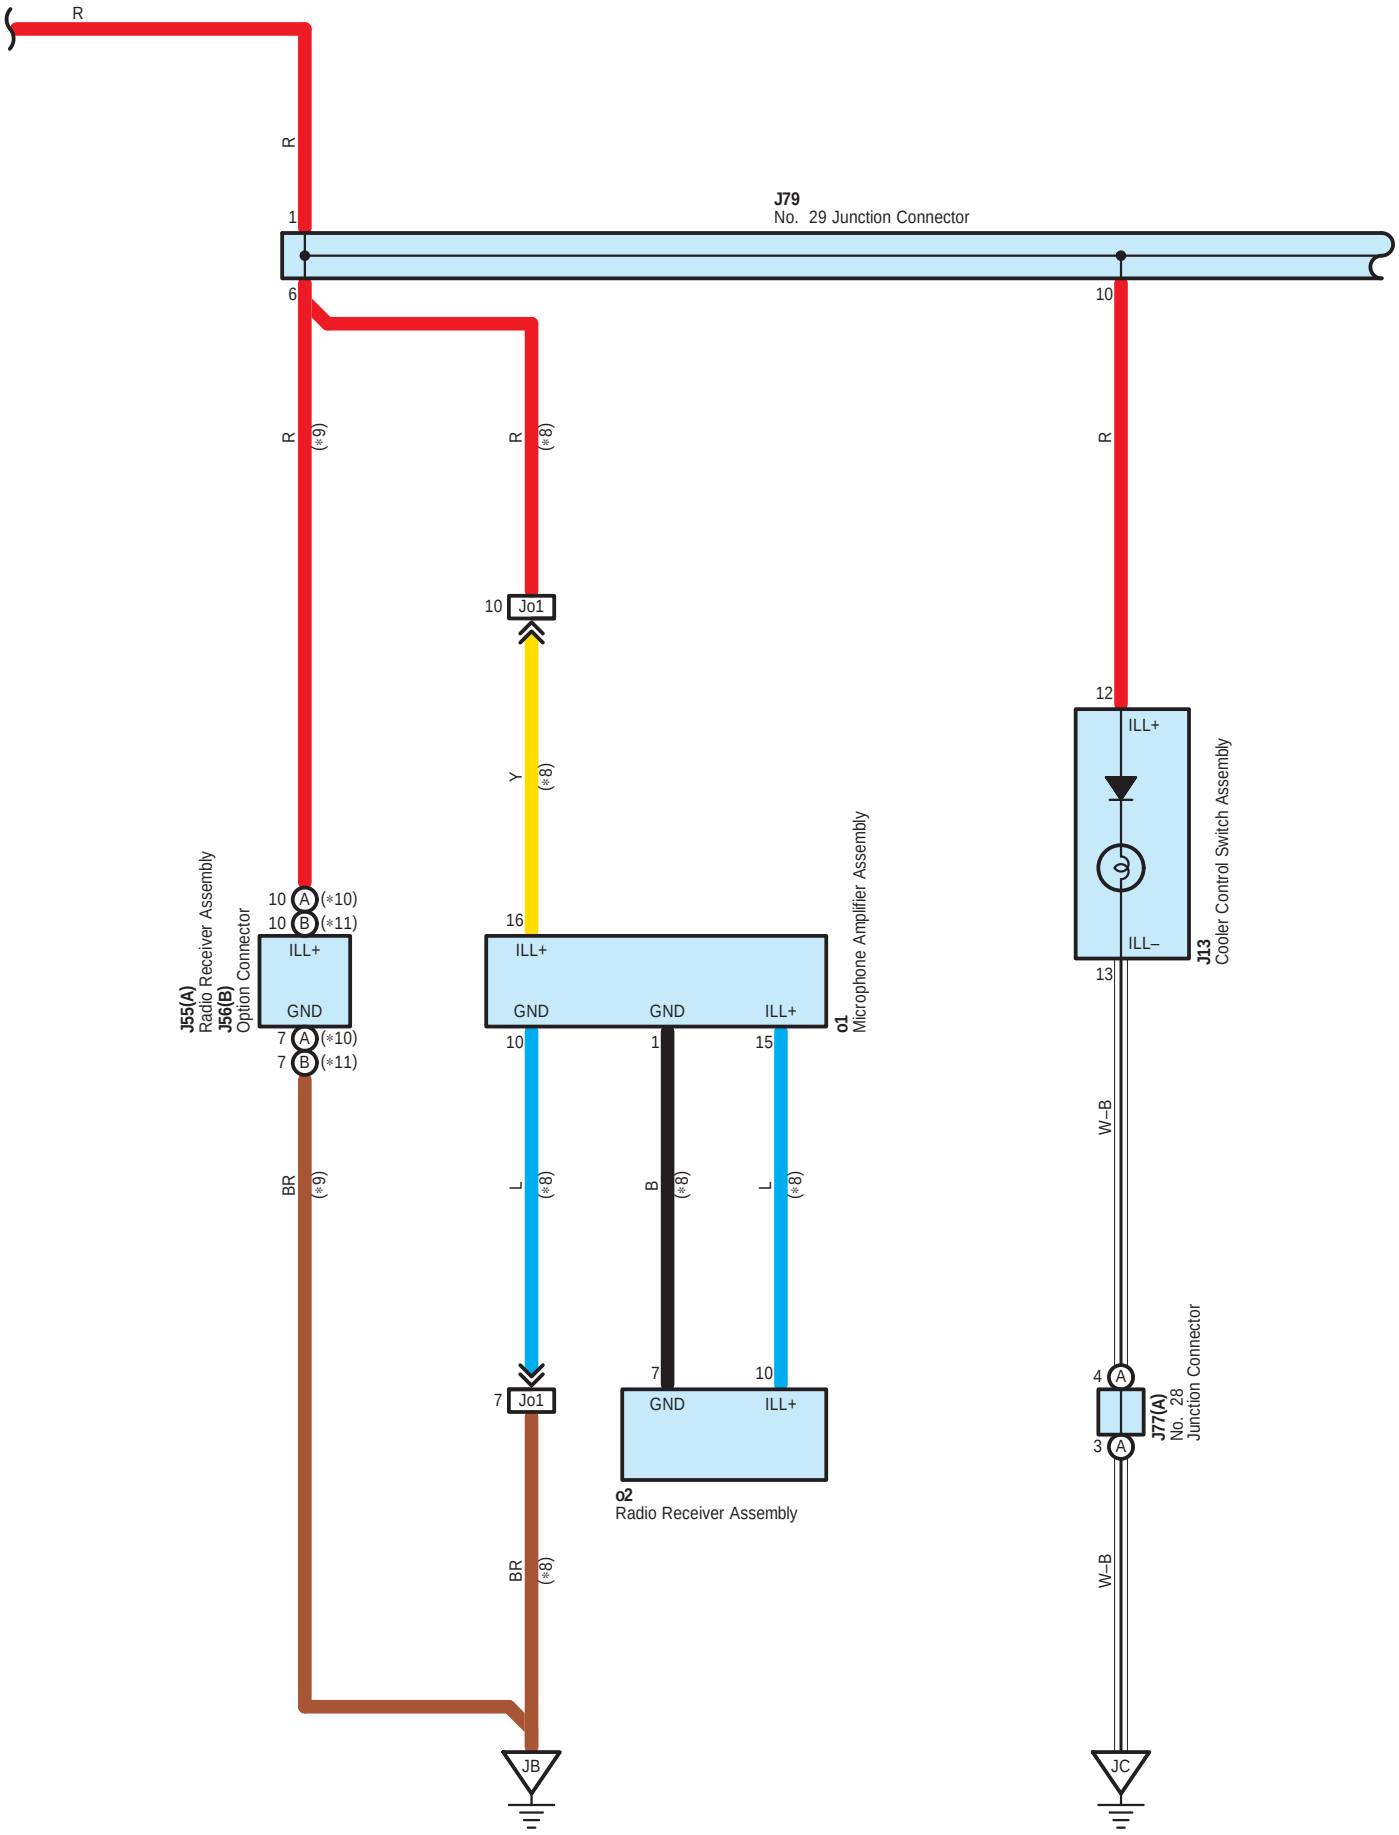
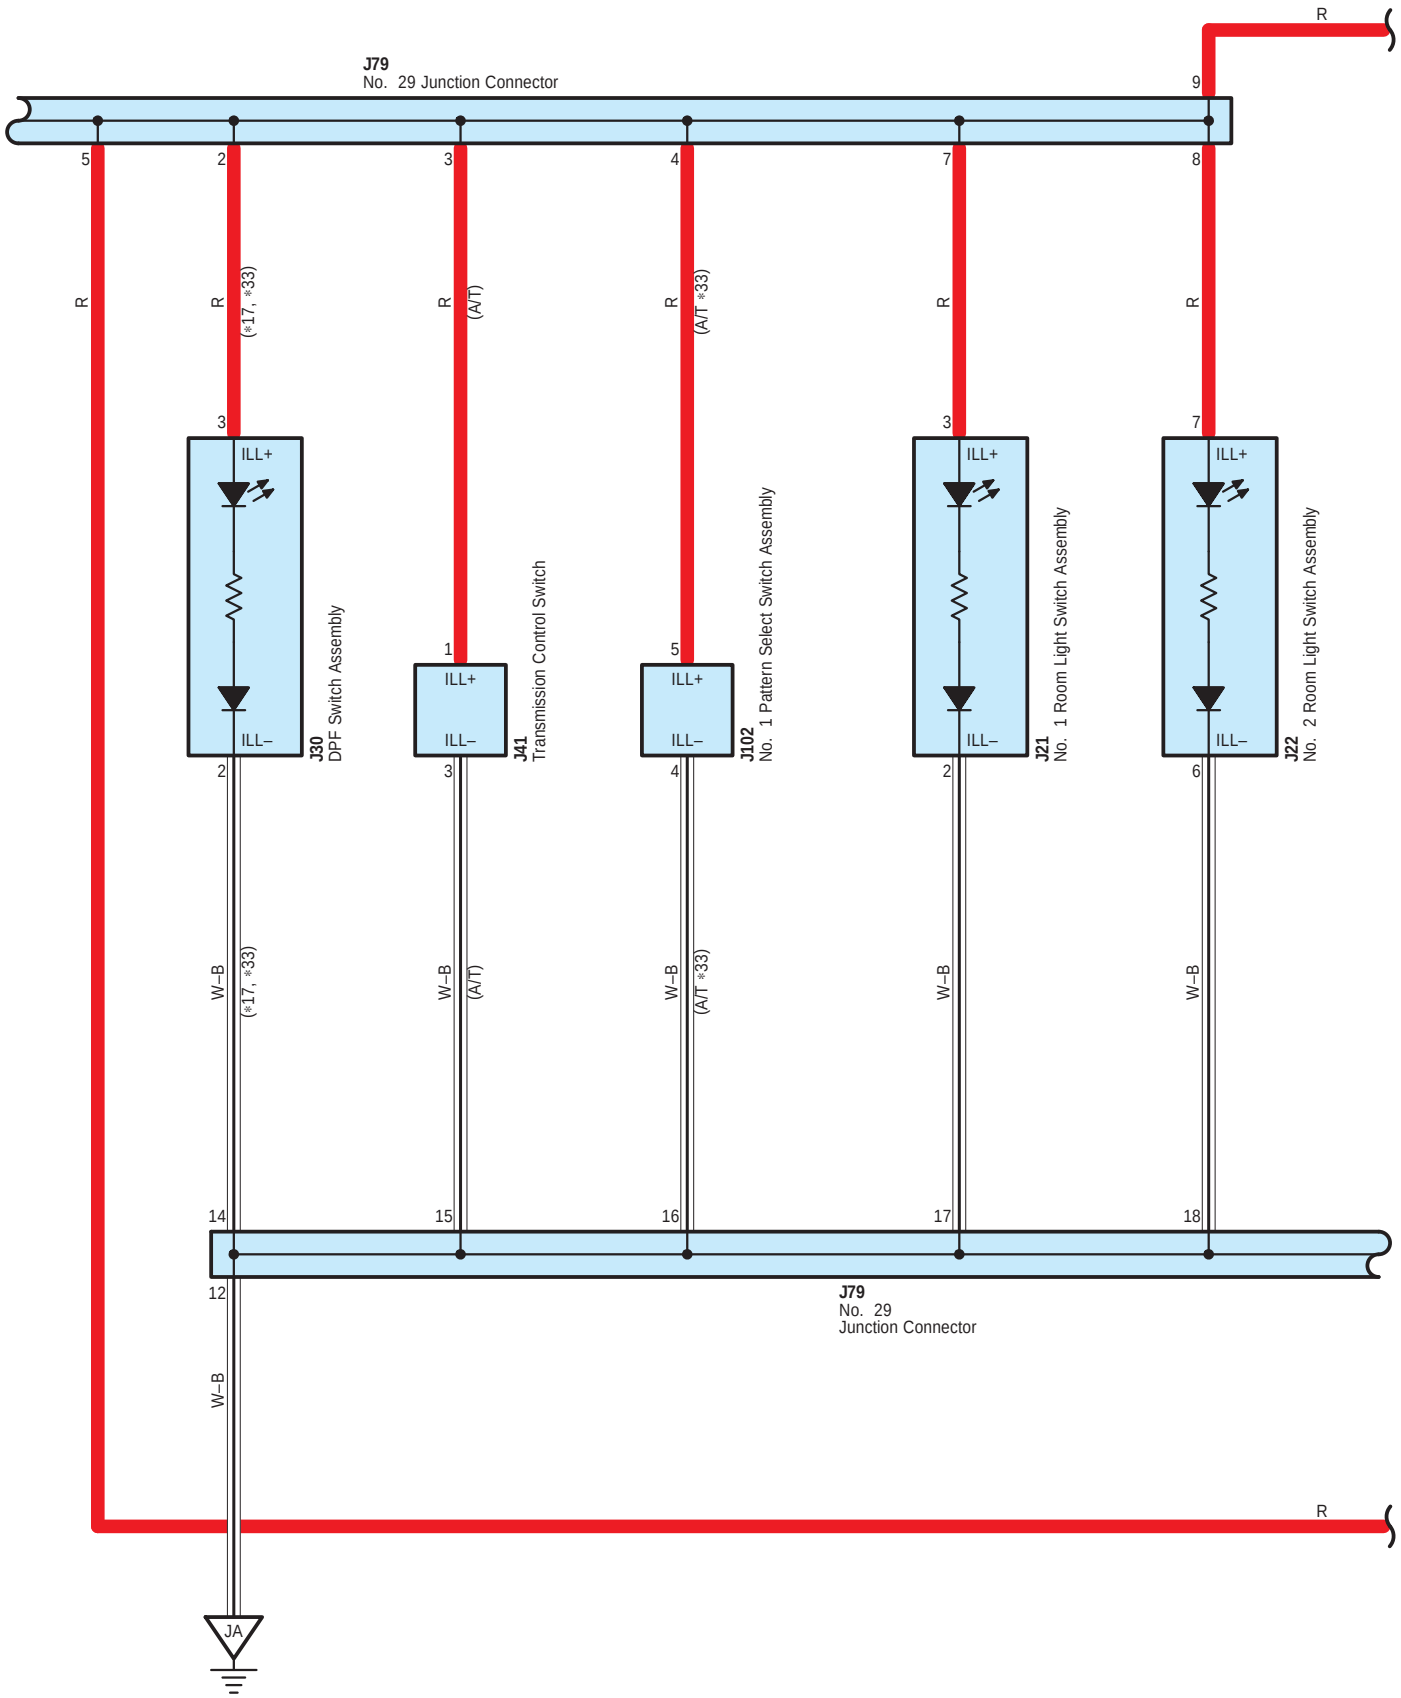
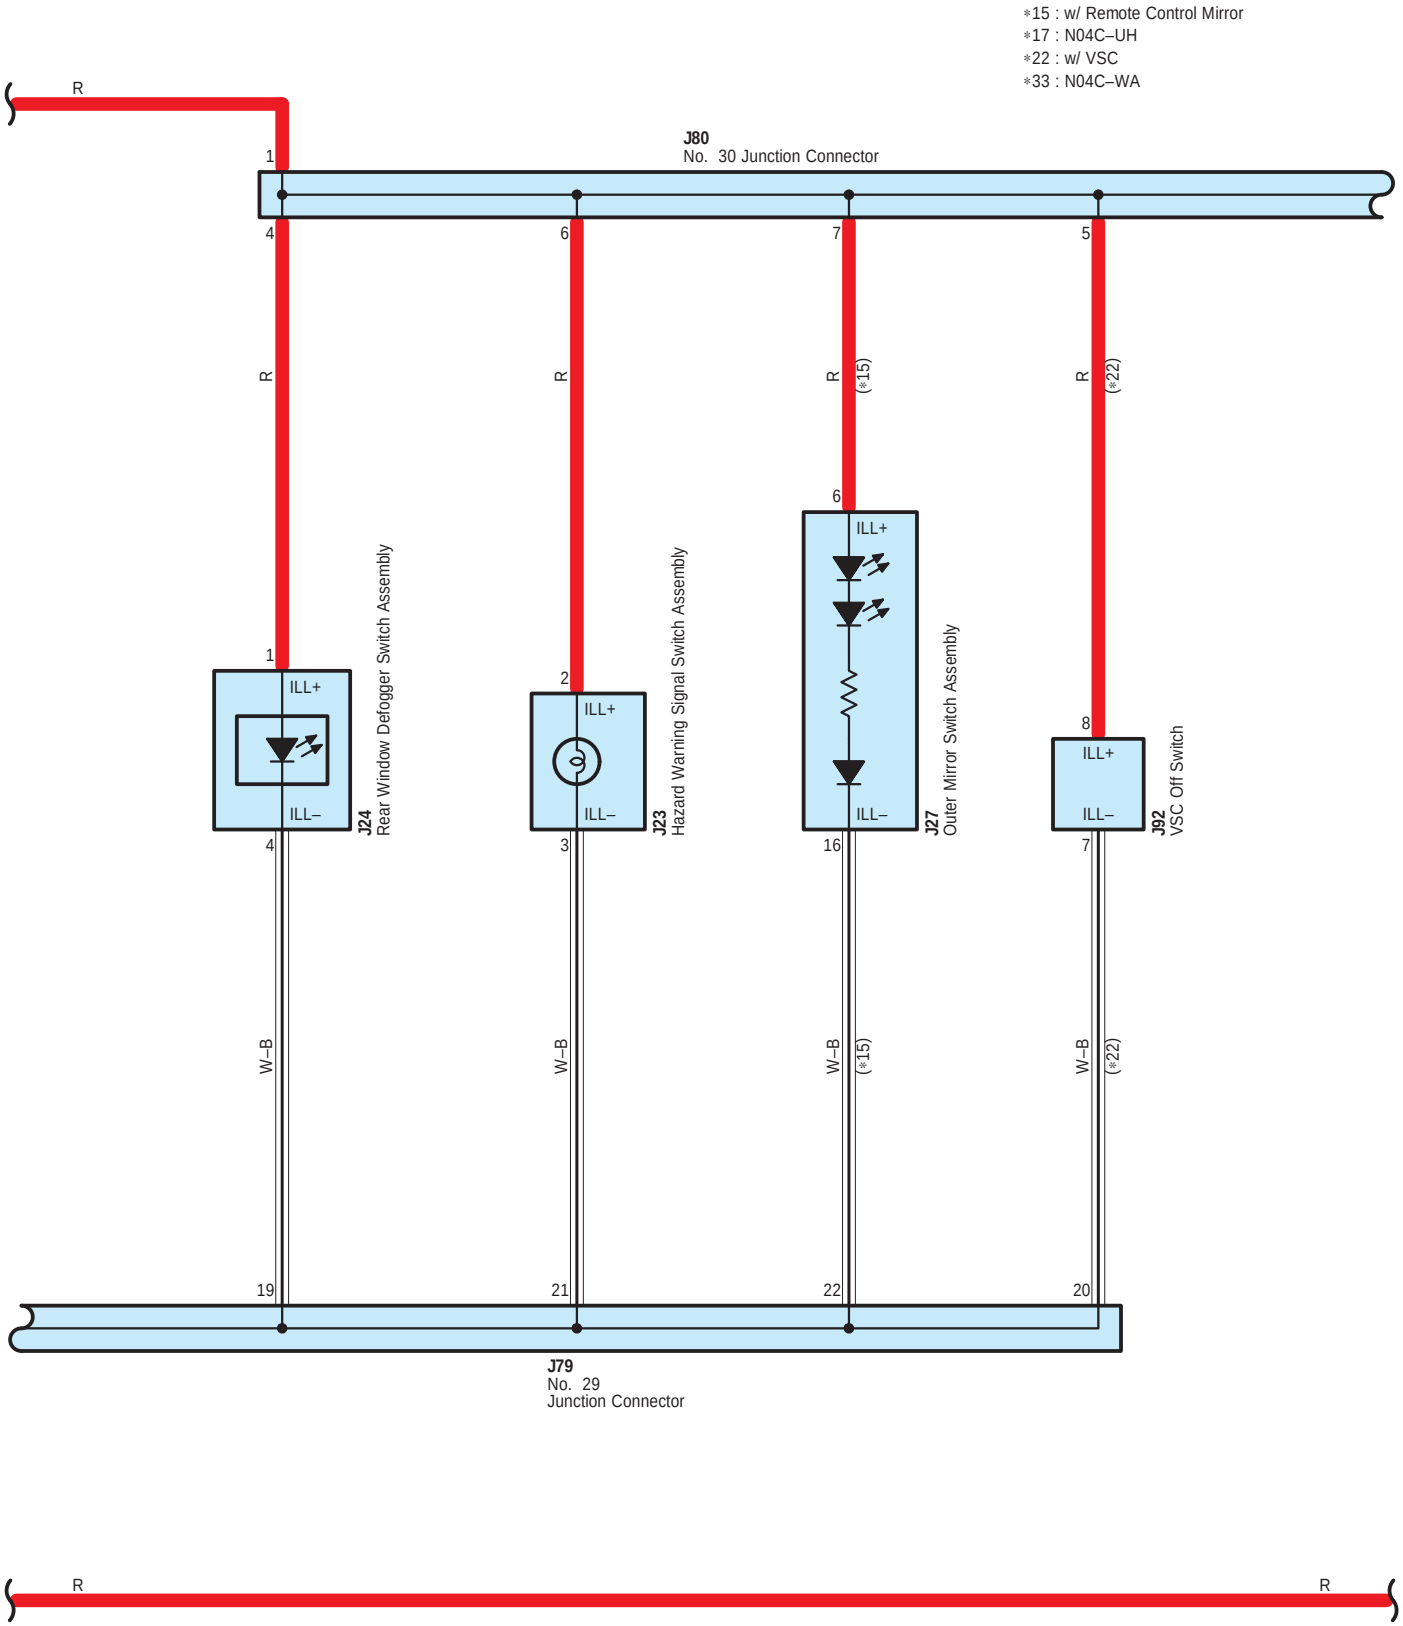

(BAT)
20A
ECU–B
NO. 5
TAIL Relay (*31)
TAIL NO. 2 Relay (*32)
7. 5A
PANEL (*31)
7. 5A
PANEL
NO. 2 (*32)
15A
TAIL (*31)
15A
TAIL
NO. 2 (*32)
F39
No. 22 Junction Connector
U16
No. 40 Junction Connector
JF3
FS1
US1
WU1 (*5)
WU2 (*31 *6)
WU3 (*32 *6)
J64
Headlight Dimmer Switch Assembly
Light Switch
OFF
T
H
EL
LT
W1
License Plate
Light Assembly
U11
Rear Combination Light Assembly LH
U10
Rear Combination Light Assembly RH
U14
No. 38
Junction Connector
Tail
TL
JB
WA
UA
UB



R
R
F39
No. 22 Junction Connector
∗ 1 : w/ Side Marker
∗ 2 : w/o Side Marker
∗ 5 : Luggage Room Type
∗ 6 : Except Luggage Room Type
∗12 : w/ Side Turn Signal Light
∗13 : w/o Side Turn Signal Light
∗20 : 1BZ–FPE
∗21 : Except 1BZ–FPE
∗31 : Before Jul. 2018 Production
∗32 : From Jul. 2018 Production
∗33 : N04C–WA
∗34 : Before Aug. 2019 Production
∗35 : From Aug. 2019 Production
∗50 : Before Jan. 2021 Production
10
G
14 AF4
G
(∗1)
G
(∗34, ∗35 ∗1, ∗35 ∗2 ∗20)
G
(∗35 ∗2 ∗21)
G
(∗34, ∗35 ∗1, ∗35 ∗2 ∗20)
G
(∗31)
2 Aa1
4 Aa1
G(∗32)
G
(∗32)
G(∗32)
G
(∗31)
G
(∗31)
G
(∗1, ∗50 ∗33)
G
(∗1, ∗50 ∗33)
2
B
E
1
A40
Side Marker & Reflector Light Assembly LH
2
B
E
1
A37
Side Marker & Reflector Light Assembly RH
W–B
(∗1, ∗50 ∗33)
W–B
(∗1, ∗50 ∗33)
W–B
(∗1, ∗50 ∗33)
W–B
(∗1, ∗50 ∗33)
3
4
A84
No. 7 Junction Connector
W–B
(∗1, ∗50 ∗33)
AA
4 A (∗13)
1 B (∗12)
a2(A), a4(B)
Headlight Assembly LH
Clearance
B
E
6 A (∗13)
3 B (∗12)
4 A (∗13)
1 B (∗12)
a1(A), a3(B)
Headlight Assembly RH
Clearance
B
E
6 A (∗13)
3 B (∗12)
W–B
W–B
W–B
3 Aa1
W–B
4 AF2
W–B
FA



R
R
∗ 1 : w/ Side Marker
∗ 8 : w/ Microphone Amplifier Assembly
∗ 9 : w/o Microphone Amplifier Assembly
∗10 : w/ Radio Receiver Assembly
∗11 : w/o Radio Receiver Assembly
G
(∗1)
13 AP1
G (∗1)
1 PQ2
G (∗1)
G (∗1)
G (∗1)
G (∗1)
G (∗1)
2 B E 1
P9 Rear Side Marker & Reflector Light Assembly LH
2 B E 1
P8 Rear Side Marker & Reflector Light Assembly RH
2 B E 1
Q3 Center Side Marker & Reflector Light Assembly RH
2 B E 1
Q4 Center Side Marker & Reflector Light Assembly LH
W–B (∗1)
W–B (∗1)
W–B (∗1)
W–B (∗1)
W–B (∗1)
2 PQ2
W–B (∗1)
W–B (∗1)
PA


R
R
1
J79
No. 29 Junction Connector
6
10
R (*9)
R (*8)
R
10 Jo1
Y (*8)
12
ILL+
ILL–
J13
Cooler Control Switch Assembly
13
J55(A)
Radio Receiver Assembly
J56(B)
Option Connector
10 A (*10)
10 B (*11)
ILL+
GND
7 A (*10)
7 B (*11)
BR (*9)
16
ILL+
GND
GND
ILL+
o1
Microphone Amplifier Assembly
10
1
15
L (*8)
B (*8)
L (*8)
7 Jo1
7
10
GND
ILL+
o2
Radio Receiver Assembly
BR (*8)
W–B
4 A
3 A
J77(A)
No. 28
Junction Connector
W–B
JB
JC



J79
No. 29 Junction Connector
R
5
2
3
4
7
8
9
R
R (*17, *33)
R (A/T)
R (A/T *33)
R
R
3
ILL+
ILL–
J30
DPF Switch Assembly
1
ILL+
ILL–
J41
Transmission Control Switch
5
ILL+
ILL–
J102
No. 1 Pattern Select Switch Assembly
3
ILL+
ILL–
J21
No. 1 Room Light Switch Assembly
7
ILL+
ILL–
J22
No. 2 Room Light Switch Assembly
2
3
4
2
6
W–B (*17, *33)
W–B (A/T)
W–B (A/T *33)
W–B
W–B
14
15
16
17
18
J79
No. 29
Junction Connector
12
W–B
R
JA


∗15 : w/ Remote Control Mirror
∗17 : N04C–UH
∗22 : w/ VSC
∗33 : N04C–WA
R
J80
No. 30 Junction Connector
1
4
6
7
5
R
R
R (∗15)
R (∗22)
6
ILL+
ILL–
1
ILL+
ILL–
J24
Rear Window Defogger Switch Assembly
2
ILL+
ILL–
J23
Hazard Warning Signal Switch Assembly
J27
Outer Mirror Switch Assembly
8
ILL+
ILL–
J92
VSC Off Switch
4
3
16
7
W–B
W–B
W–B (∗15)
W–B (∗22)
19
21
22
20
J79
No. 29
Junction Connector
R
R

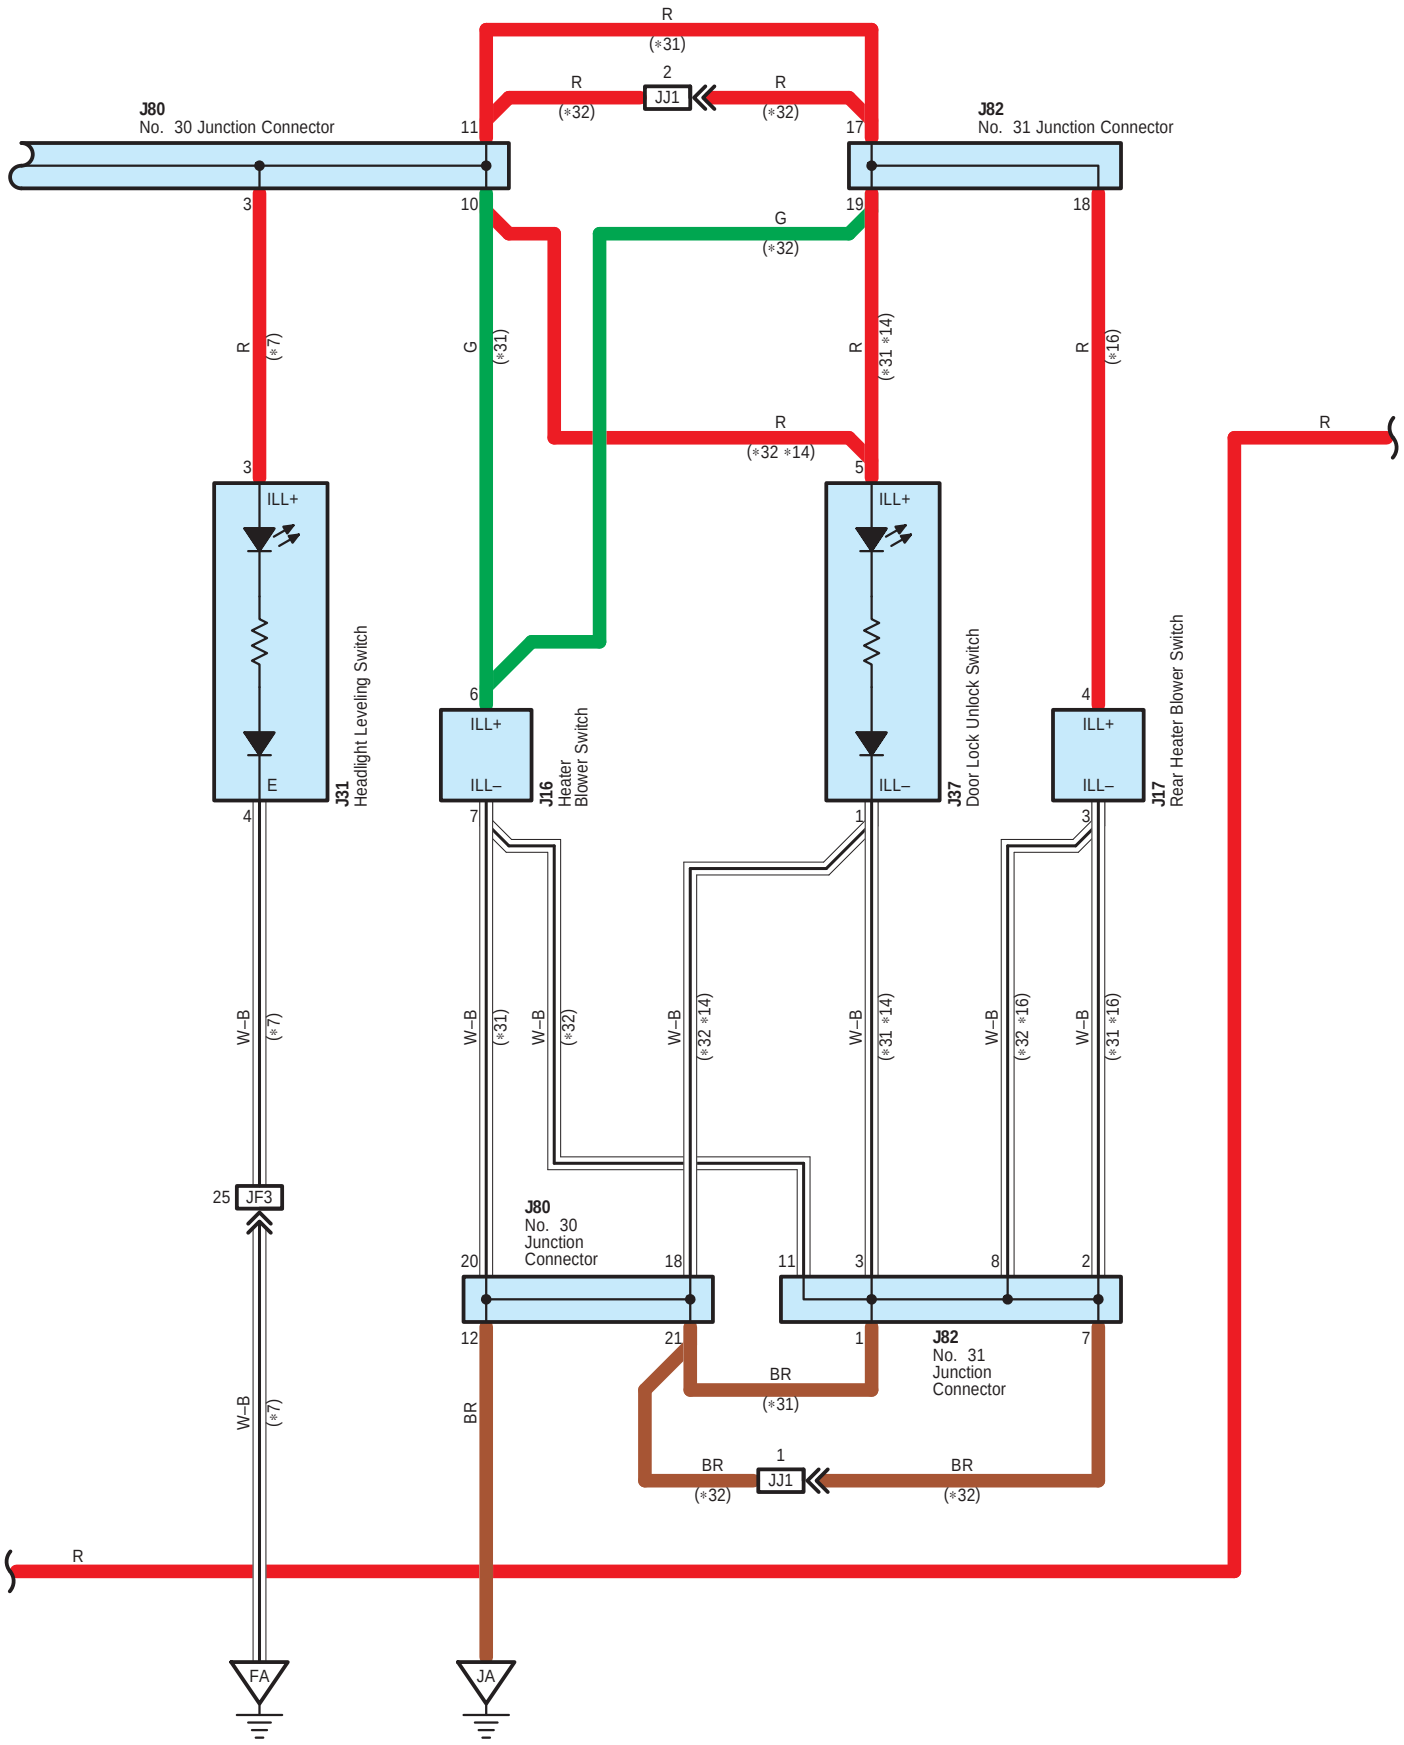

J80
No. 30 Junction Connector
J82
No. 31 Junction Connector
JJ1
R (*31)
R (*32)
G (*32)
R (*32 *14)
R (*7)
G (*31)
R (*31 *14)
R (*16)
ILL+
ILL–
E
J31
Headlight Leveling Switch
J16
Heater Blower Switch
J37
Door Lock Unlock Switch
J17
Rear Heater Blower Switch
W–B (*7)
W–B (*31)
W–B (*32)
W–B (*32 *14)
W–B (*31 *14)
W–B (*32 *16)
W–B (*31 *16)
JF3
BR (*31)
BR (*32)
FA
JA

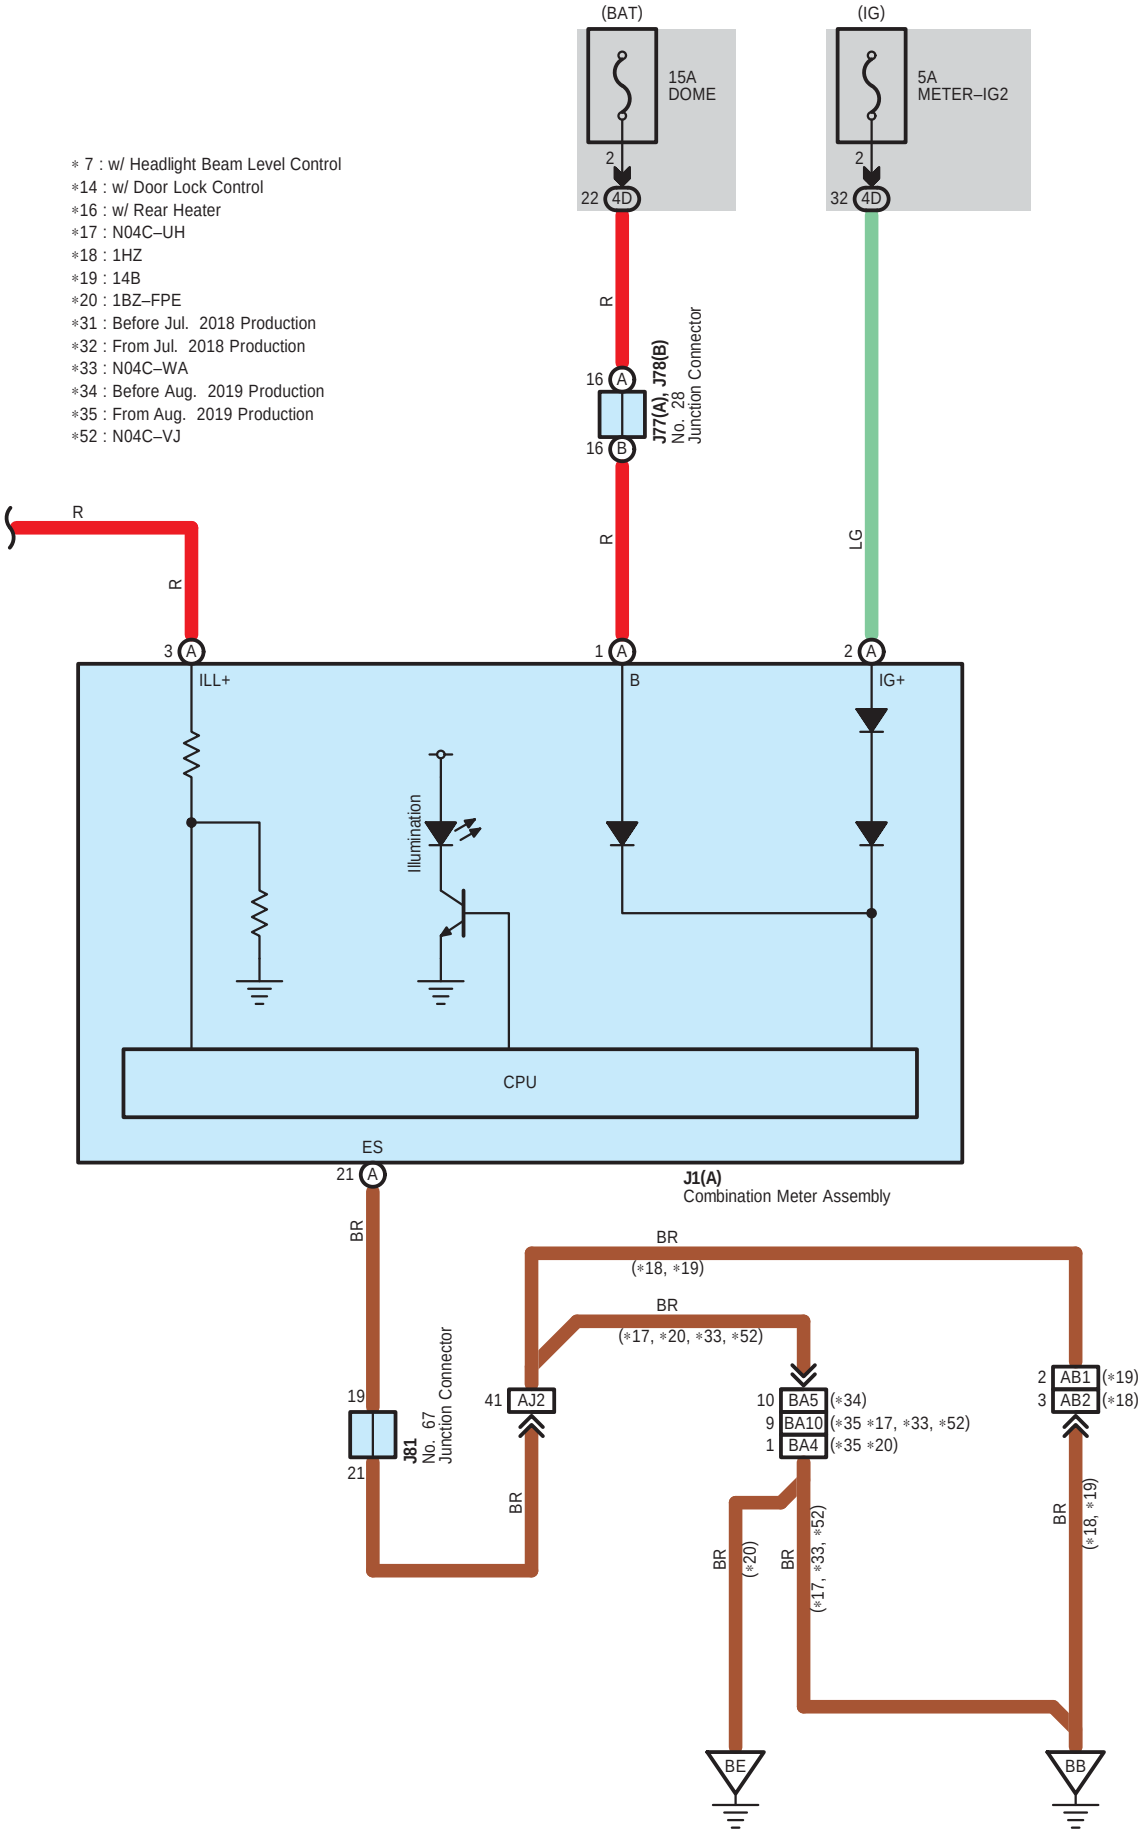
(BAT)
(IG)
15A
DOME
5A
METER–IG2
2
22 4D
2
32 4D
∗ 7 : w/ Headlight Beam Level Control
∗14 : w/ Door Lock Control
∗16 : w/ Rear Heater
∗17 : N04C–UH
∗18 : 1HZ
∗19 : 14B
∗20 : 1BZ–FPE
∗31 : Before Jul. 2018 Production
∗32 : From Jul. 2018 Production
∗33 : N04C–WA
∗34 : Before Aug. 2019 Production
∗35 : From Aug. 2019 Production
∗52 : N04C–VJ
R
16 A
16 B
J77(A), J78(B)
No. 28
Junction Connector
R
LG
R
R
3 A
1 A
2 A
ILL+
B
IG+
Illumination
CPU
ES
21 A
J1(A)
Combination Meter Assembly
BR
BR
(∗18, ∗19)
BR
(∗17, ∗20, ∗33, ∗52)
19
21
J81
No. 67
Junction Connector
41 AJ2
10 BA5 (∗34)
9 BA10 (∗35 ∗17, ∗33, ∗52)
1 BA4 (∗35 ∗20)
2 AB1 (∗19)
3 AB2 (∗18)
BR
BR
(∗20)
BR
(∗17, ∗33, ∗52)
BR
(∗18, ∗19)
BE
BB


A 37
Gray

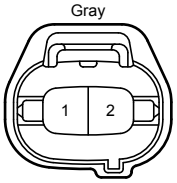


A 40
Gray

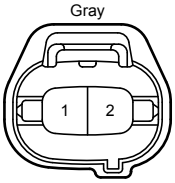


A 84
Gray

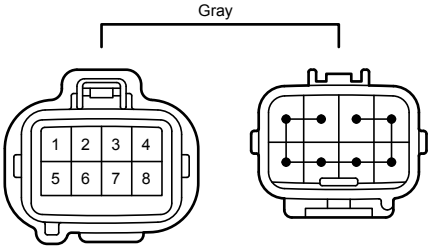


F 39
Black

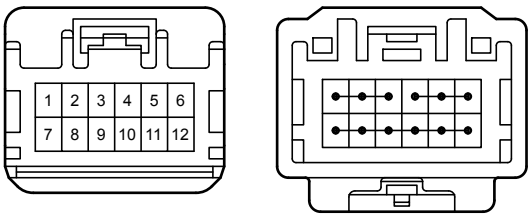


J 1
White

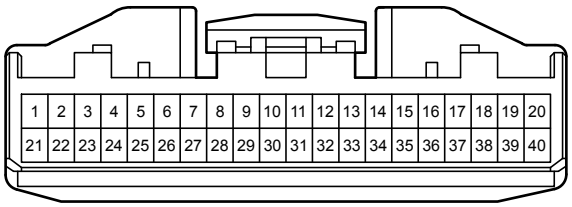


J 13
Gray

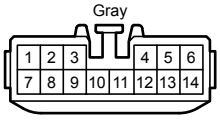


J 16
White

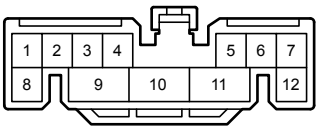


J 17
Black

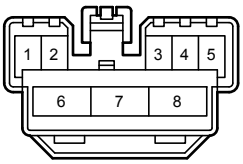


J 21
Gray

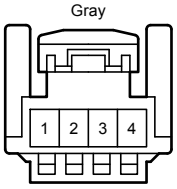


J 22
Black

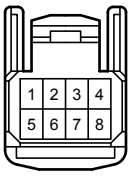


J 23
Black

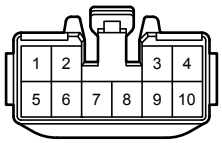


J 24
Black

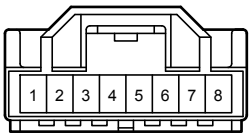


J 27
White

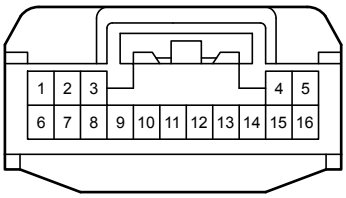


J 30
Gray

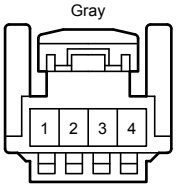


J 31
Black




J 37
Gray

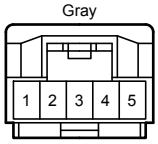


J 41
Blue




J 55
White

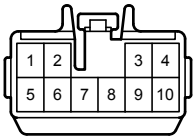


J 56
White

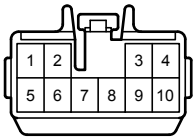


J 64
Black

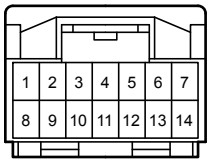


J 77
Black

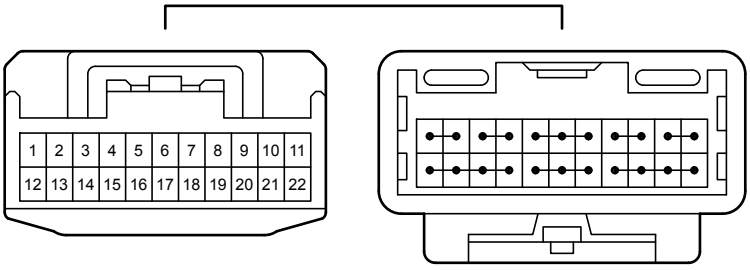


J 78
Black

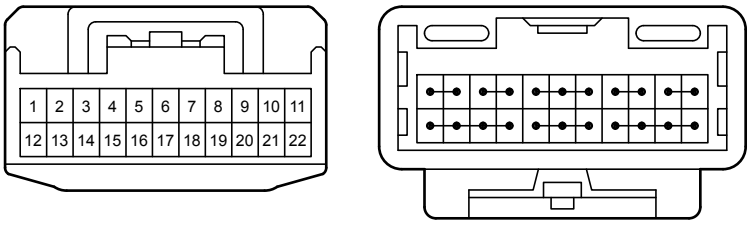


J 79
Gray

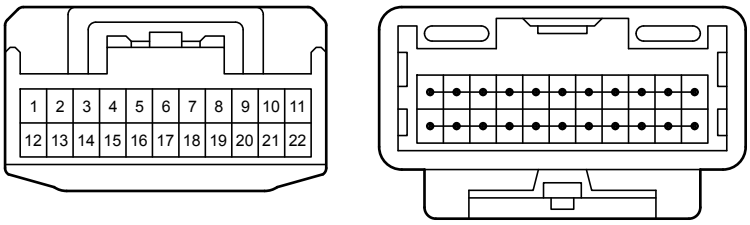


J 80
Gray

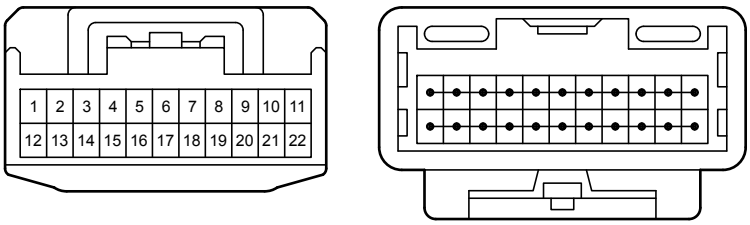


J 81
Blue

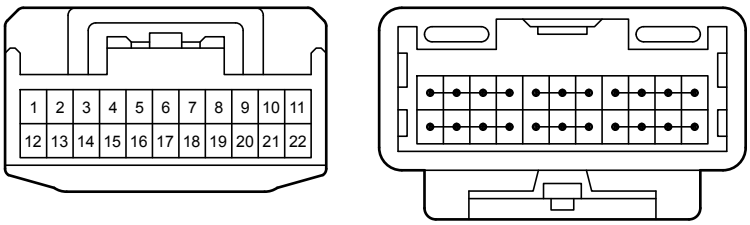


J 82
White

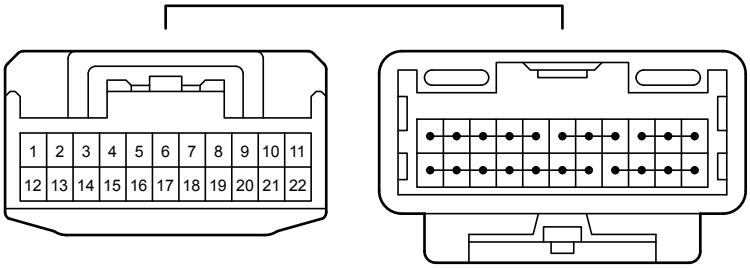


J 92
Black

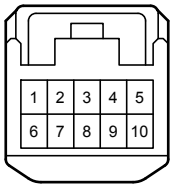


J102
Black

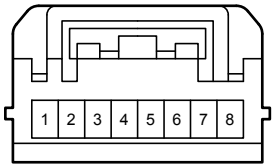


P 8
Gray

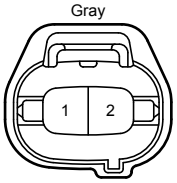


P 9
Gray

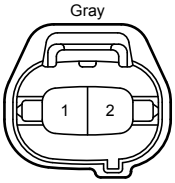


Q 3
Gray

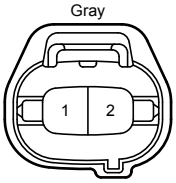

Q 4
Gray

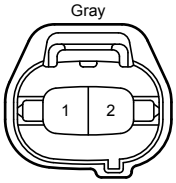


U 10
Gray

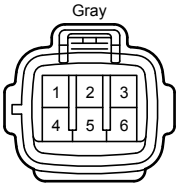


U 11
Gray



U 14
Gray

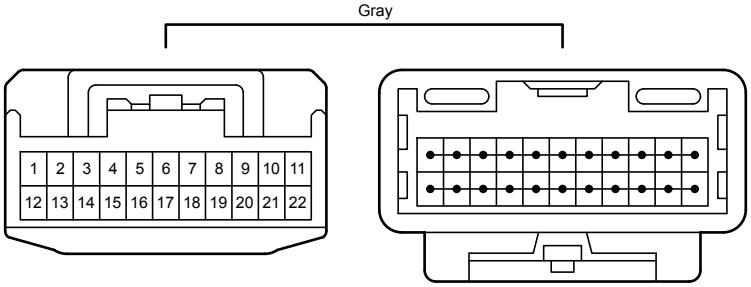

U 16
Blue

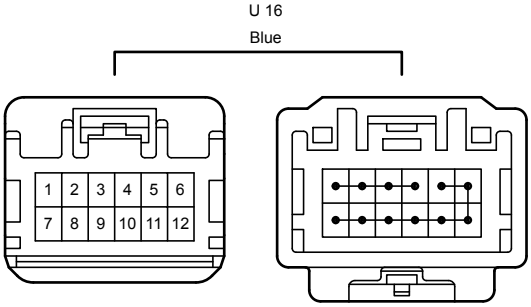

W 1
White



a 1
Gray



a 2
Gray




a 3
Gray




a 4
Gray




o 1
White

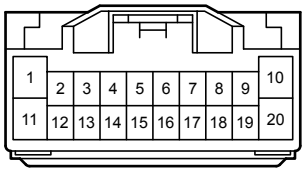


o 2
White

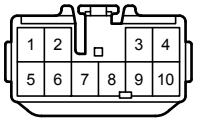


4D
White

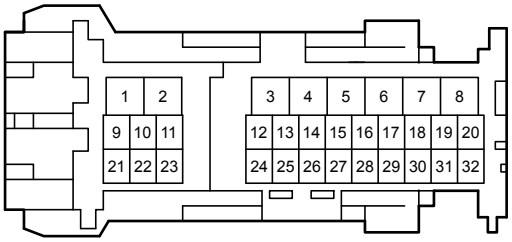


AB1
Black

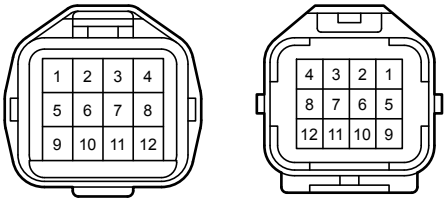


AB2
Gray

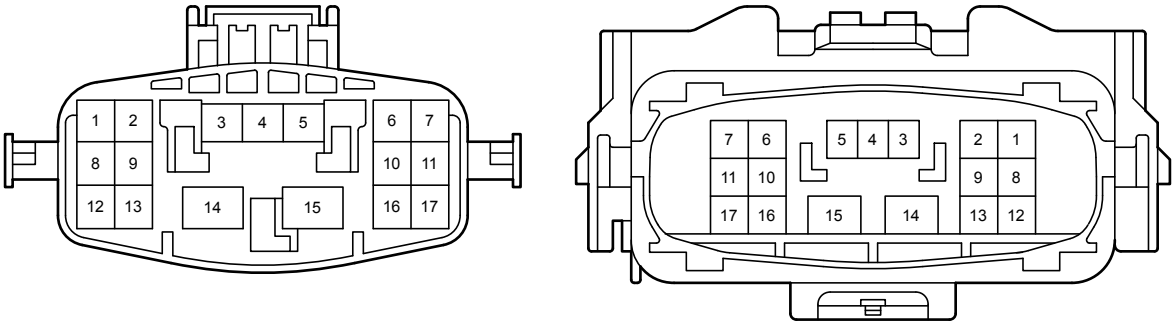


AF2
White

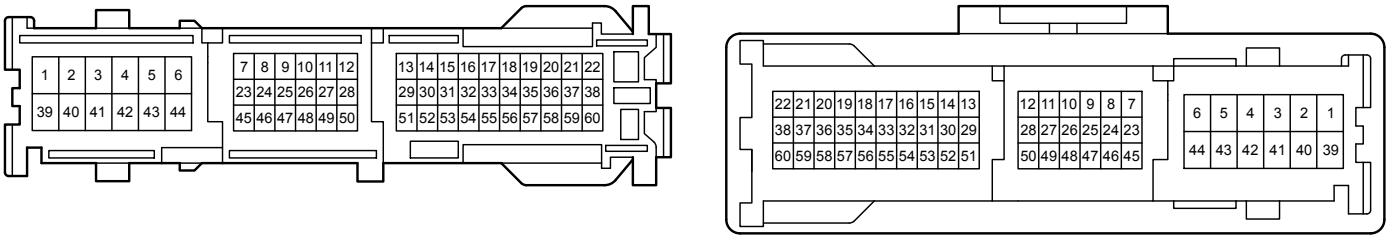


AF4
White

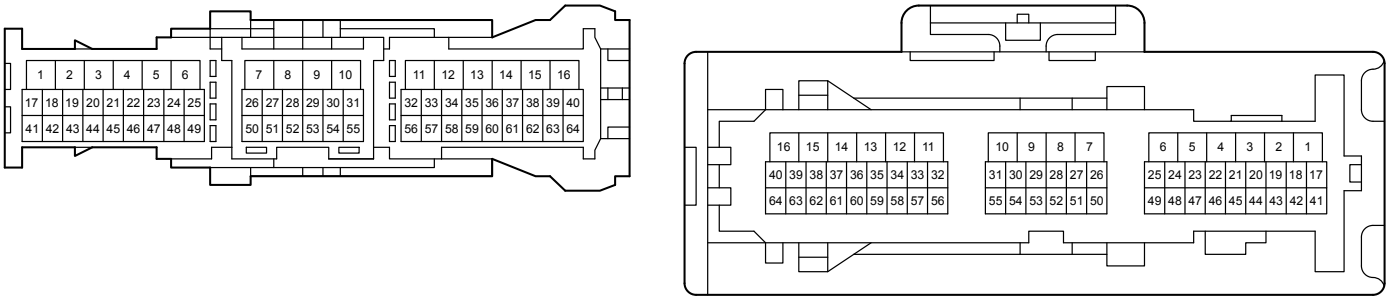


AJ2
White

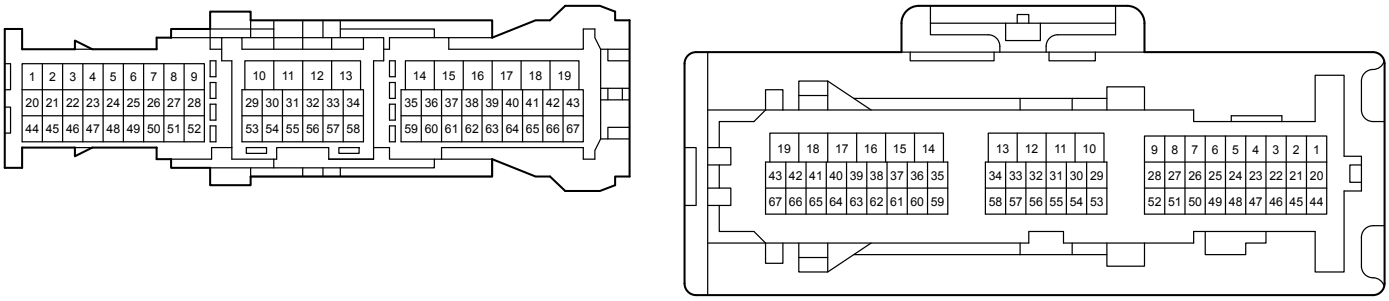


AP1
Black

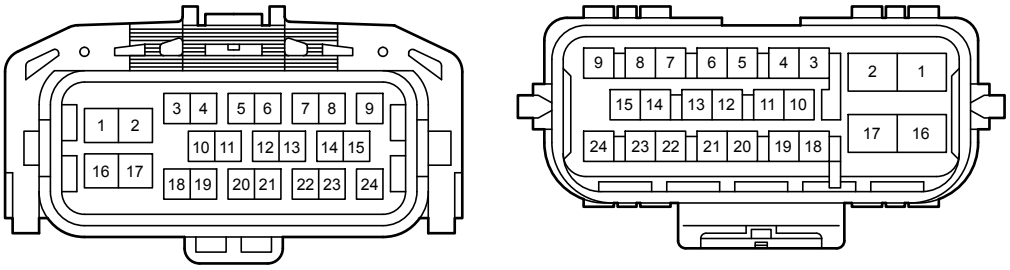


Aa1
Black

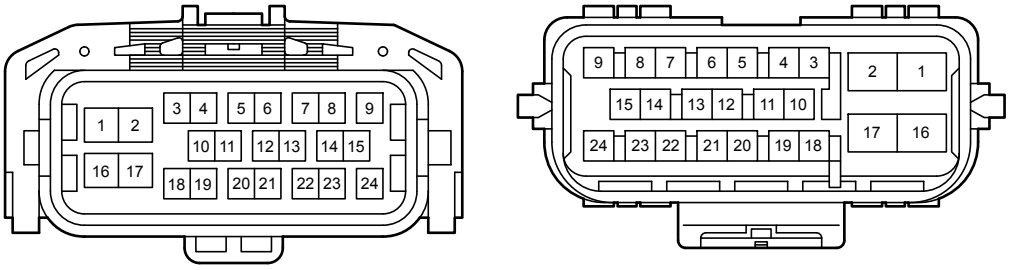


BA4
White

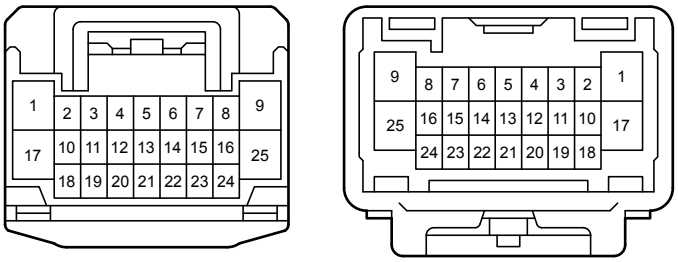


BA5
White

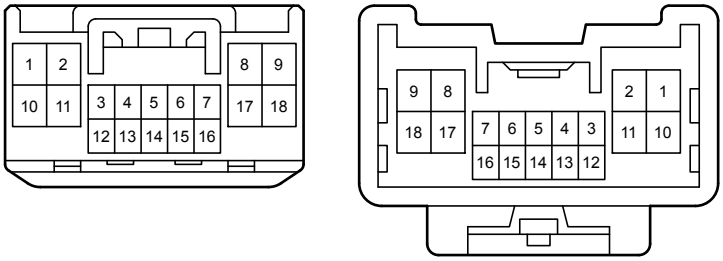


BA10
White

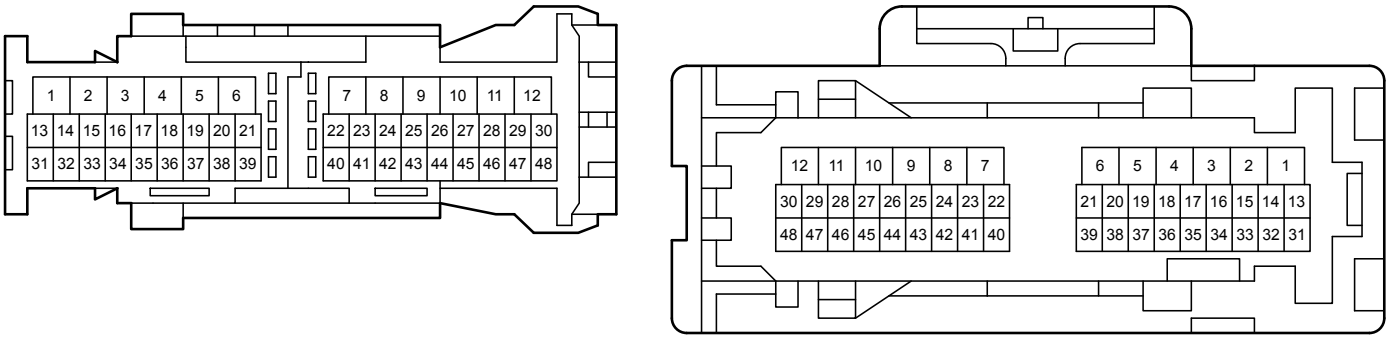


FS1
Blue

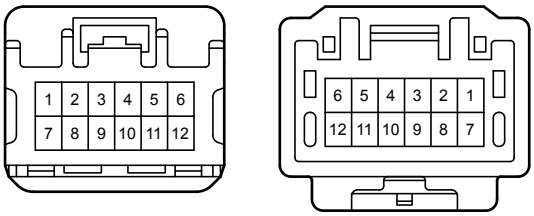


JF3
White

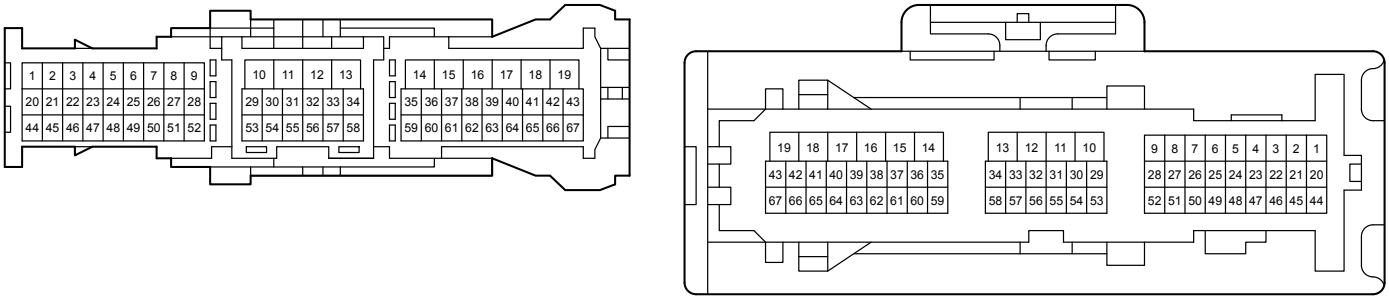


JJ1
White

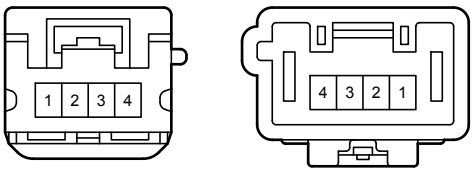


Jo1
White

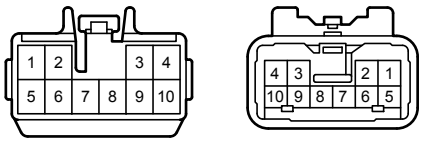


PQ2
White

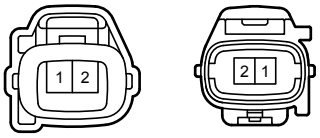


US1
White

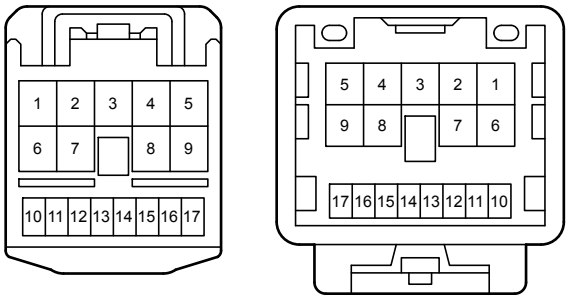

WU1
Gray

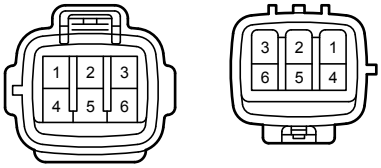

WU2
White

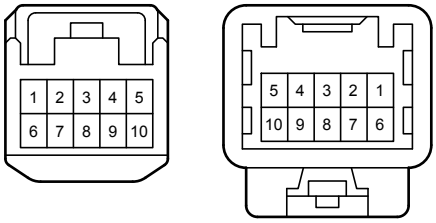

WU3
White

