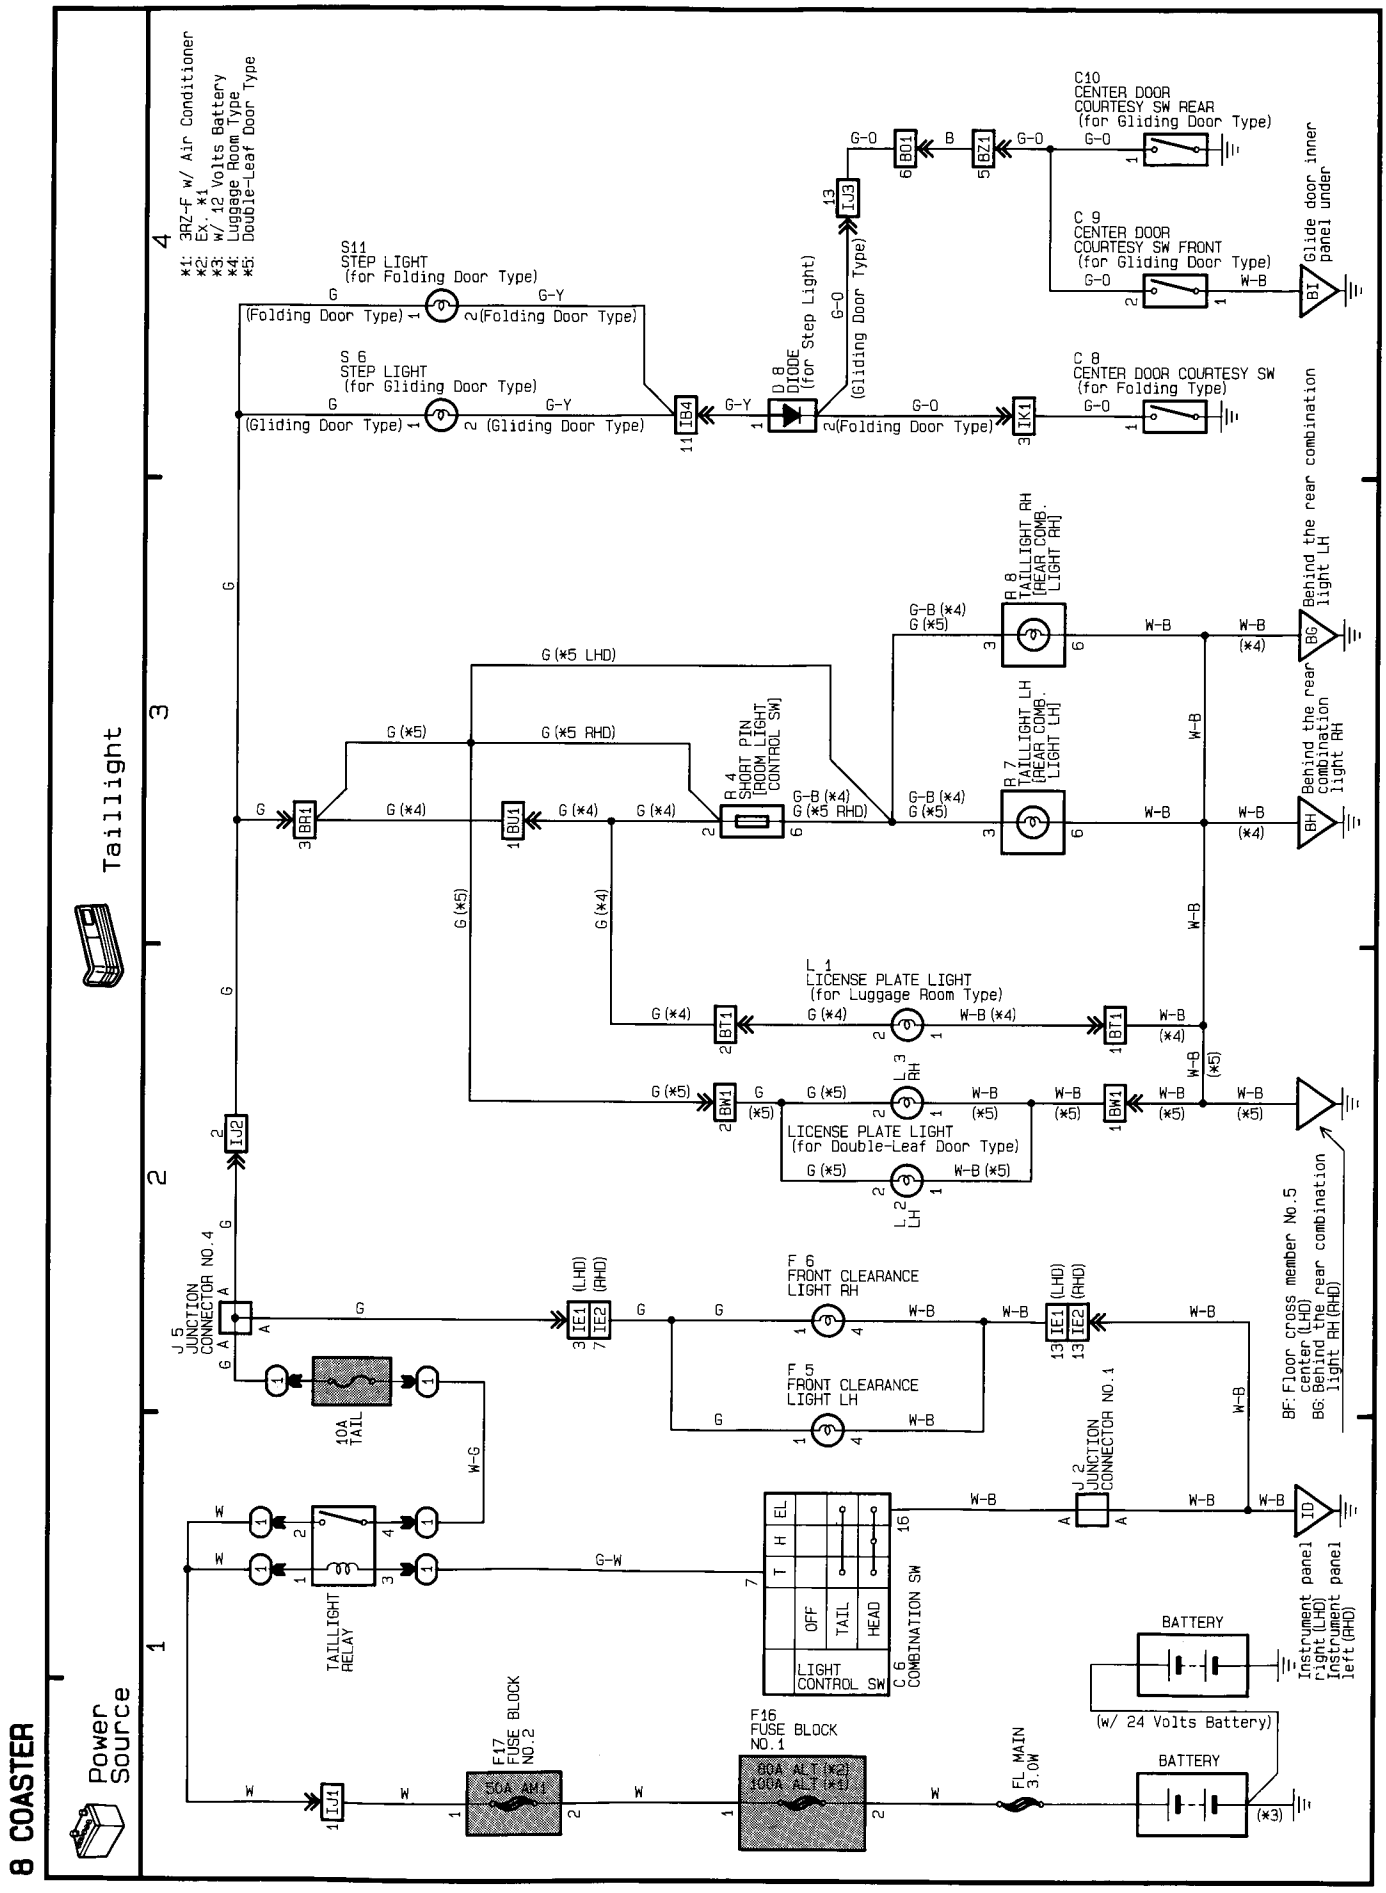

8 COASTER
Power Source
Taillight
*1: 3RZ-F w/ Air Conditioner
*2: Ex. *1
*3: w/ 12 Volts Battery
*4: Luggage Room Type
*5: Double-Leaf Door Type
S11 STEP LIGHT (for Folding Door Type)
S 6 STEP LIGHT (for Gliding Door Type)
D 8 DIODE (for Step Light)
C10 CENTER DOOR COURTESY SW REAR (for Gliding Door Type)
C 9 CENTER DOOR COURTESY SW FRONT (for Gliding Door Type)
C 8 CENTER DOOR COURTESY SW (for Folding Type)
Glide door inner panel under
R 8 TAILLIGHT RH (REAR COMB. LIGHT RH)
R 7 TAILLIGHT LH (REAR COMB. LIGHT LH)
R 4 SHORT PIN (ROOM LIGHT CONTROL SW)
Behind the rear combination light LH
Behind the rear combination light RH
L 1 LICENSE PLATE LIGHT (for Luggage Room Type)
L 3 RH
LICENSE PLATE LIGHT (for Double-Leaf Door Type)
L 2 LH
J 5 JUNCTION CONNECTOR NO.4
F 6 FRONT CLEARANCE LIGHT RH
F 5 FRONT CLEARANCE LIGHT LH
10A TAIL
TAILLIGHT RELAY
C 6 COMBINATION SW
LIGHT CONTROL SW
OFF
TAIL
HEAD
J 2 JUNCTION CONNECTOR NO.1
BF: Floor cross member No.5 center (LHD)
BG: Behind the rear combination light RH (RHD)
Instrument panel right (LHD) Instrument panel left (RHD)
BATTERY
(w/ 24 Volts Battery)
F17 FUSE BLOCK NO.2
50A AM1
F16 FUSE BLOCK NO.1
80A ALT (*2)
100A ALT (*3)
FL MAIN 3.0W
1 2 3 4