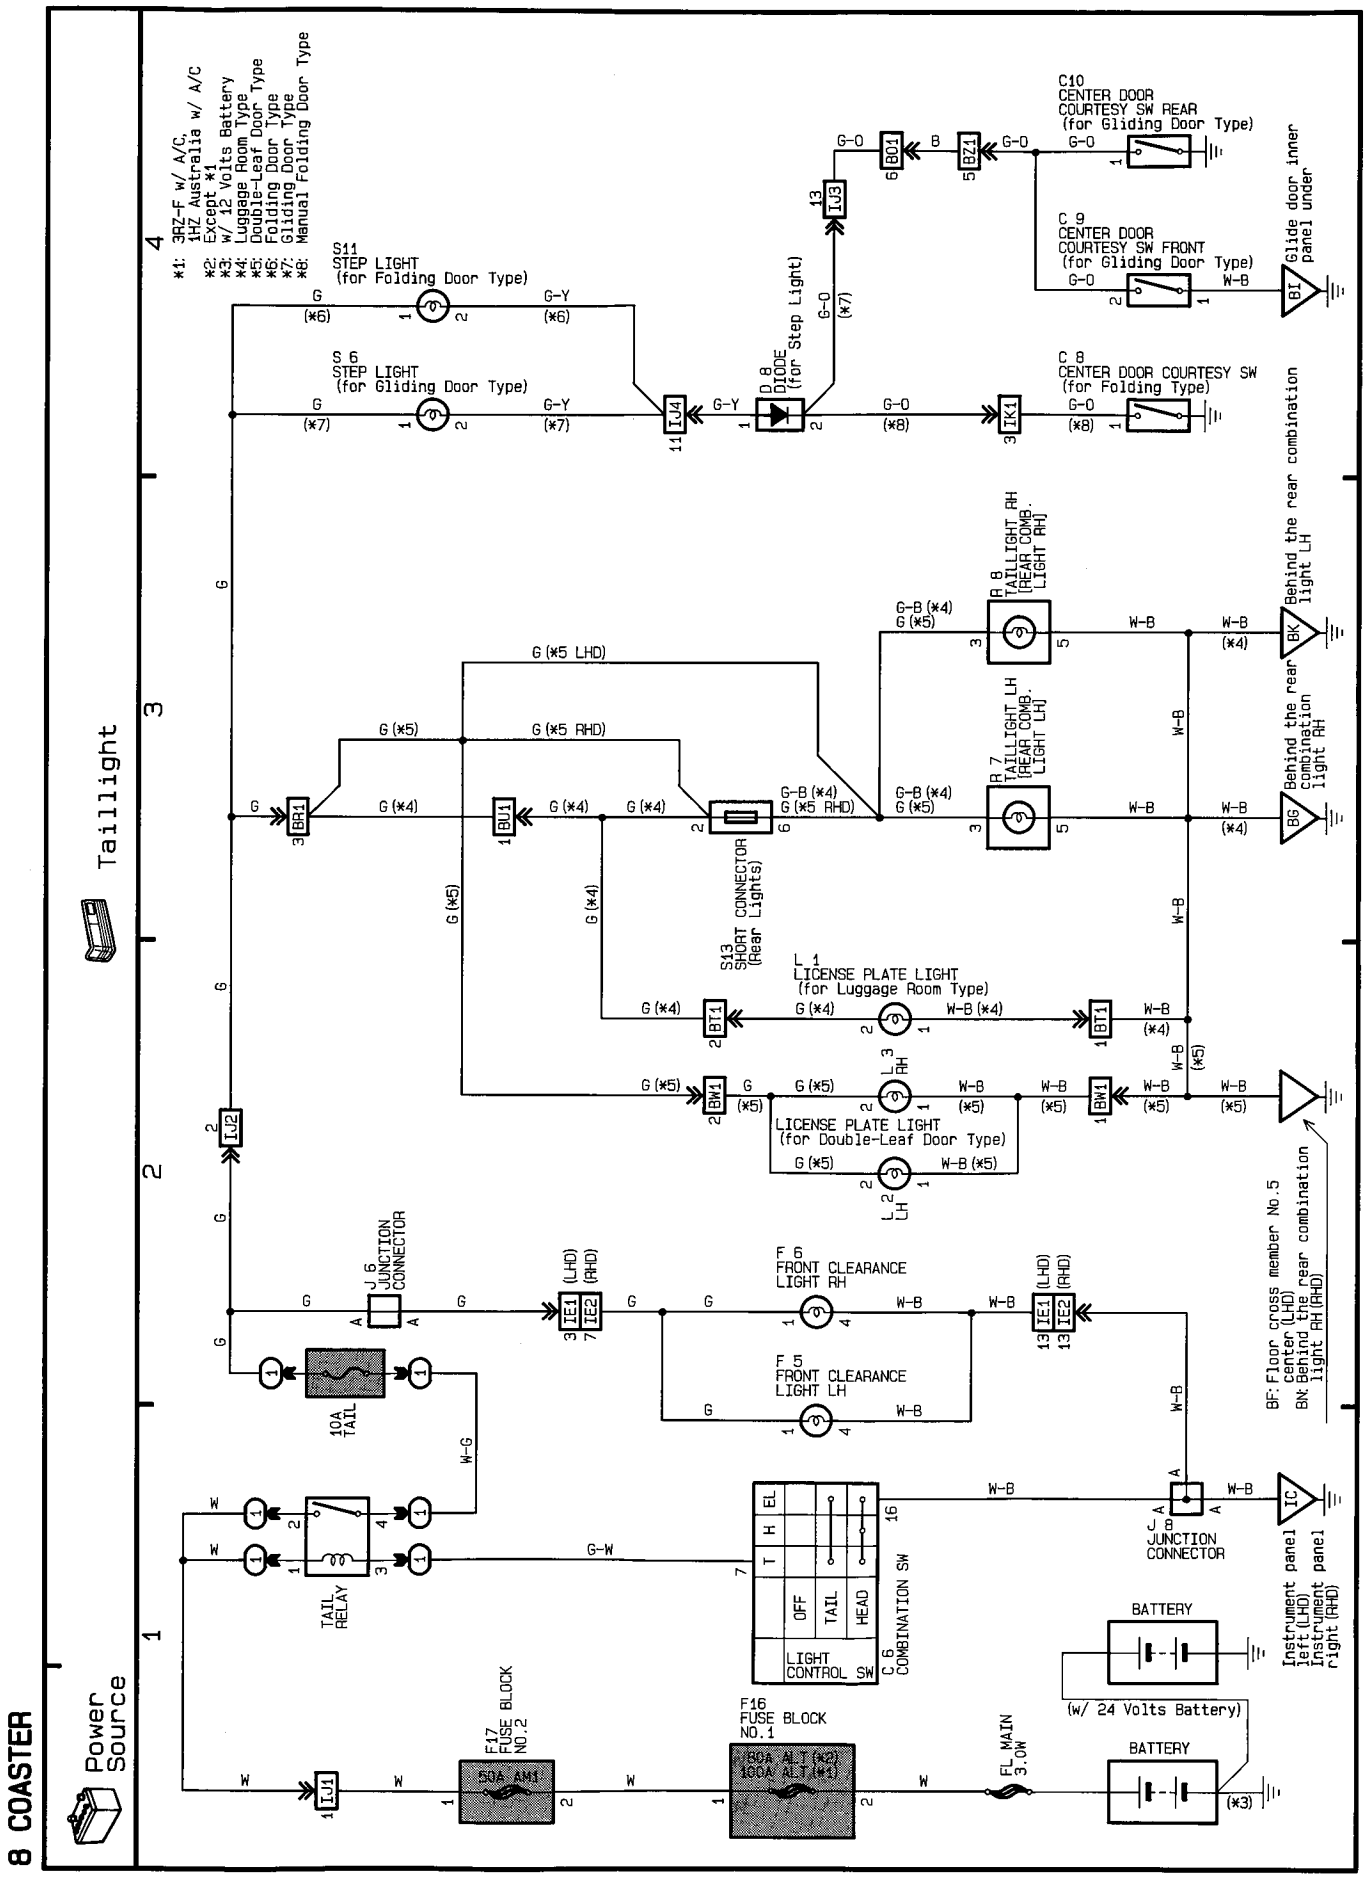

8 COASTER
Power Source
Taillight
*1: 3RZ-F w/ A/C, 1HZ Australia w/ A/C
*2: Except *1
*3: w/ 12 Volts Battery
*4: Luggage Room Type
*5: Double-Leaf Door Type
*6: Folding Door Type
*7: Gliding Door Type
*8: Manual Folding Door Type
S11 STEP LIGHT (for Folding Door Type)
S 6 STEP LIGHT (for Gliding Door Type)
D 8 DIODE (for Step Light)
C10 CENTER DOOR COURTESY SW REAR (for Gliding Door Type)
C 9 CENTER DOOR COURTESY SW FRONT (for Gliding Door Type)
C 8 CENTER DOOR COURTESY SW (for Folding Type)
Glide door inner panel under
R 8 TAILLIGHT RH (REAR COMB. LIGHT RH)
R 7 TAILLIGHT LH (REAR COMB. LIGHT LH)
Behind the rear combination light LH
Behind the rear combination light RH
S13 SHORT CONNECTOR (Rear Lights)
L 1 LICENSE PLATE LIGHT (for Luggage Room Type)
L 3 RH
LICENSE PLATE LIGHT (for Double-Leaf Door Type)
L 2 LH
J 6 JUNCTION CONNECTOR
F 6 FRONT CLEARANCE LIGHT RH
F 5 FRONT CLEARANCE LIGHT LH
10A TAIL
TAIL RELAY
C 6 COMBINATION SW
LIGHT CONTROL SW
OFF
TAIL
HEAD
J 8 JUNCTION CONNECTOR
Instrument panel left (LHD) Instrument panel right (RHD)
BF: Floor cross member No.5 center (LHD)
BN: Behind the rear combination light RH (RHD)
F17 FUSE BLOCK NO.2
50A AM1
F16 FUSE BLOCK NO.1
80A ALT (*2)
100A ALT (*1)
FL MAIN 3.0W
BATTERY
(w/ 24 Volts Battery)
BATTERY
(*3)