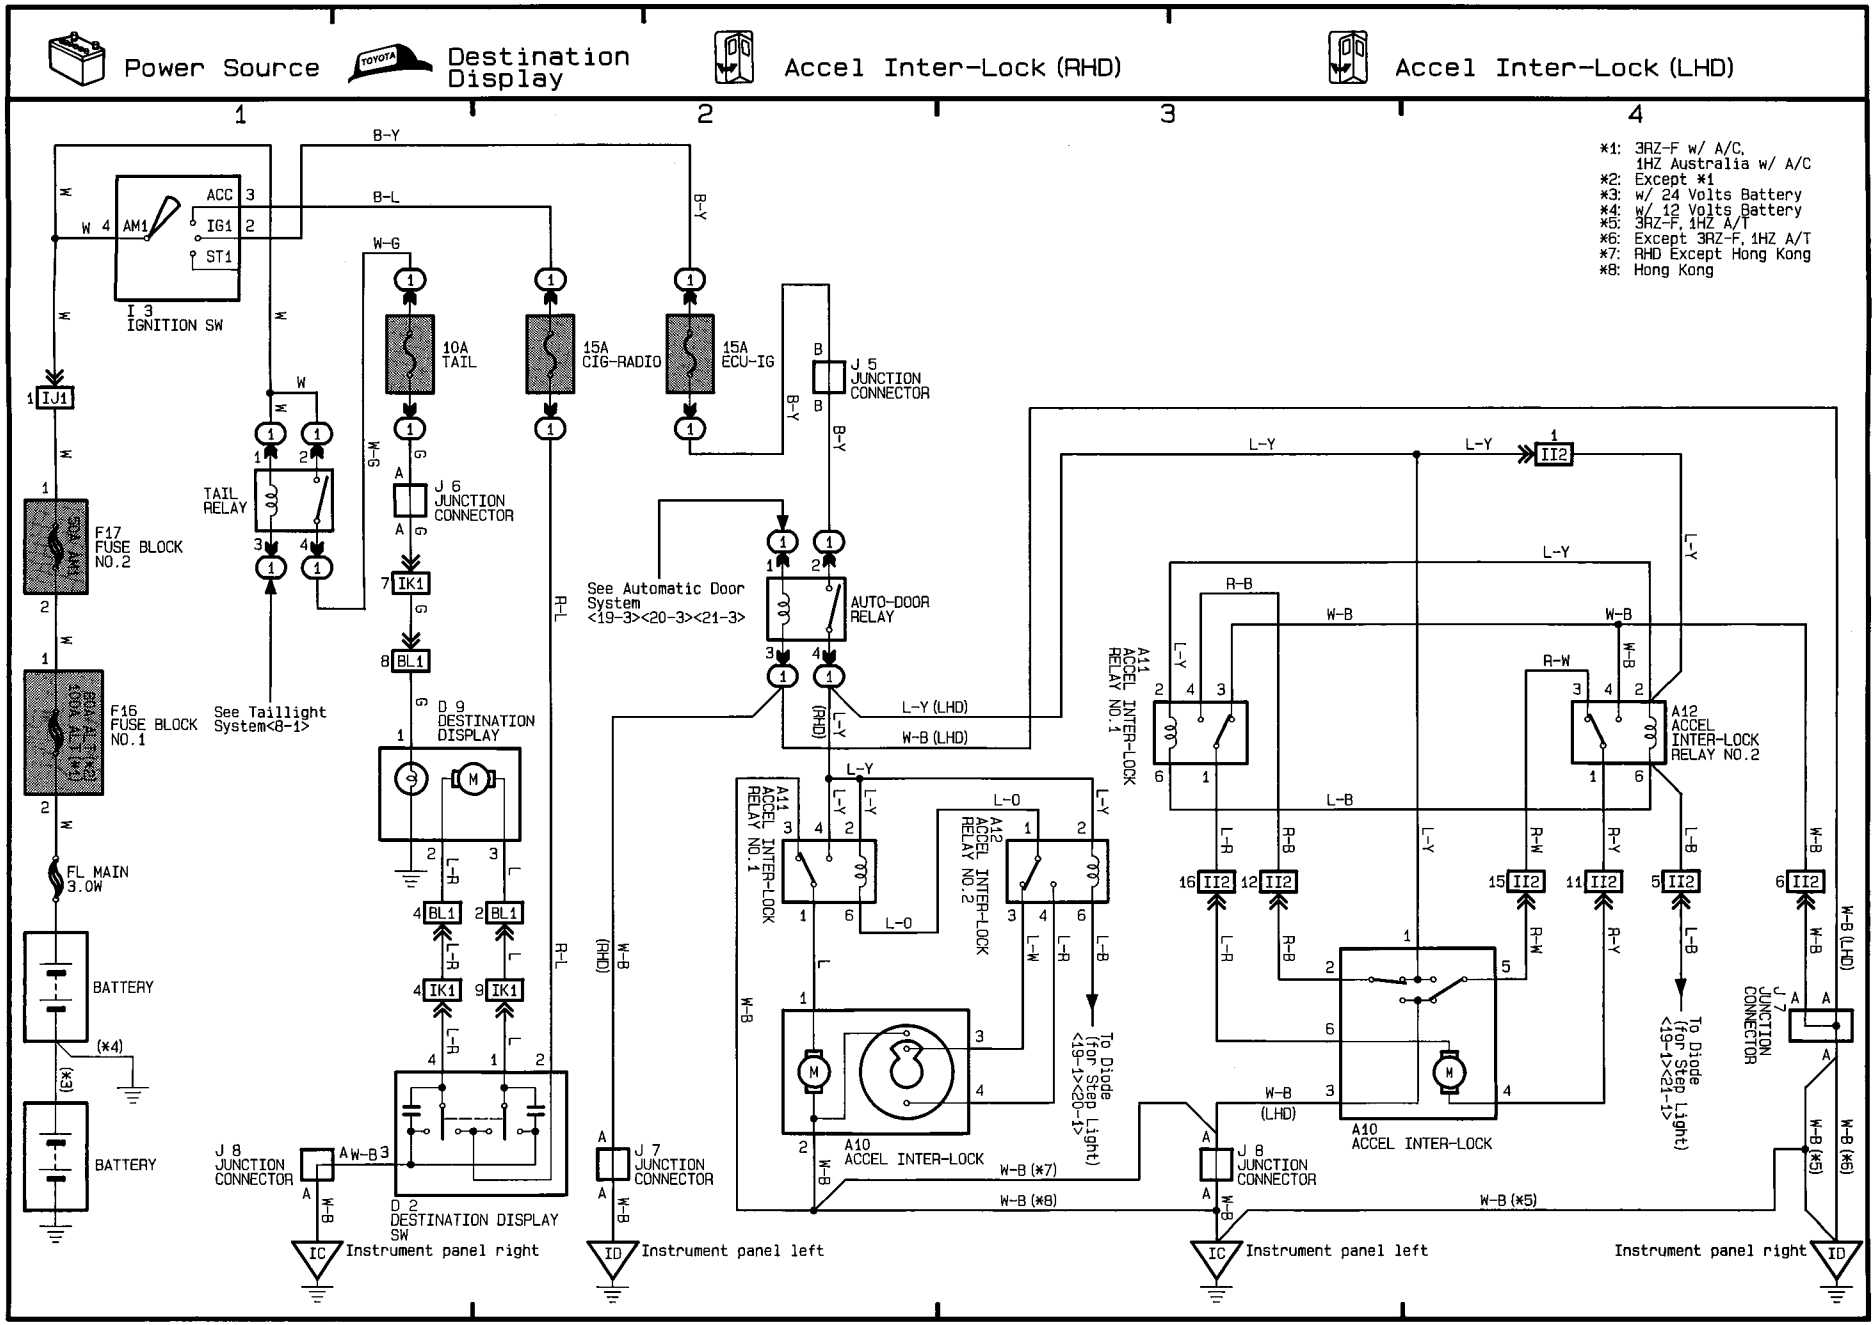

Power Source
Destination Display
Accel Inter-Lock (RHD)
Accel Inter-Lock (LHD)
1
2
3
4
*1: 3RZ-F w/ A/C, 1HZ Australia w/ A/C
*2: Except *1
*3: w/ 24 Volts Battery
*4: w/ 12 Volts Battery
*5: 3RZ-F, 1HZ A/T
*6: Except 3RZ-F, 1HZ A/T
*7: RHD Except Hong Kong
*8: Hong Kong
I 3 IGNITION SW
ACC
IG1
ST1
AM1
10A TAIL
15A CIG-RADIO
15A ECU-IG
J 5 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
TAIL RELAY
AUTO-DOOR RELAY
See Automatic Door System <19-3><20-3><21-3>
F17 FUSE BLOCK NO.2
F16 FUSE BLOCK NO.1
See Taillight System<8-1>
FL MAIN 3.0W
BATTERY
D 9 DESTINATION DISPLAY
D 2 DESTINATION DISPLAY SW
J 8 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
A11 ACCEL INTER-LOCK RELAY NO.1
A12 ACCEL INTER-LOCK RELAY NO.2
A10 ACCEL INTER-LOCK
To Diode (for Step Light) <19-1><20-1>
To Diode (for Step Light) <19-1><21-1>
Instrument panel right
Instrument panel left
Instrument panel left
Instrument panel right