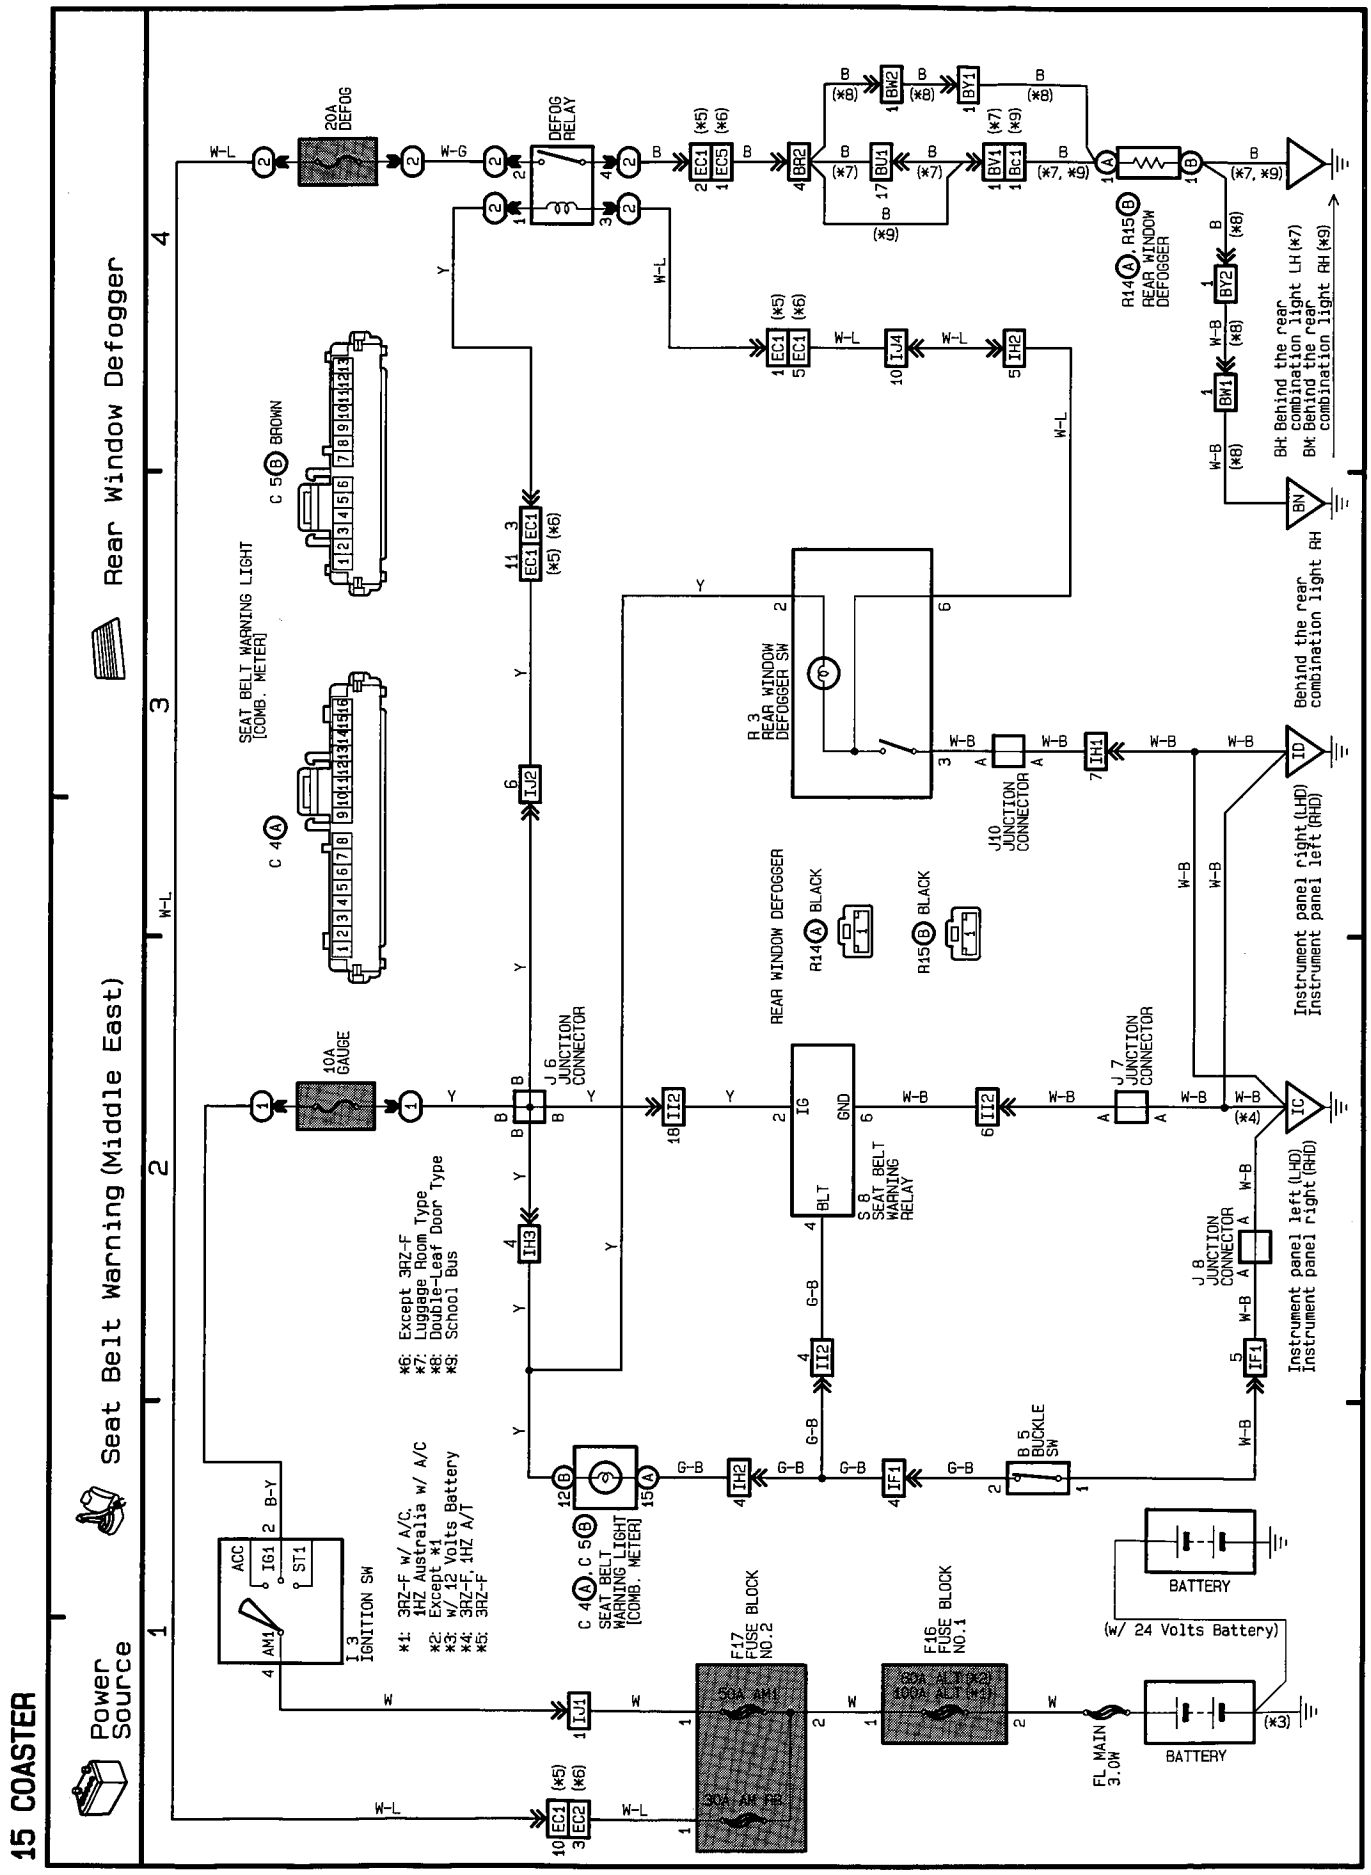

15 COASTER
Power Source
Seat Belt Warning (Middle East)
Rear Window Defogger
20A DEFOG
DEFOG RELAY
10A GAUGE
I 3 IGNITION SW
ACC
IG1
ST1
AM1
B-Y
W
W-L
W-G
Y
B
G-B
W-B
*1: 3RZ-F w/ A/C, 1HZ Australia w/ A/C
*2: Except *1
*3: w/ 12 Volts Battery
*4: 3RZ-F, 1HZ A/T
*5: 3RZ-F
*6: Except 3RZ-F
*7: Luggage Room Type
*8: Double-Leaf Door Type
*9: School Bus
SEAT BELT WARNING LIGHT [COMB. METER]
C 4 A
C 5 B BROWN
J 6 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J10 JUNCTION CONNECTOR
S 8 SEAT BELT WARNING RELAY
BLT
IG
GND
B 5 BUCKLE SW
R 3 REAR WINDOW DEFOGGER SW
REAR WINDOW DEFOGGER
R14 A BLACK
R15 B BLACK
R14 A, R15 B REAR WINDOW DEFOGGER
F17 FUSE BLOCK NO.2
50A AM1
30A AM FR
F16 FUSE BLOCK NO.1
60A ALT (*2)
100A ALT (*1)
FL MAIN 3.0W
BATTERY
(w/ 24 Volts Battery)
Behind the rear combination light RH
Instrument panel right (LHD)
Instrument panel left (RHD)
BH Behind the rear combination light LH (*7)
BM Behind the rear combination light RH (*9)
BN