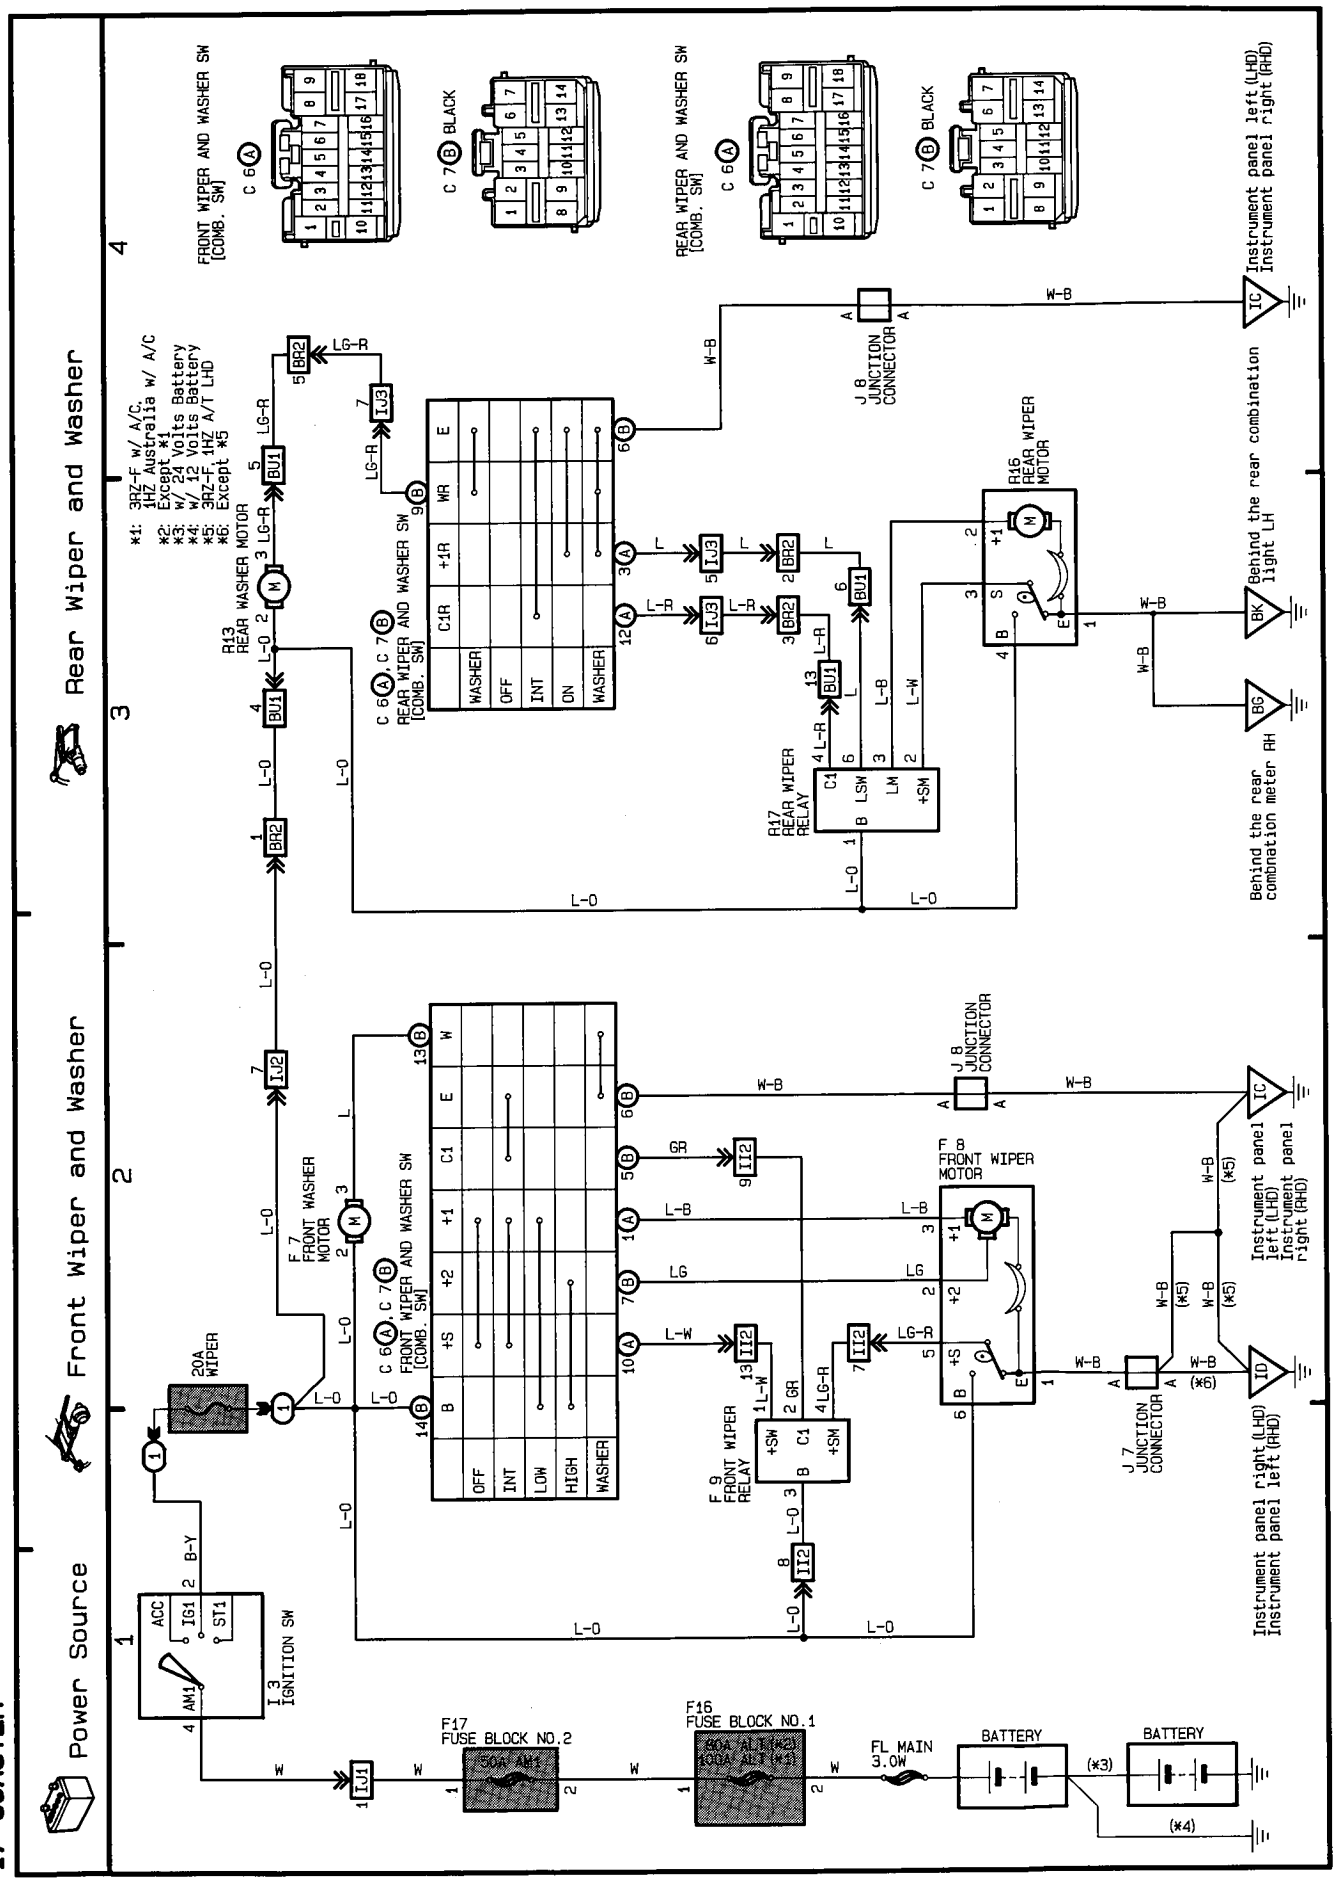

17 COACHER
Power Source
Front Wiper and Washer
Rear Wiper and Washer
*1: 3RZ-F w/ A/C, 1HZ Australia w/ A/C
*2: Except *1
*3: w/ 24 Volts Battery
*4: w/ 12 Volts Battery
*5: 3RZ-F, 1HZ A/T LHD
*6: Except *5
I 3 IGNITION SW
ACC
IG1
ST1
AM1
B-Y
20A WIPER
F 7 FRONT WASHER MOTOR
C 6 (A), C 7 (B) FRONT WIPER AND WASHER SW [COMB. SW]
OFF
INT
LOW
HIGH
WASHER
F 8 FRONT WIPER MOTOR
F 9 FRONT WIPER RELAY
+SW
C1
+SM
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
Instrument panel right (LHD)
Instrument panel left (RHD)
Instrument panel left (LHD)
Instrument panel right (RHD)
FRONT WIPER AND WASHER SW [COMB. SW]
C 6 (A)
C 7 (B) BLACK
REAR WIPER AND WASHER SW [COMB. SW]
R13 REAR WASHER MOTOR
C 6 (A), C 7 (B) REAR WIPER AND WASHER SW [COMB. SW]
WASHER
OFF
INT
ON
WASHER
R16 REAR WIPER MOTOR
R17 REAR WIPER RELAY
C1
LSW
LM
+SM
Behind the rear combination light LH
Behind the rear combination meter RH
F17 FUSE BLOCK NO.2
50A AM1
F16 FUSE BLOCK NO.1
60A ALT-S
100A ALT-NO1
FL MAIN 3.0W
BATTERY
BATTERY
(*3)
(*4)
(*5)
(*6)