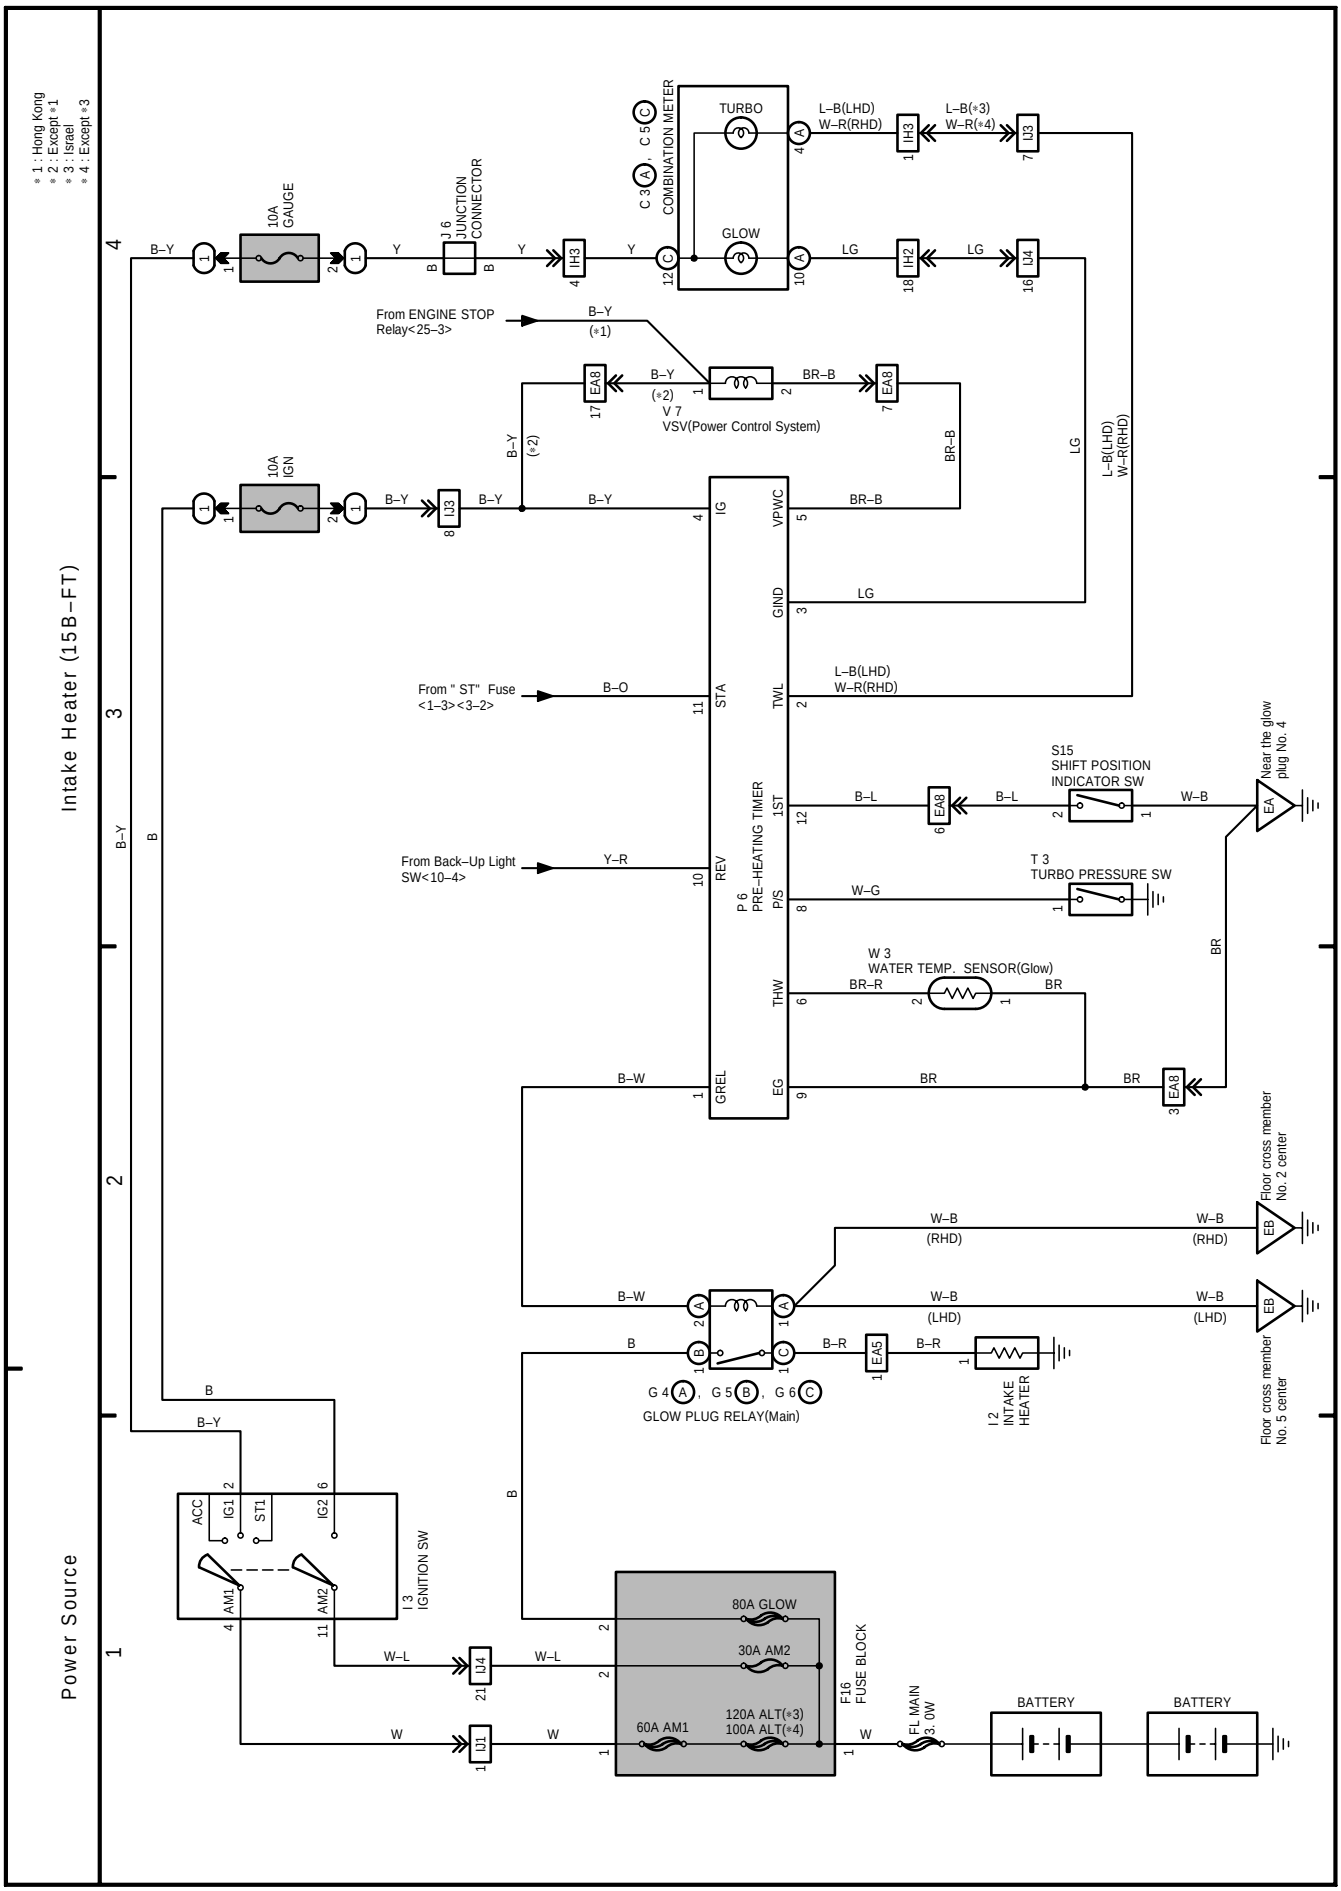

* 1 : Hong Kong
* 2 : Except *1
* 3 : Israel
* 4 : Except *3
Intake Heater (15B–FT)
Power Source
10A GAUGE
10A IGN
J 6 JUNCTION CONNECTOR
COMBINATION METER
TURBO
GLOW
From ENGINE STOP Relay<25–3>
V 7 VSV(Power Control System)
P 6 PRE–HEATING TIMER
From " ST" Fuse <1–3><3–2>
From Back–Up Light SW<10–4>
S15 SHIFT POSITION INDICATOR SW
T 3 TURBO PRESSURE SW
W 3 WATER TEMP. SENSOR(Glow)
Near the glow plug No. 4
Floor cross member No. 2 center
Floor cross member No. 5 center
G 4 , G 5 , G 6
GLOW PLUG RELAY(Main)
I 2 INTAKE HEATER
I 3 IGNITION SW
F16 FUSE BLOCK
80A GLOW
30A AM2
60A AM1
120A ALT(*3) 100A ALT(*4)
FL MAIN 3. 0W
BATTERY
BATTERY