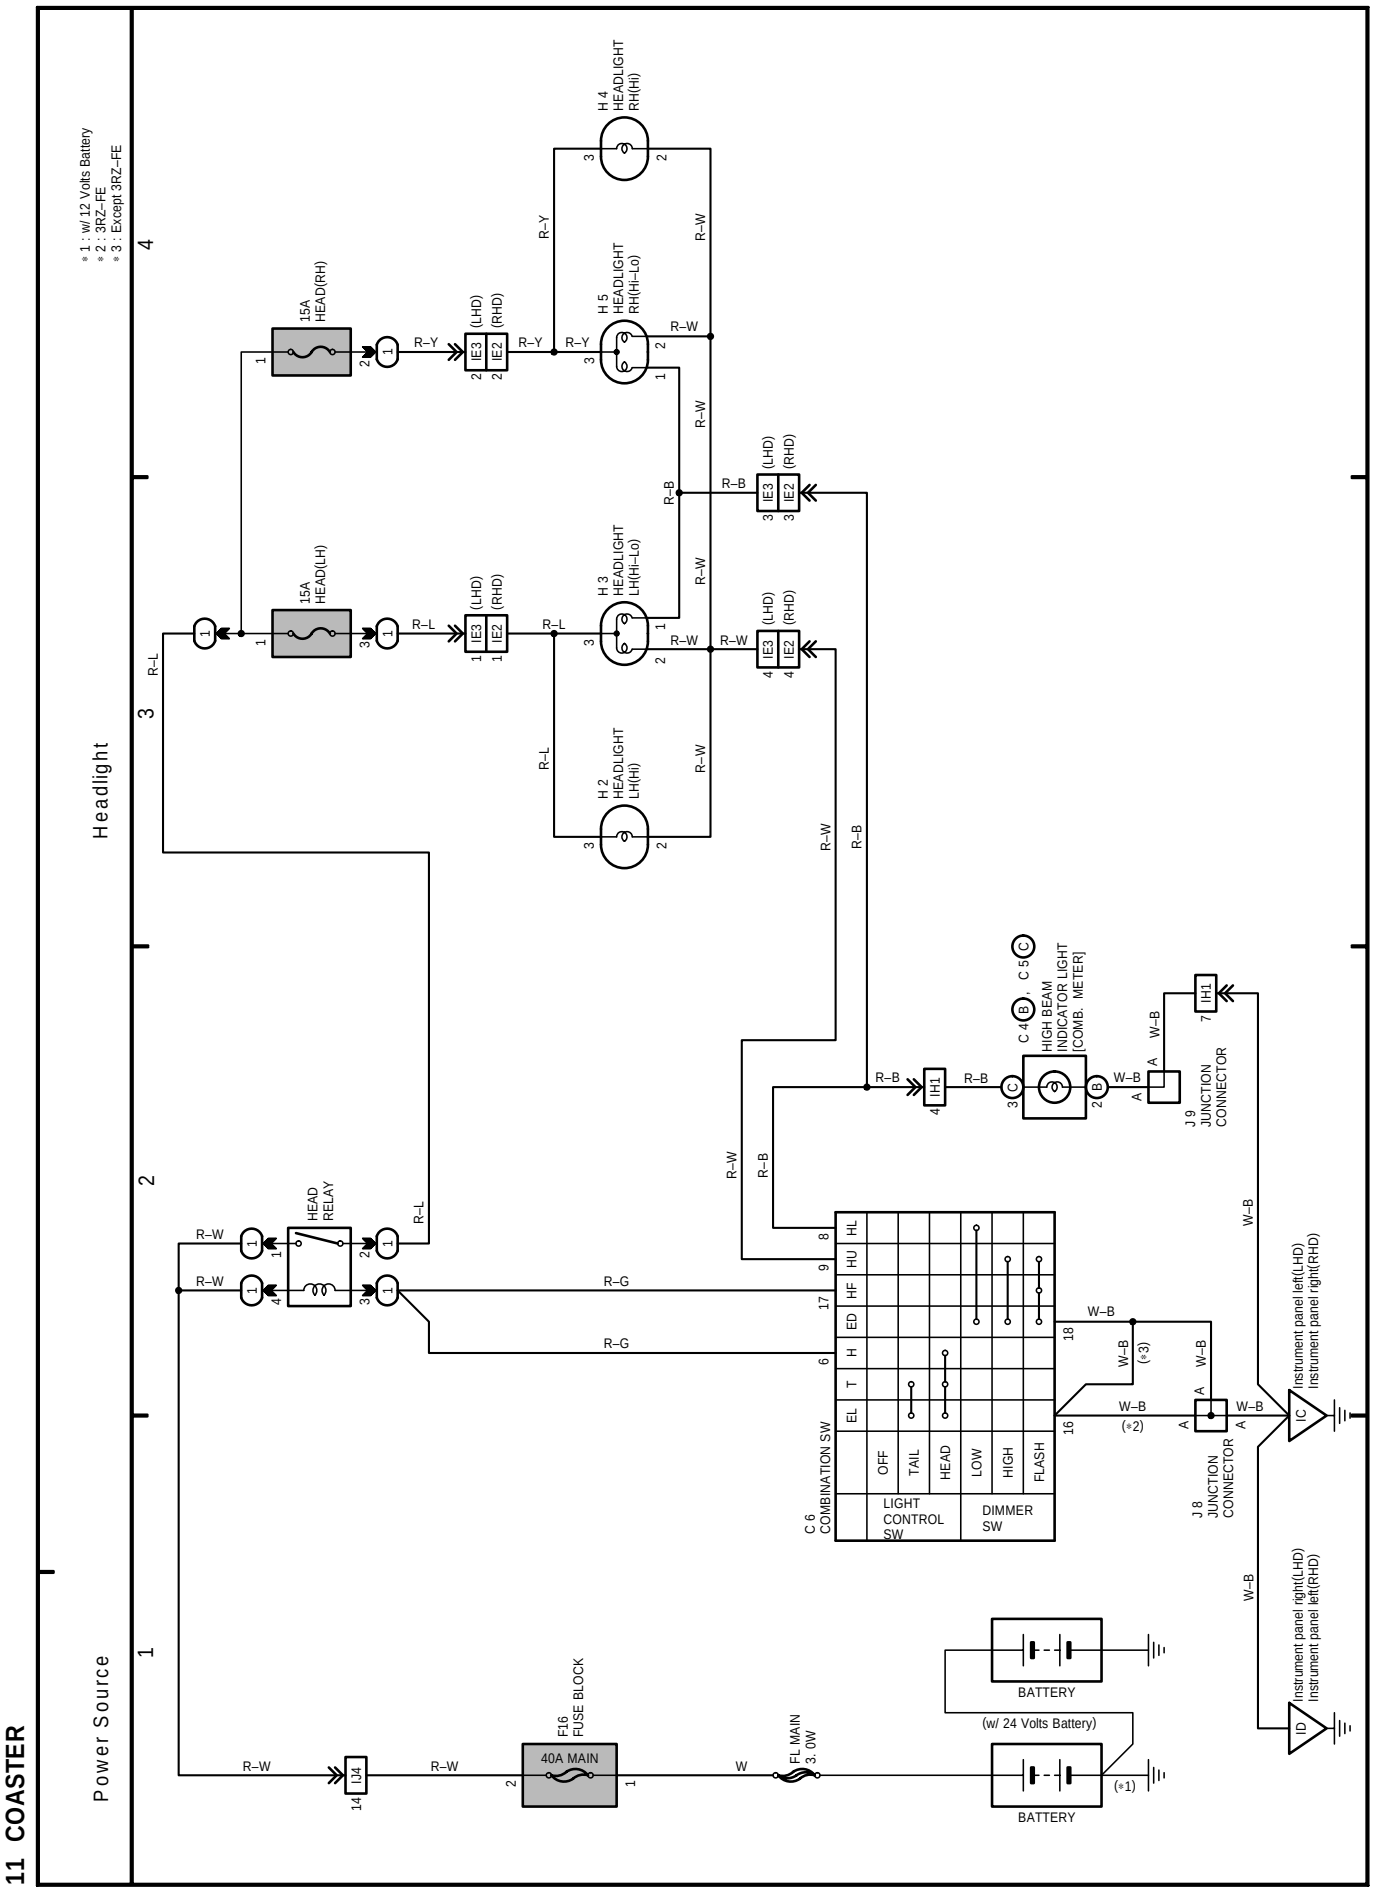

11 COASTER
Power Source
Headlight
1
2
3
4
* 1 : w/ 12 Volts Battery
* 2 : 3RZ–FE
* 3 : Except 3RZ–FE
H 4 HEADLIGHT RH(Hi)
H 5 HEADLIGHT RH(Hi–Lo)
H 3 HEADLIGHT LH(Hi–Lo)
H 2 HEADLIGHT LH(Hi)
15A HEAD(RH)
15A HEAD(LH)
IE3 (LHD)
IE2 (RHD)
HEAD RELAY
F16 FUSE BLOCK
40A MAIN
FL MAIN 3. 0W
IH1
IJ4
C 4 B, C 5 C
HIGH BEAM INDICATOR LIGHT [COMB. METER]
J 9 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
C 6 COMBINATION SW
LIGHT CONTROL SW
DIMMER SW
OFF
TAIL
HEAD
LOW
HIGH
FLASH
HL
HU
HF
ED
H
T
EL
BATTERY
(w/ 24 Volts Battery)
(*1)
(*2)
(*3)
IC
ID
Instrument panel left(LHD)
Instrument panel right(RHD)
Instrument panel right(LHD)
Instrument panel left(RHD)
R–W
R–B
R–Y
R–L
R–G
W–B
W