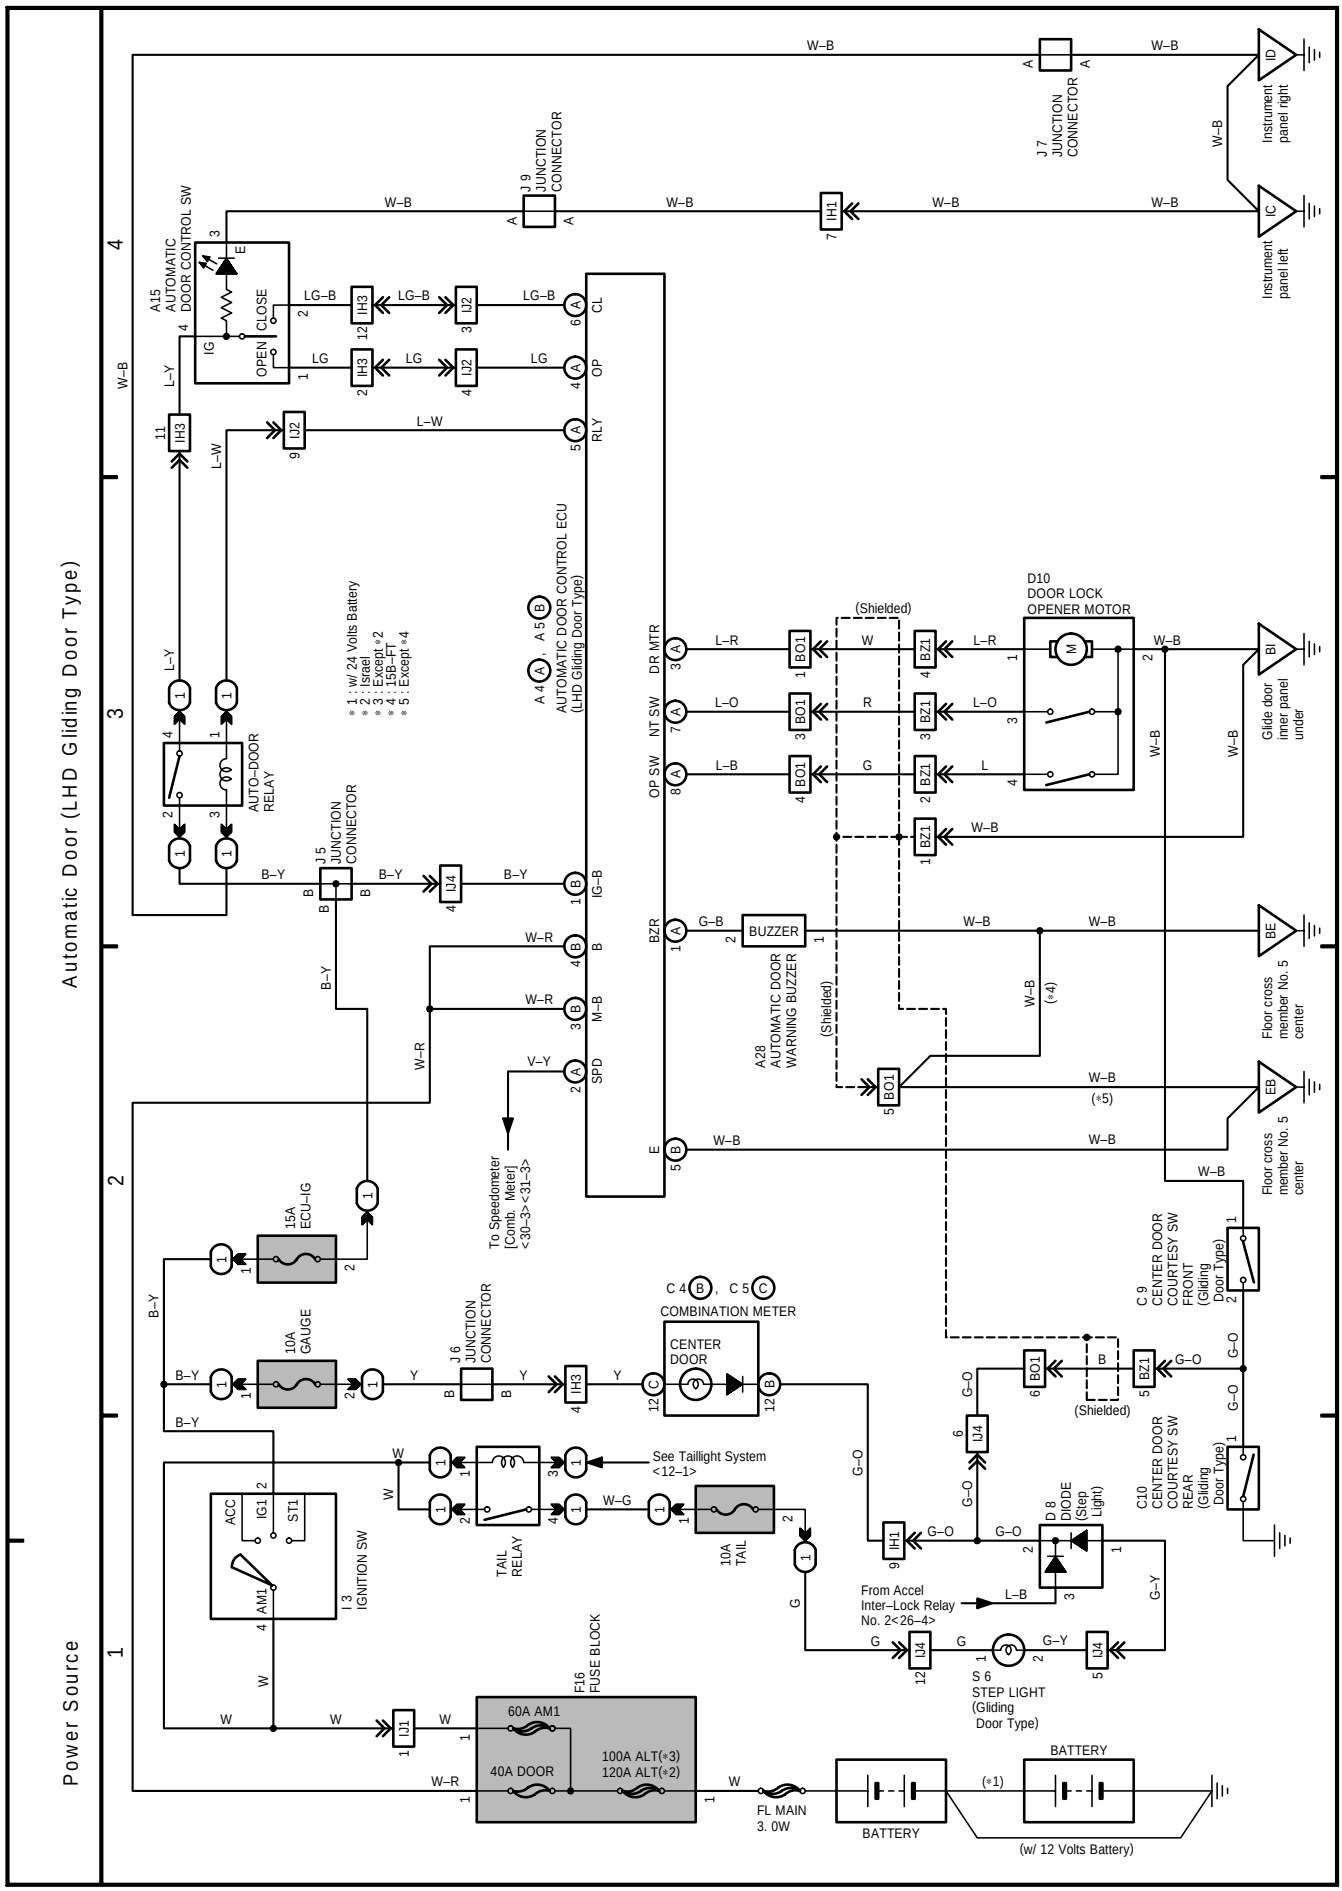

Automatic Door (LHD Gliding Door Type)
Power Source
A15 AUTOMATIC DOOR CONTROL SW
AUTO–DOOR RELAY
J5 JUNCTION CONNECTOR
J9 JUNCTION CONNECTOR
J7 JUNCTION CONNECTOR
A4, A5 AUTOMATIC DOOR CONTROL ECU (LHD Gliding Door Type)
D10 DOOR LOCK OPENER MOTOR
A28 AUTOMATIC DOOR WARNING BUZZER
BUZZER
Instrument panel right
Instrument panel left
Glide door inner panel under
Floor cross member No. 5 center
15A ECU–IG
10A GAUGE
J6 JUNCTION CONNECTOR
COMBINATION METER
CENTER DOOR
C9 CENTER DOOR COURTESY SW FRONT (Gliding Door Type)
C10 CENTER DOOR COURTESY SW REAR (Gliding Door Type)
D8 DIODE (Step Light)
S6 STEP LIGHT (Gliding Door Type)
I3 IGNITION SW
TAIL RELAY
10A TAIL
See Taillight System <12–1>
From Accel Inter–Lock Relay No. 2<26–4>
To Speedometer [Comb. Meter] <30–3><31–3>
F16 FUSE BLOCK
60A AM1
40A DOOR
100A ALT(*3) 120A ALT(*2)
FL MAIN 3. 0W
BATTERY
(w/ 12 Volts Battery)
* 1 : w/ 24 Volts Battery
* 2 : Israel
* 3 : Except *2
* 4 : 15B–FT
* 5 : Except *4