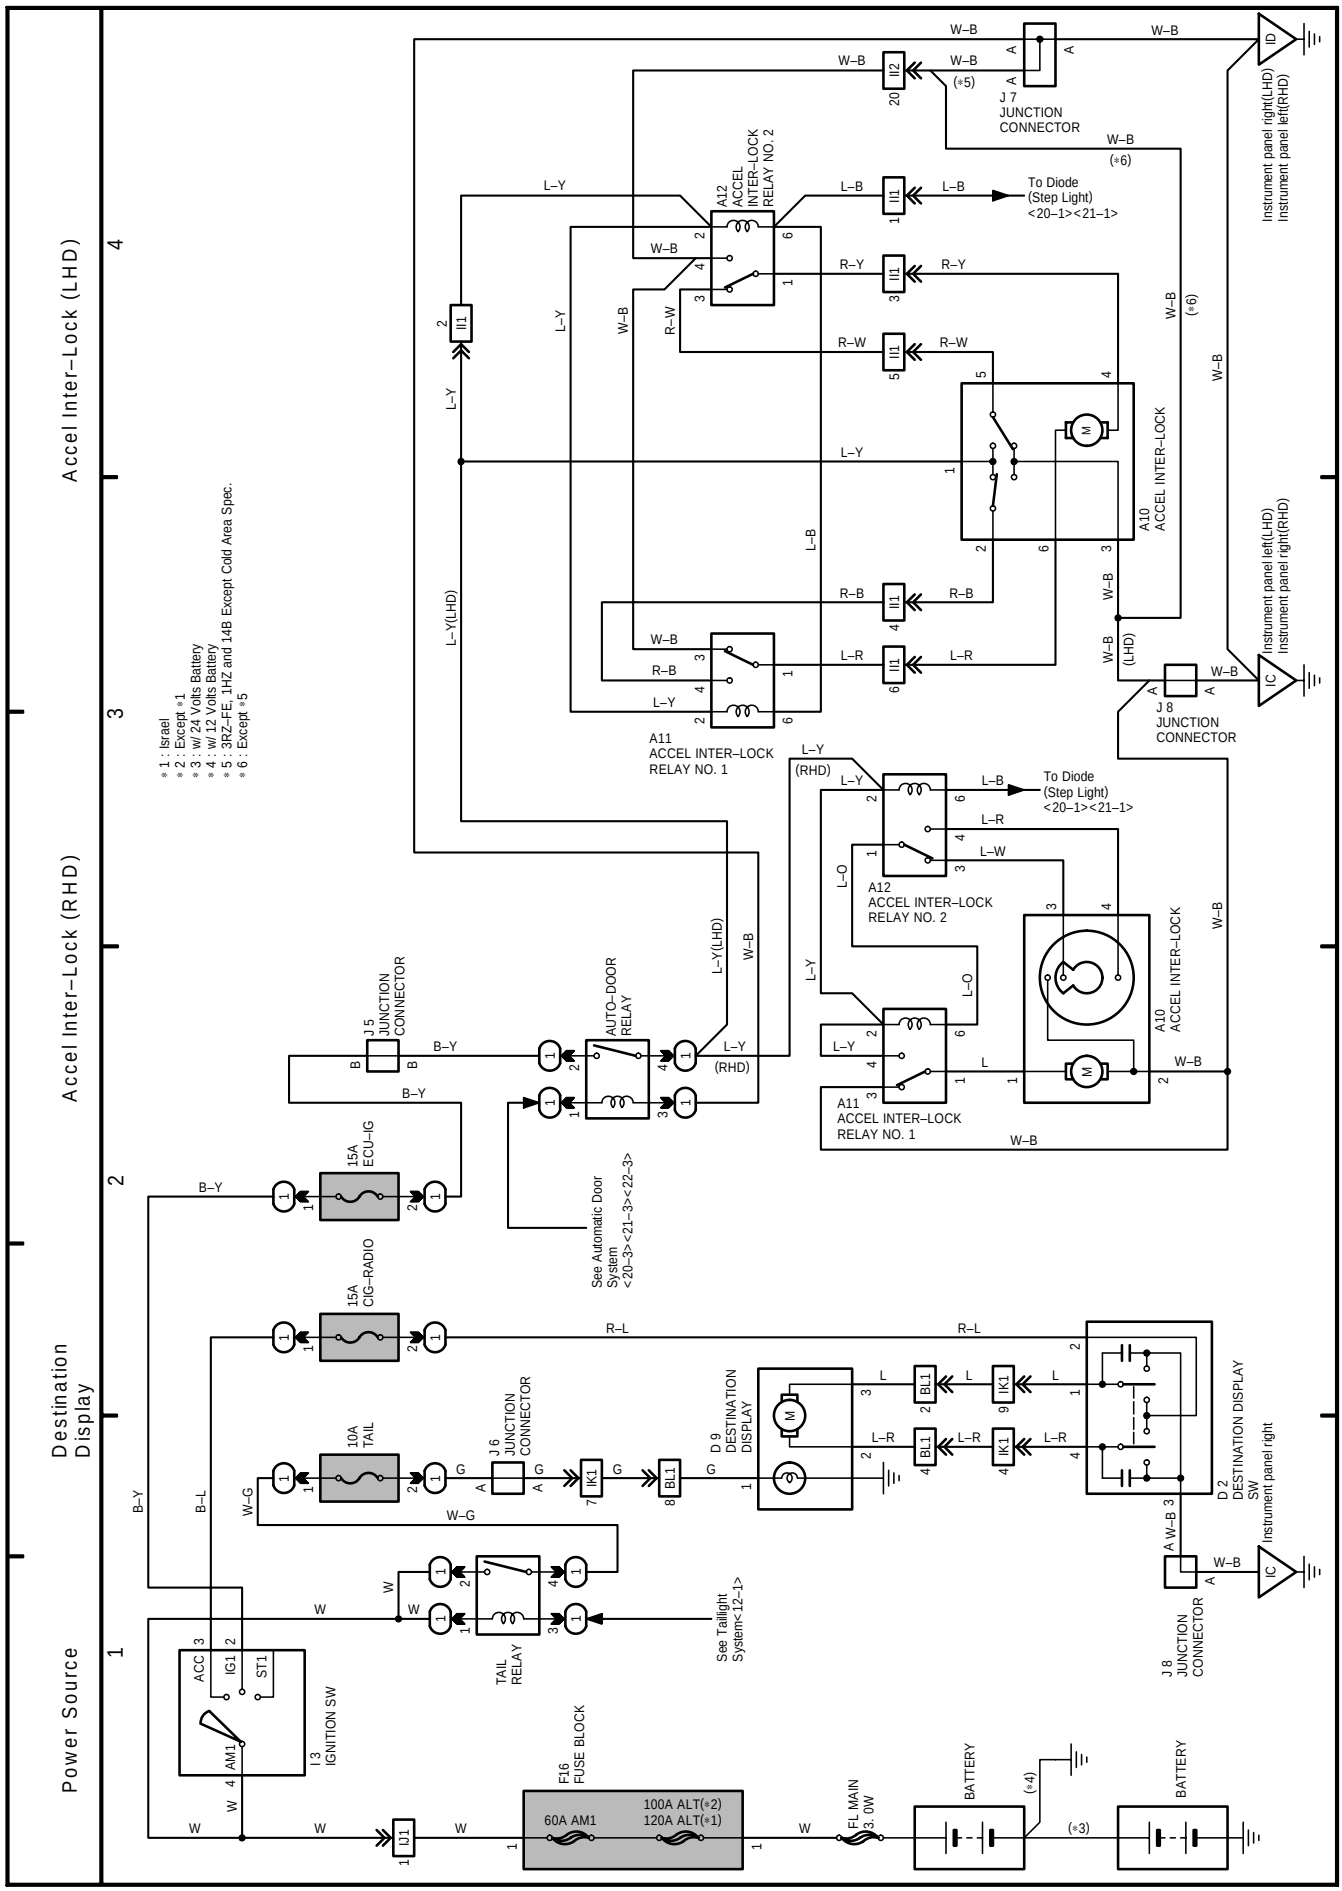

Power Source
Destination Display
Accel Inter–Lock (RHD)
Accel Inter–Lock (LHD)
1
2
3
4
* 1 : Israel
* 2 : Except *1
* 3 : w/ 24 Volts Battery
* 4 : w/ 12 Volts Battery
* 5 : 3RZ–FE, 1HZ and 14B Except Cold Area Spec.
* 6 : Except *5
I3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
100A ALT(*2)
120A ALT(*1)
FL MAIN 3. 0W
BATTERY
(*4)
(*3)
TAIL RELAY
15A ECU–IG
15A CIG–RADIO
10A TAIL
AUTO–DOOR RELAY
See Automatic Door System <20–3><21–3><22–3>
See Taillight System<12–1>
J5 JUNCTION CONNECTOR
J6 JUNCTION CONNECTOR
J7 JUNCTION CONNECTOR
J8 JUNCTION CONNECTOR
D9 DESTINATION DISPLAY
D2 DESTINATION DISPLAY SW
Instrument panel right
A11 ACCEL INTER–LOCK RELAY NO. 1
A12 ACCEL INTER–LOCK RELAY NO. 2
A10 ACCEL INTER–LOCK
To Diode (Step Light) <20–1><21–1>
Instrument panel right(LHD)
Instrument panel left(RHD)
Instrument panel left(LHD)
Instrument panel right(RHD)
(*5)
(*6)
(LHD)
(RHD)