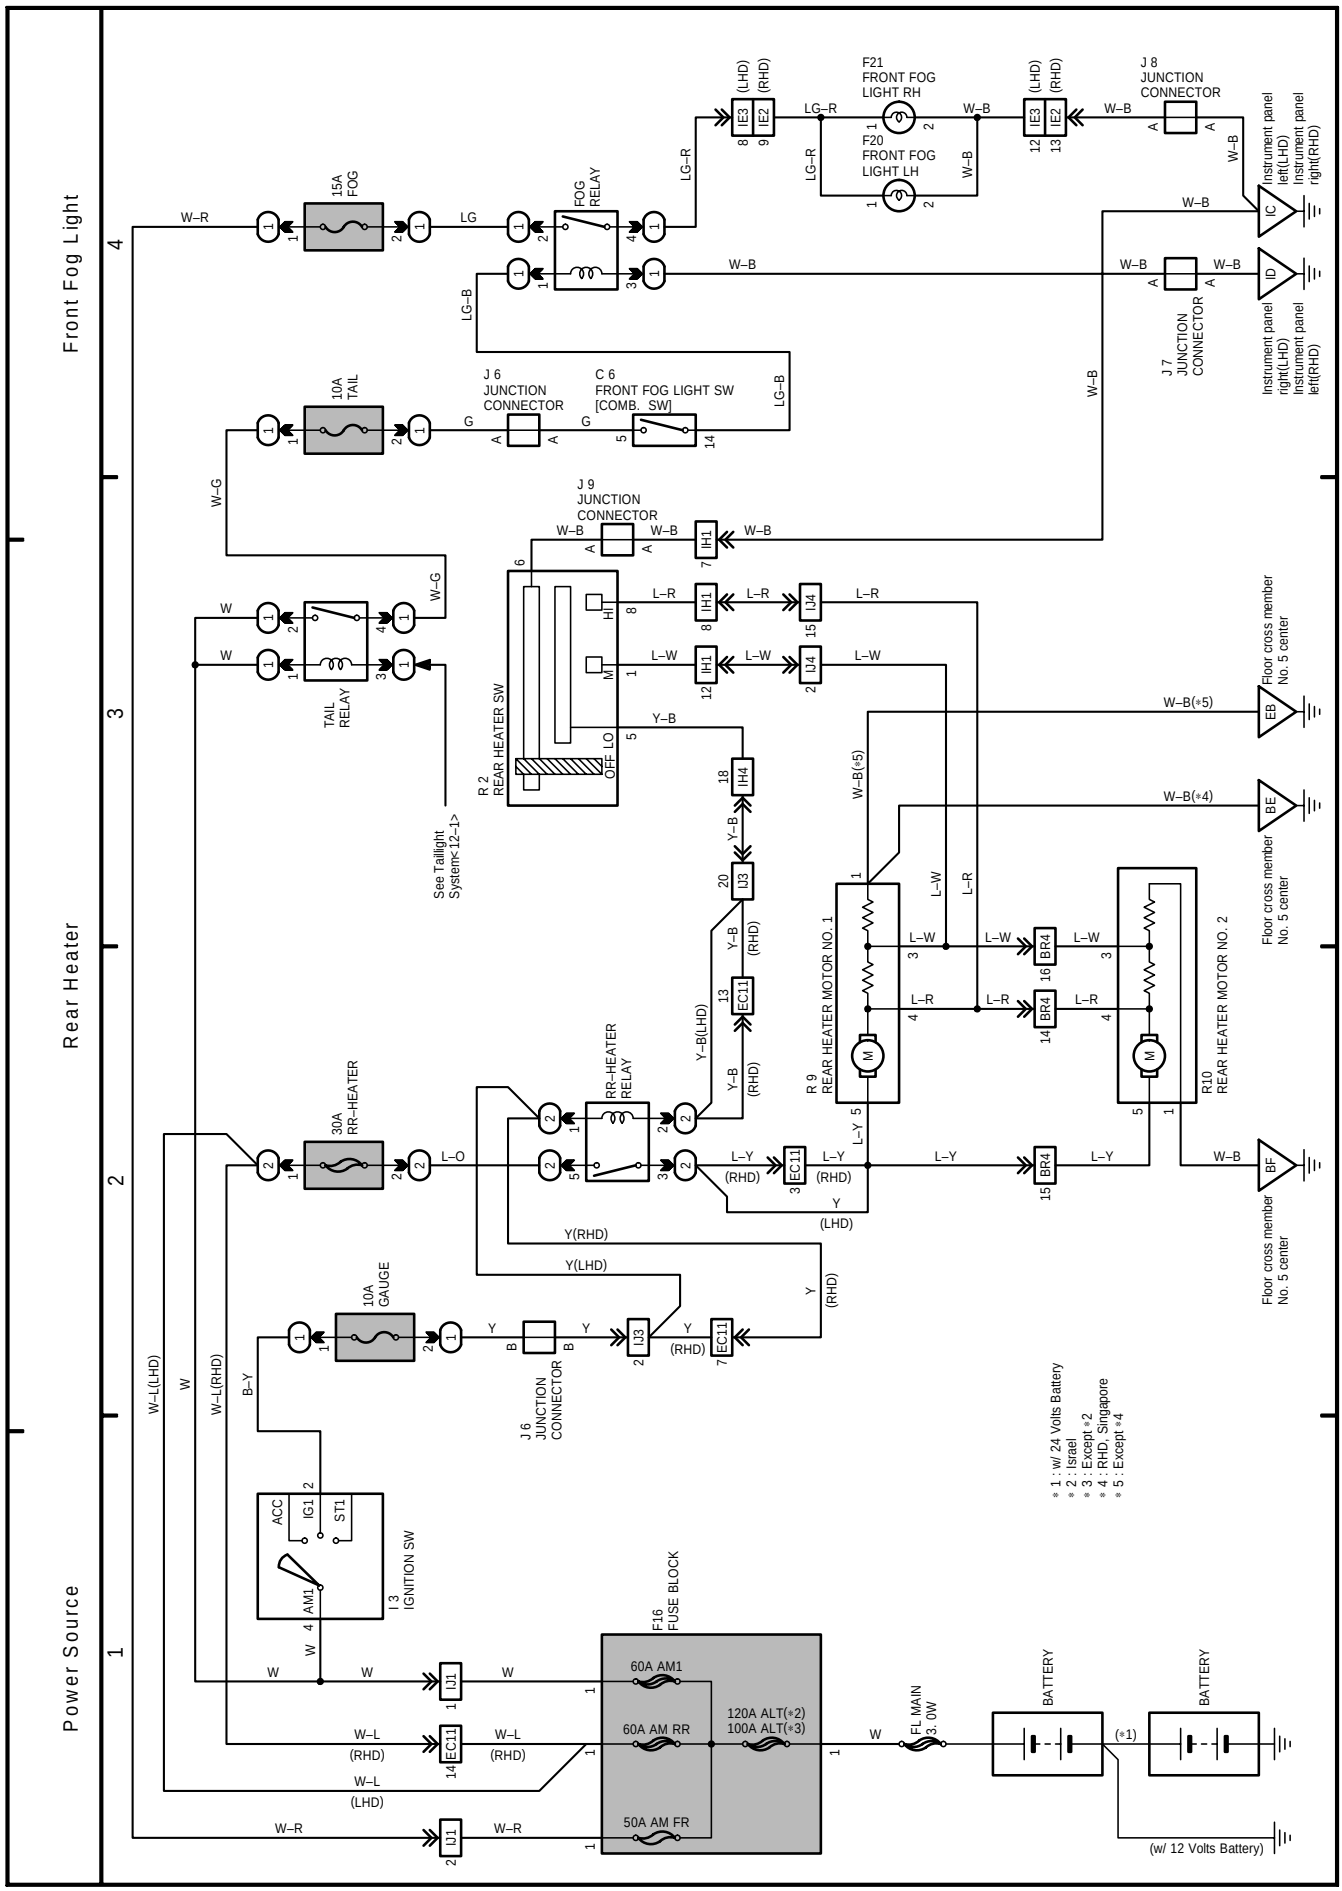

Front Fog Light
Rear Heater
Power Source
15A FOG
FOG RELAY
F21 FRONT FOG LIGHT RH
F20 FRONT FOG LIGHT LH
J 8 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
10A TAIL
J 6 JUNCTION CONNECTOR
C 6 FRONT FOG LIGHT SW [COMB. SW]
J 9 JUNCTION CONNECTOR
TAIL RELAY
R 2 REAR HEATER SW
See Taillight System<12-1>
30A RR-HEATER
RR-HEATER RELAY
R 9 REAR HEATER MOTOR NO. 1
R10 REAR HEATER MOTOR NO. 2
10A GAUGE
J 6 JUNCTION CONNECTOR
I 3 IGNITION SW
F16 FUSE BLOCK
60A AM1
60A AM RR
50A AM FR
120A ALT(*2)
100A ALT(*3)
FL MAIN
BATTERY
BATTERY
(*1)
(w/ 12 Volts Battery)
Instrument panel left(LHD) Instrument panel right(RHD)
Instrument panel right(LHD) Instrument panel left(RHD)
Floor cross member No. 5 center
Floor cross member No. 5 center
Floor cross member No. 5 center
* 1 : w/ 24 Volts Battery
* 2 : Israel
* 3 : Except * 2
* 4 : RHD, Singapore
* 5 : Except * 4