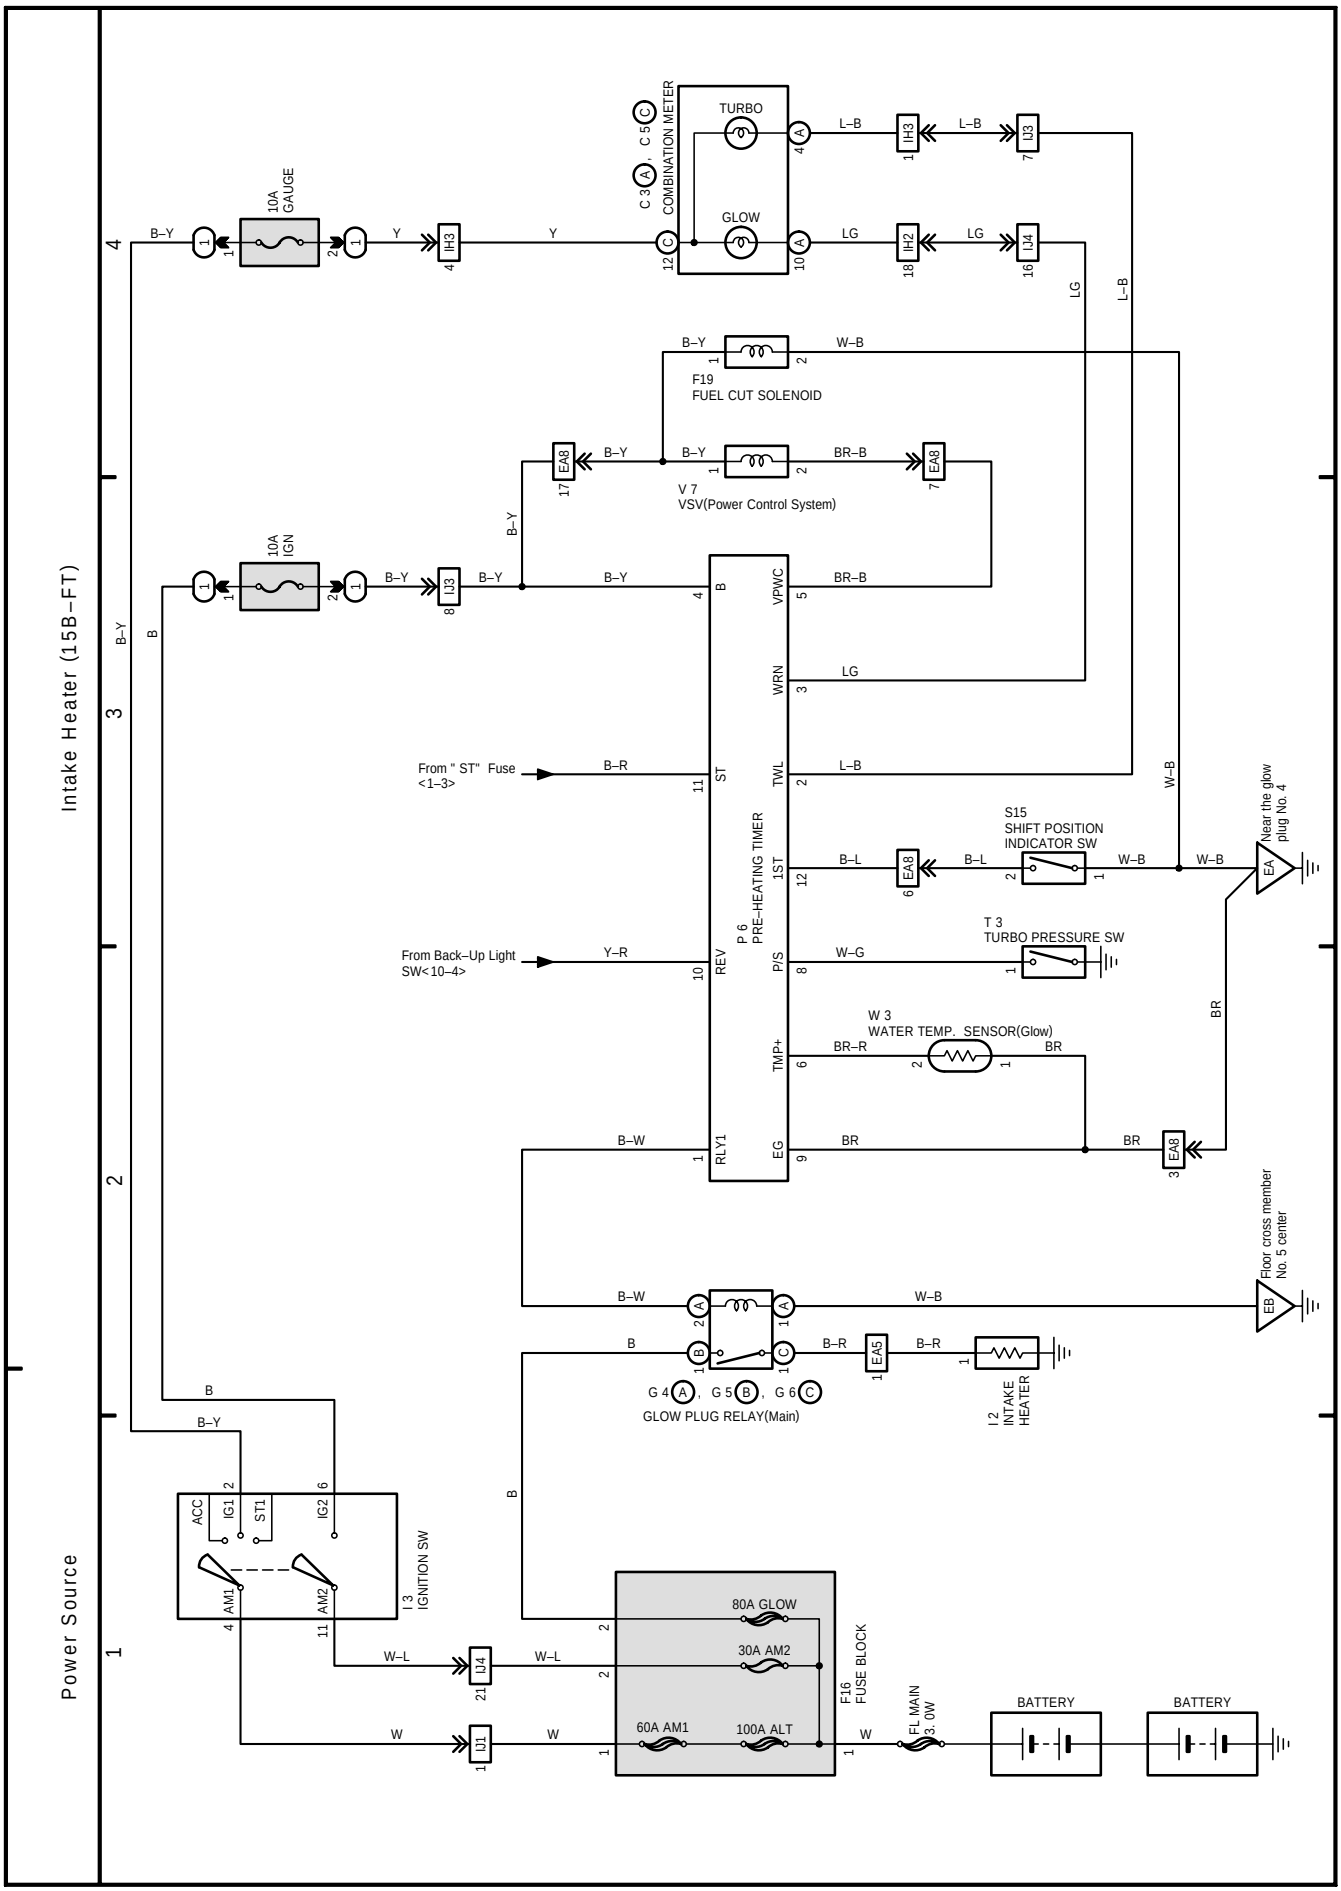

Intake Heater (15B–FT)
Power Source
10A GAUGE
10A IGN
COMBINATION METER
TURBO
GLOW
F19 FUEL CUT SOLENOID
V 7 VSV(Power Control System)
P 6 PRE–HEATING TIMER
VPWC
WRN
ST
TWL
1ST
REV
P/S
TMP+
RLY1
EG
S15 SHIFT POSITION INDICATOR SW
T 3 TURBO PRESSURE SW
W 3 WATER TEMP. SENSOR(Glow)
From " ST" Fuse <1–3>
From Back–Up Light SW<10–4>
Near the glow plug No. 4
Floor cross member No. 5 center
G 4 (A), G 5 (B), G 6 (C)
GLOW PLUG RELAY(Main)
I 2 INTAKE HEATER
I 3 IGNITION SW
ACC
IG1
ST1
IG2
AM1
AM2
80A GLOW
30A AM2
60A AM1
100A ALT
F16 FUSE BLOCK
FL MAIN 3. 0W
BATTERY
BATTERY

7 COASTER