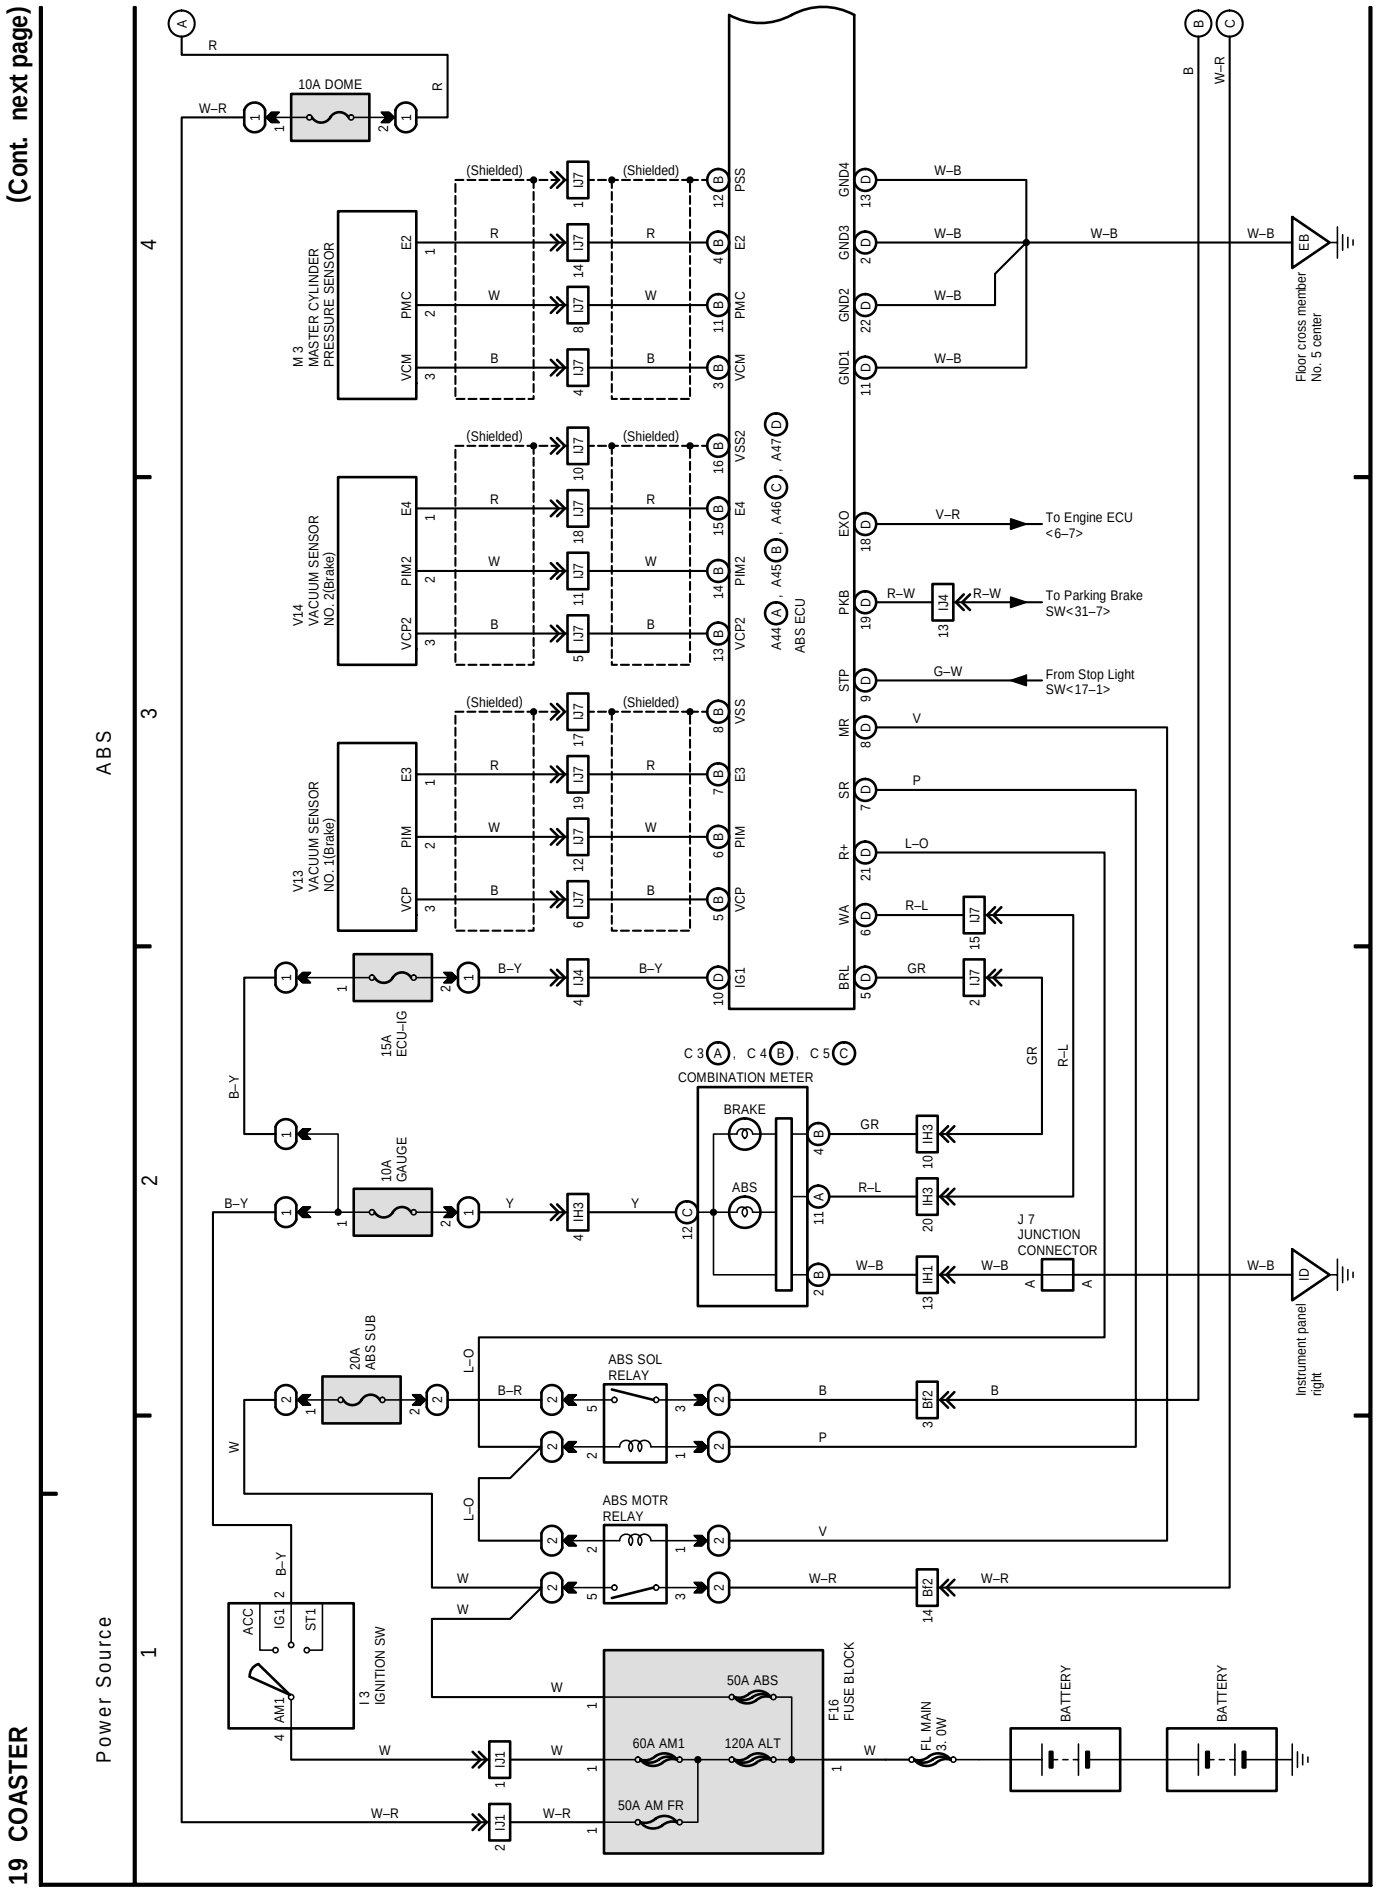

(Cont. next page)
19 COASTER
Power Source
ABS
10A DOME
M 3 MASTER CYLINDER PRESSURE SENSOR
V14 VACUUM SENSOR NO. 2(Brake)
V13 VACUUM SENSOR NO. 1(Brake)
(Shielded)
A44 A45 A46 A47 ABS ECU
To Engine ECU <6–7>
To Parking Brake SW<31–7>
From Stop Light SW<17–1>
15A ECU–IG
10A GAUGE
20A ABS SUB
C 3 C 4 C 5 COMBINATION METER
BRAKE
ABS
J 7 JUNCTION CONNECTOR
ABS SOL RELAY
ABS MOTR RELAY
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
50A ABS
60A AM1
120A ALT
50A AM FR
FL MAIN 3. 0W
BATTERY
BATTERY
Floor cross member No. 5 center
Instrument panel right

19 COASTER (Cont' d)

