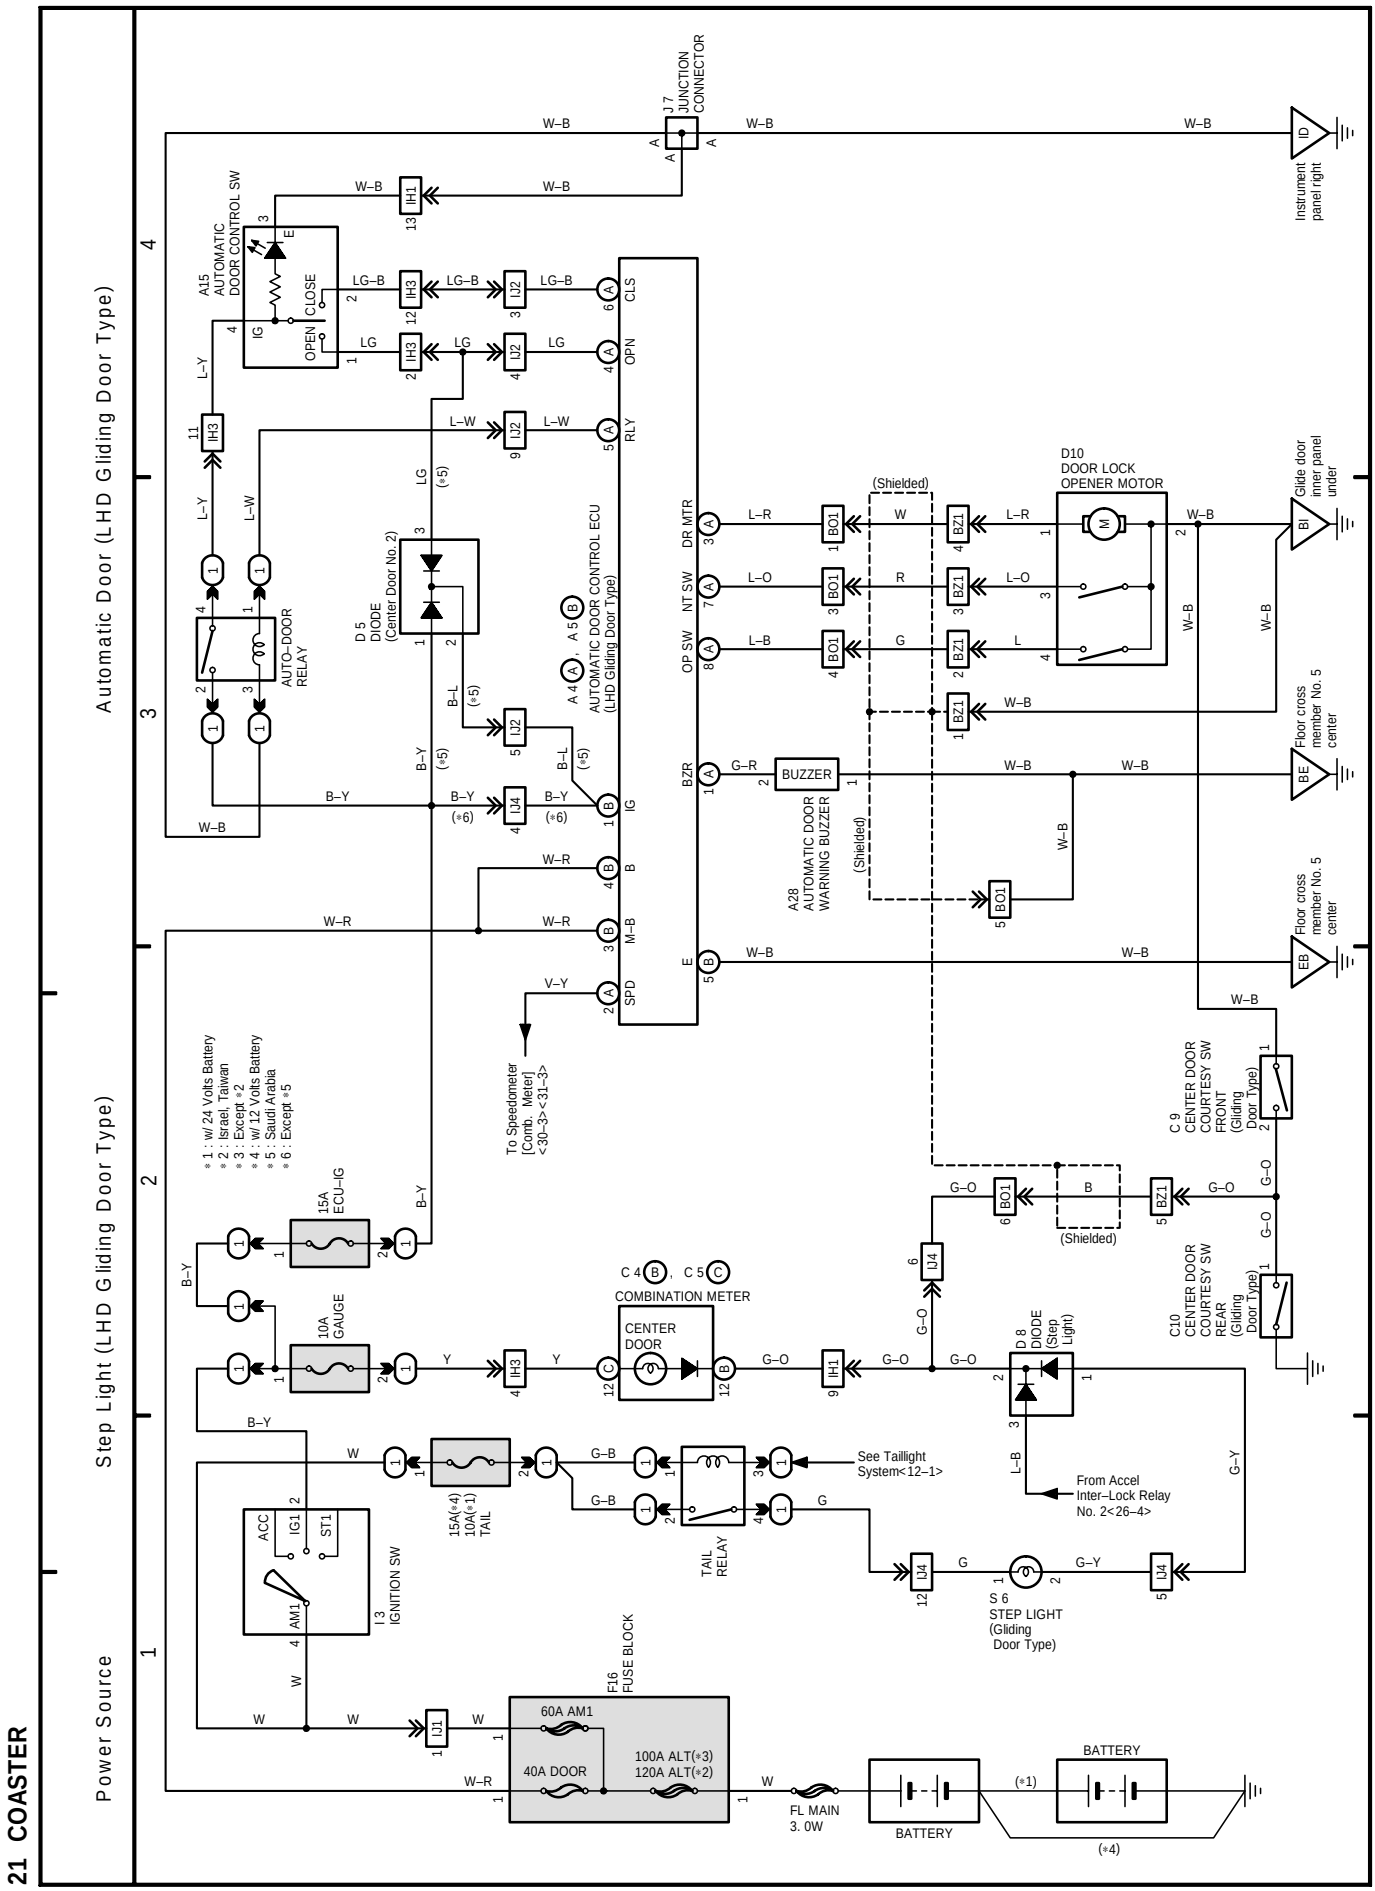

21 COASTER
Power Source
Step Light (LHD Gliding Door Type)
Automatic Door (LHD Gliding Door Type)
J 7 JUNCTION CONNECTOR
A15 AUTOMATIC DOOR CONTROL SW
AUTO–DOOR RELAY
D 5 DIODE (Center Door No. 2)
AUTOMATIC DOOR CONTROL ECU (LHD Gliding Door Type)
D10 DOOR LOCK OPENER MOTOR
BUZZER
A28 AUTOMATIC DOOR WARNING BUZZER
Instrument panel right
Glide door inner panel under
Floor cross member No. 5 center
Floor cross member No. 5 center
To Speedometer [Comb. Meter] <30–3><31–3>
15A ECU–IG
10A GAUGE
C 4 (B), C 5 (C) COMBINATION METER
CENTER DOOR
D 8 DIODE (Step Light)
C 9 CENTER DOOR COURTESY SW FRONT (Gliding Door Type)
C10 CENTER DOOR COURTESY SW REAR (Gliding Door Type)
(Shielded)
See Taillight System<12–1>
From Accel Inter–Lock Relay No. 2<26–4>
15A(*4) 10A(*1) TAIL
TAIL RELAY
I 3 IGNITION SW
S 6 STEP LIGHT (Gliding Door Type)
F16 FUSE BLOCK
60A AM1
40A DOOR
100A ALT(*3) 120A ALT(*2)
FL MAIN 3. 0W
BATTERY
BATTERY
(*1)
(*4)
* 1 : w/ 24 Volts Battery
* 2 : Israel, Taiwan
* 3 : Except *2
* 4 : w/ 12 Volts Battery
* 5 : Saudi Arabia
* 6 : Except *5