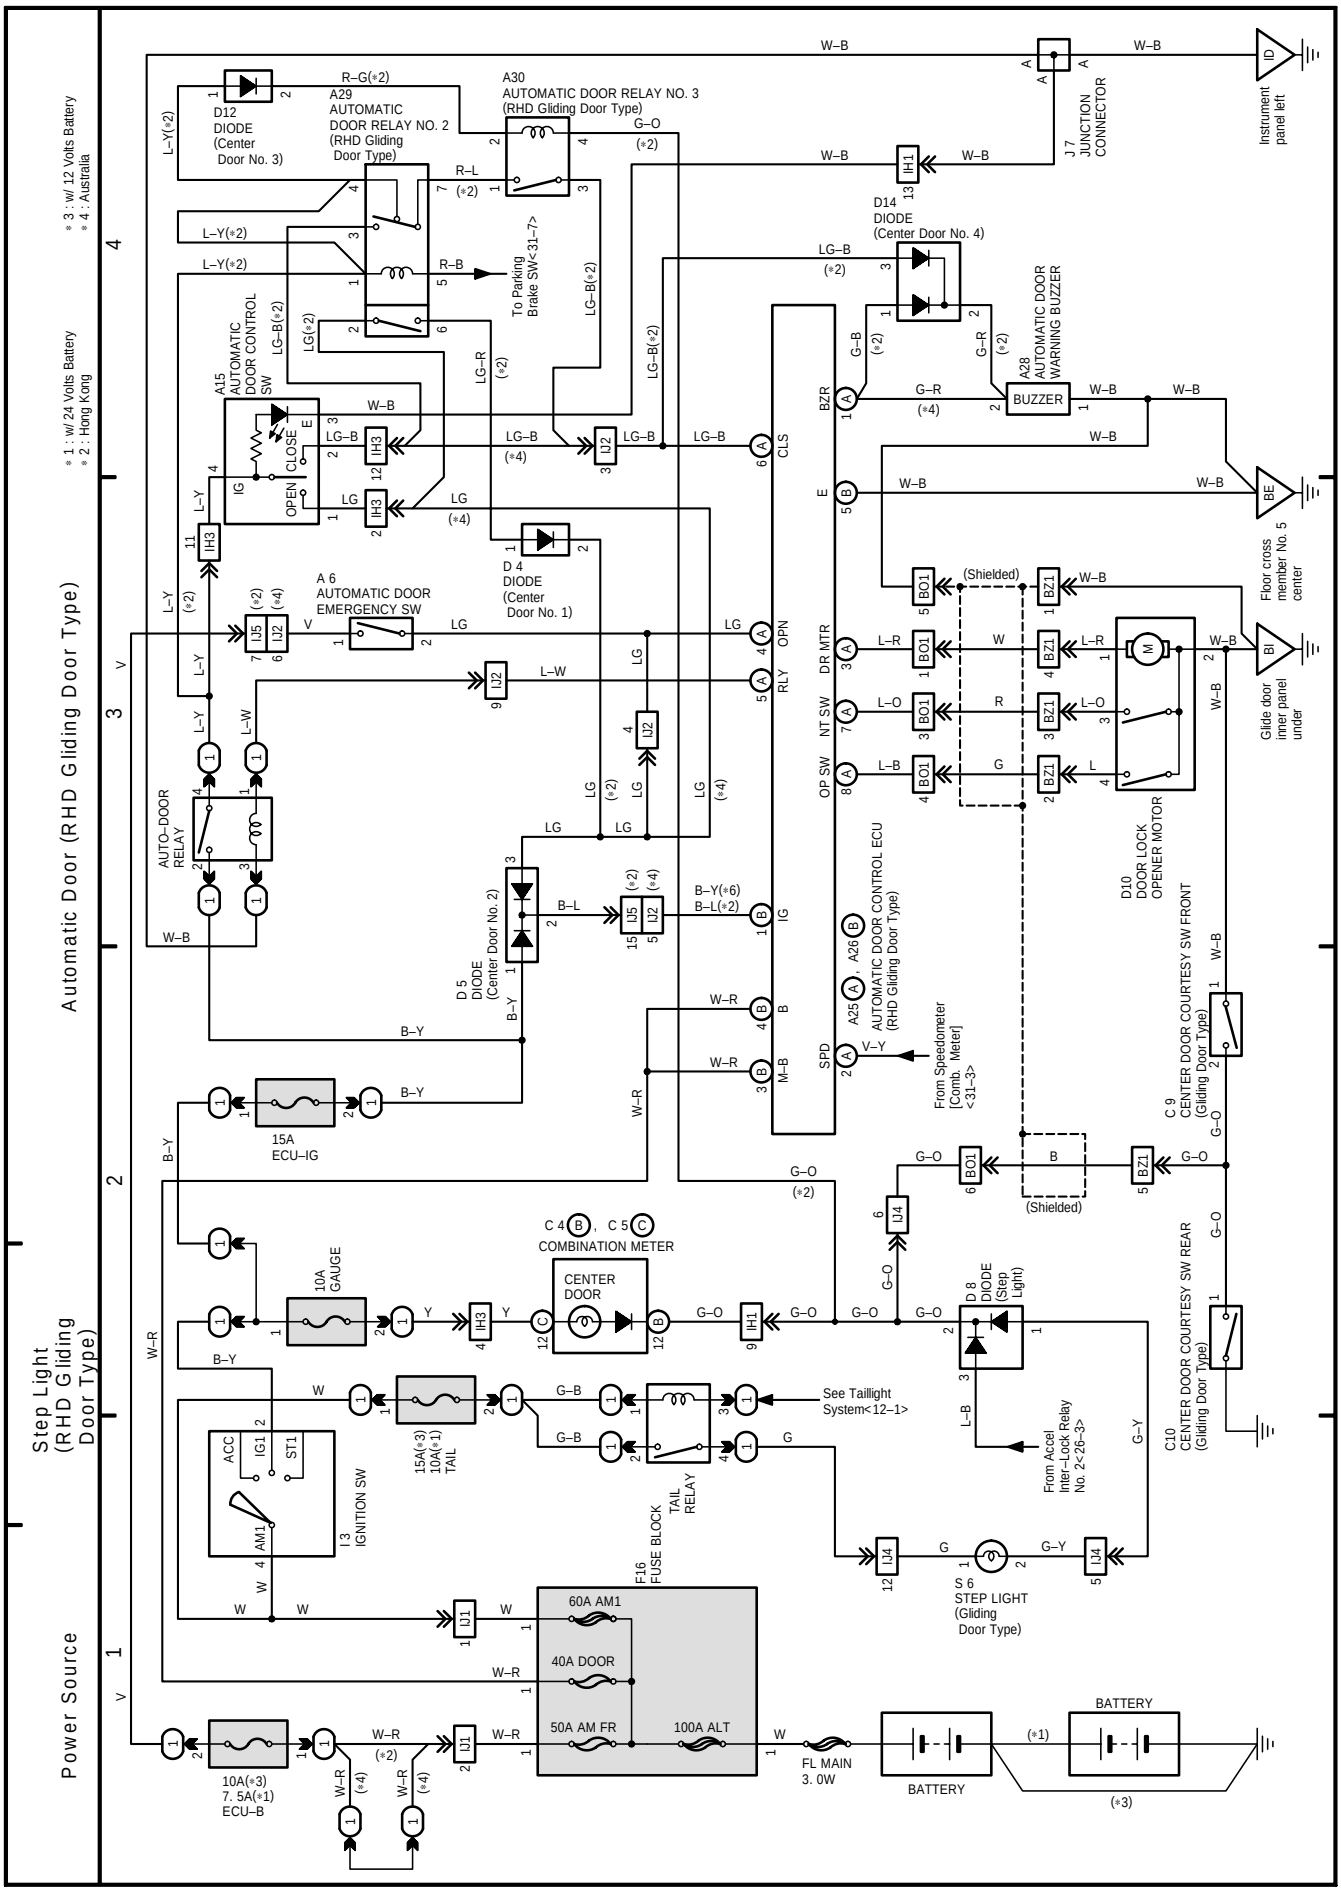

Power Source
Step Light (RHD Gliding Door Type)
Automatic Door (RHD Gliding Door Type)
* 1 : w/ 24 Volts Battery
* 2 : Hong Kong
* 3 : w/ 12 Volts Battery
* 4 : Australia
D12 DIODE (Center Door No. 3)
A29 AUTOMATIC DOOR RELAY NO. 2 (RHD Gliding Door Type)
A30 AUTOMATIC DOOR RELAY NO. 3 (RHD Gliding Door Type)
J7 JUNCTION CONNECTOR
Instrument panel left
D14 DIODE (Center Door No. 4)
A28 AUTOMATIC DOOR WARNING BUZZER
BUZZER
To Parking Brake SW<31–7>
A15 AUTOMATIC DOOR CONTROL SW
CLOSE
OPEN
IG
D 4 DIODE (Center Door No. 1)
A 6 AUTOMATIC DOOR EMERGENCY SW
Floor cross member No. 5 center
Glide door inner panel under
AUTO–DOOR RELAY
D 5 DIODE (Center Door No. 2)
15A ECU–IG
A25, A26 AUTOMATIC DOOR CONTROL ECU (RHD Gliding Door Type)
From Speedometer [Comb. Meter]
D10 DOOR LOCK OPENER MOTOR
C 9 CENTER DOOR COURTESY SW FRONT (Gliding Door Type)
C10 CENTER DOOR COURTESY SW REAR (Gliding Door Type)
(Shielded)
C 4, C 5 COMBINATION METER
10A GAUGE
CENTER DOOR
D 8 DIODE (Step Light)
See Taillight System<12–1>
From Accel Inter–Lock Relay No. 2<26–3>
15A(*3) 10A(*1) TAIL
TAIL RELAY
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
40A DOOR
50A AM FR
100A ALT
S 6 STEP LIGHT (Gliding Door Type)
10A(*3) 7. 5A(*1) ECU–B
FL MAIN 3. 0W
BATTERY
(*1)
(*3)