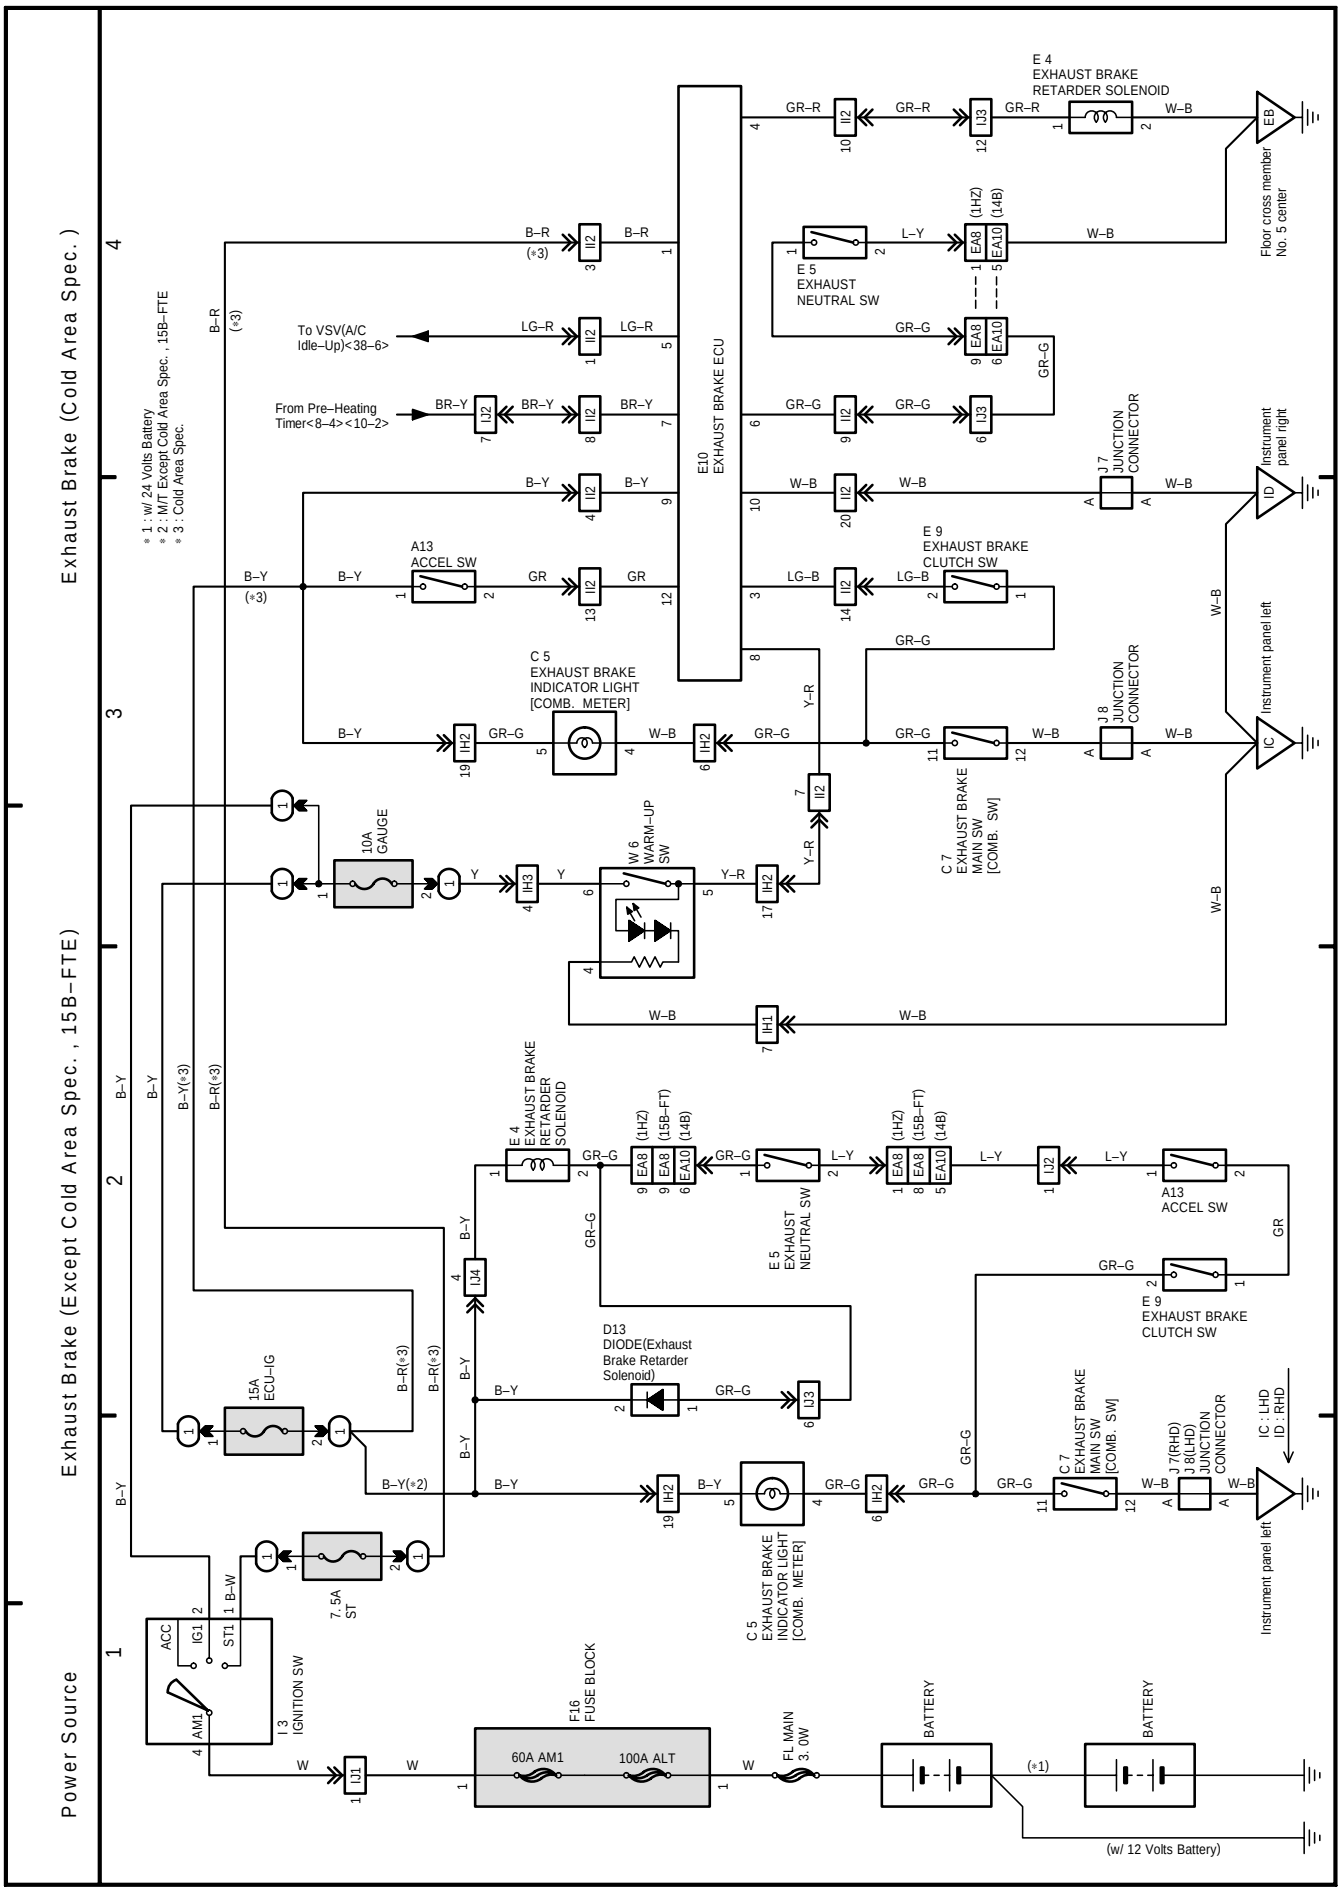

Exhaust Brake (Cold Area Spec. )
Exhaust Brake (Except Cold Area Spec. , 15B–FTE)
Power Source
* 1 : w/ 24 Volts Battery
* 2 : M/T Except Cold Area Spec. , 15B–FTE
* 3 : Cold Area Spec.
E10 EXHAUST BRAKE ECU
E 4 EXHAUST BRAKE RETARDER SOLENOID
E 5 EXHAUST NEUTRAL SW
E 9 EXHAUST BRAKE CLUTCH SW
A13 ACCEL SW
C 5 EXHAUST BRAKE INDICATOR LIGHT [COMB. METER]
C 7 EXHAUST BRAKE MAIN SW [COMB. SW]
W 6 WARM–UP SW
10A GAUGE
15A ECU–IG
7.5A ST
D13 DIODE(Exhaust Brake Retarder Solenoid)
I 3 IGNITION SW
F16 FUSE BLOCK
60A AM1
100A ALT
FL MAIN 3. 0W
BATTERY
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
J 7(RHD) J 8(LHD) JUNCTION CONNECTOR
Instrument panel right
Instrument panel left
Floor cross member No. 5 center
To VSV(A/C Idle–Up)<38–6>
From Pre–Heating Timer<8–4><10–2>
IC : LHD
ID : RHD
(w/ 12 Volts Battery)