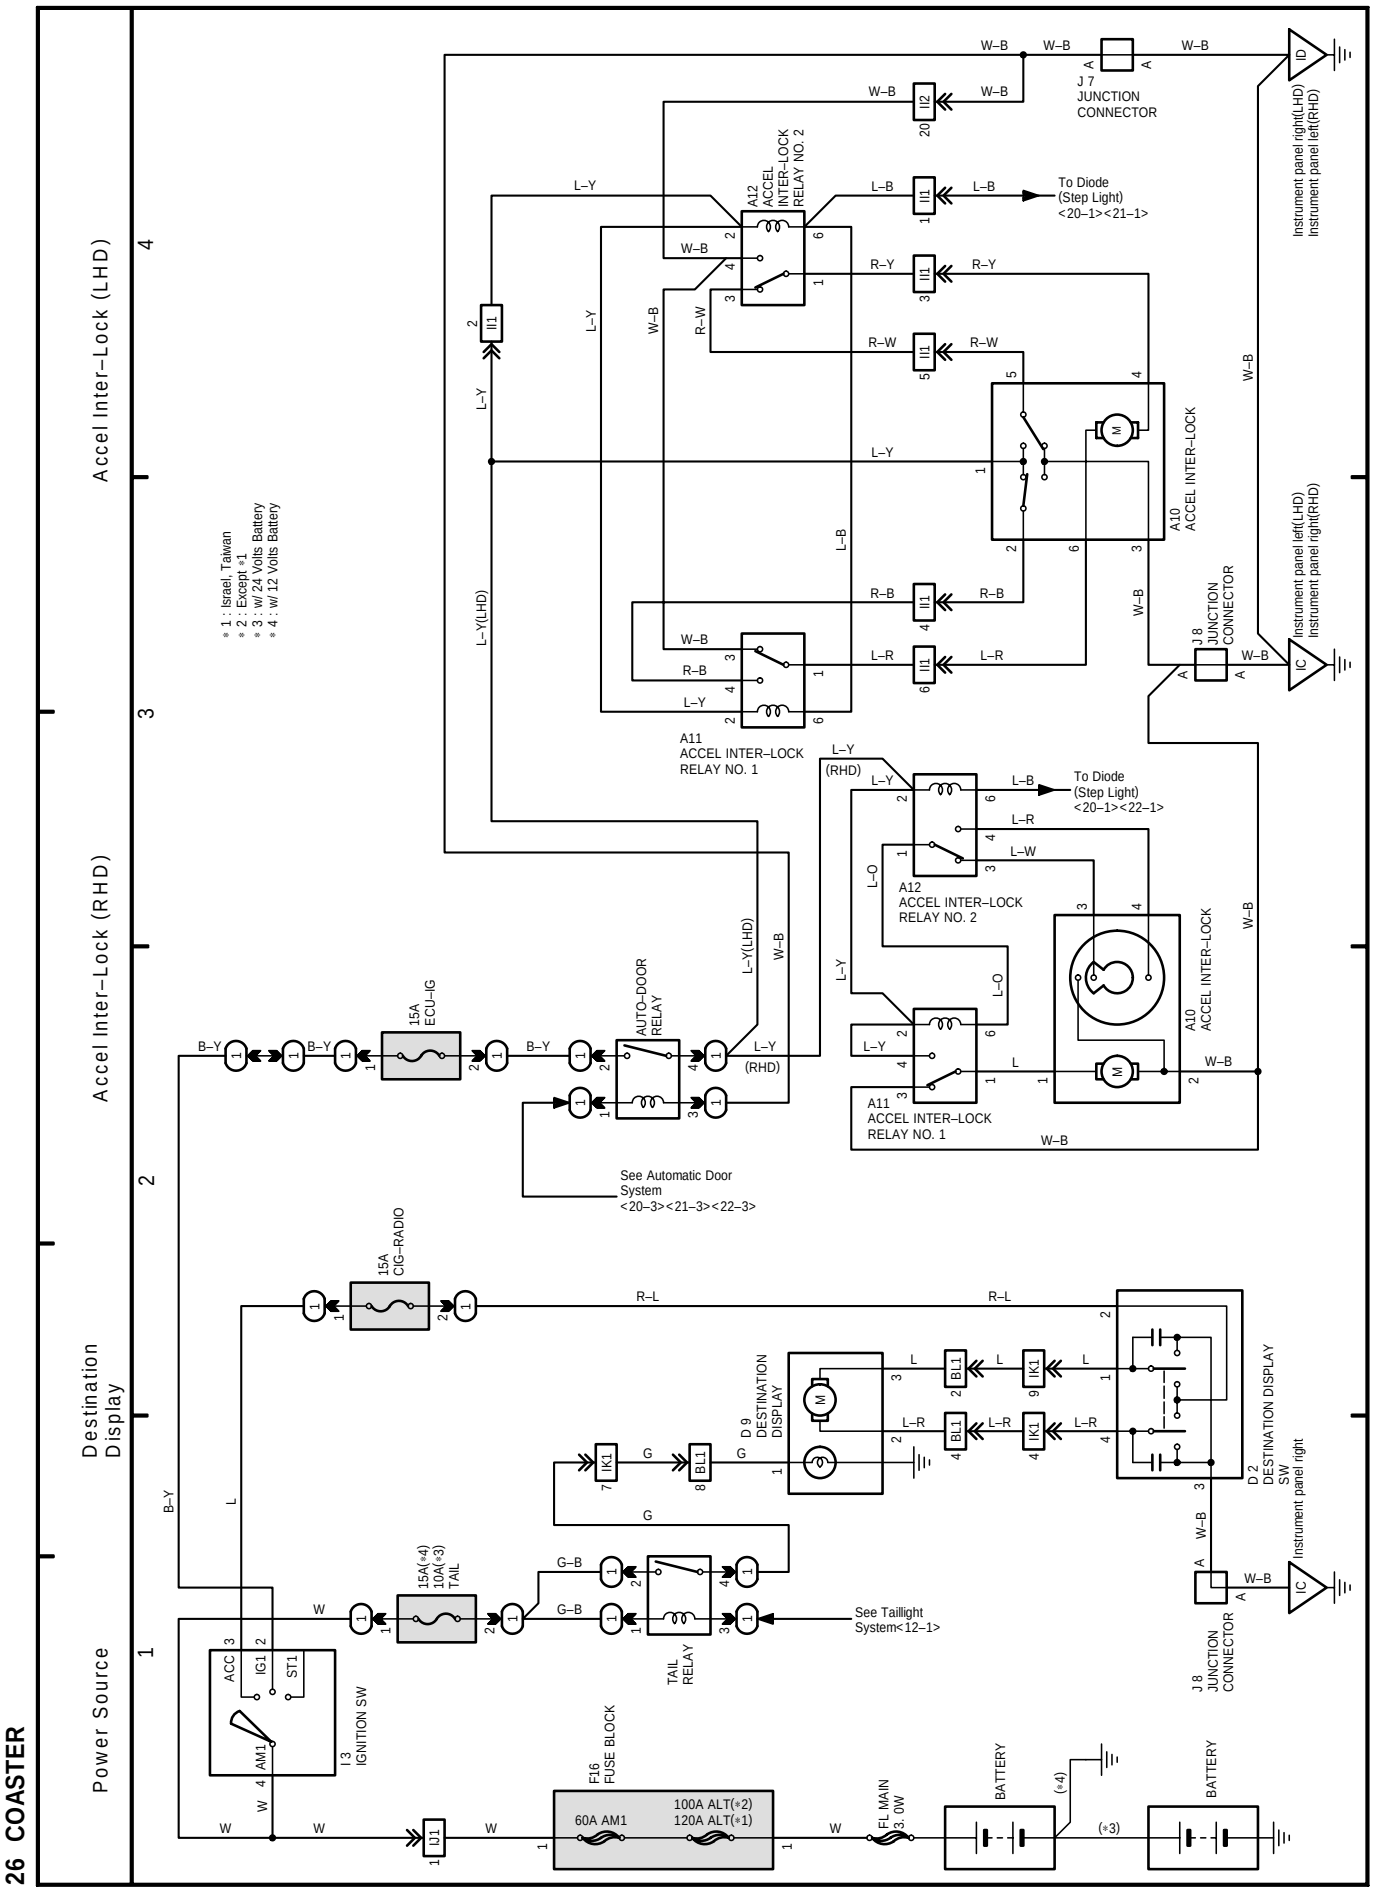

Accel Inter–Lock (LHD)
Accel Inter–Lock (RHD)
Destination Display
Power Source
1
2
3
4
* 1 : Israel, Taiwan
* 2 : Except *1
* 3 : w/ 24 Volts Battery
* 4 : w/ 12 Volts Battery
J 7 JUNCTION CONNECTOR
J 8 JUNCTION CONNECTOR
A12 ACCEL INTER–LOCK RELAY NO. 2
A11 ACCEL INTER–LOCK RELAY NO. 1
A10 ACCEL INTER–LOCK
To Diode (Step Light) <20–1><21–1>
To Diode (Step Light) <20–1><22–1>
Instrument panel right(LHD)
Instrument panel left(RHD)
Instrument panel left(LHD)
Instrument panel right(RHD)
15A ECU–IG
AUTO–DOOR RELAY
See Automatic Door System <20–3><21–3><22–3>
15A CIG–RADIO
D 9 DESTINATION DISPLAY
D 2 DESTINATION DISPLAY SW
Instrument panel right
15A(*4) 10A(*3) TAIL
TAIL RELAY
See Taillight System<12–1>
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
100A ALT(*2)
120A ALT(*1)
FL MAIN 3. 0W
BATTERY
(*4)
(*3)
(RHD)
L–Y(LHD)
W–B
L–Y
L–B
R–Y
R–W
R–B
L–R
L–W
L–O
B–Y
R–L
G
G–B
L
W