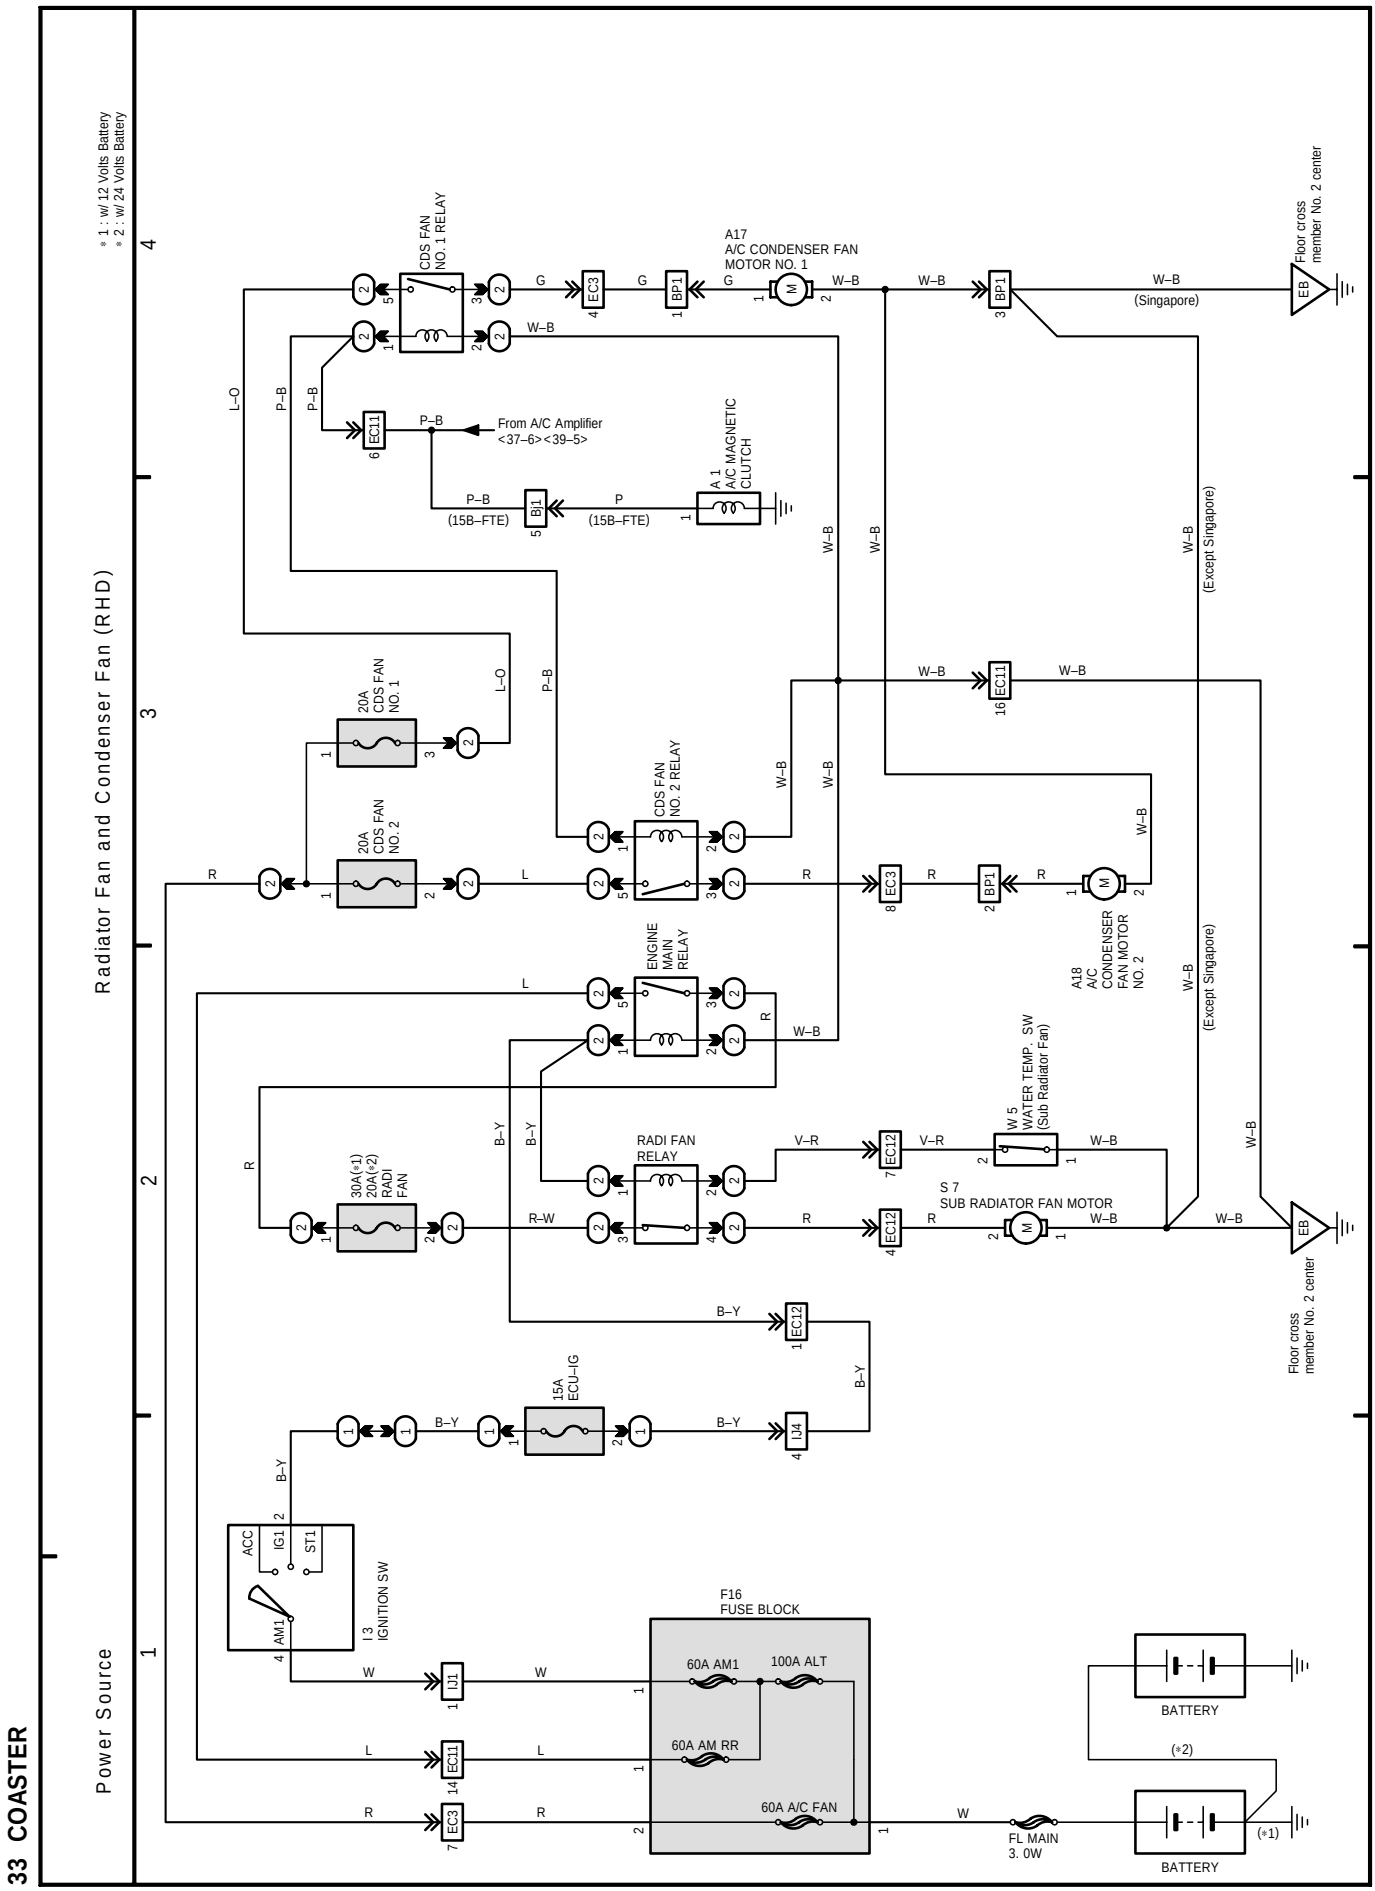

33 COASTER
Power Source
Radiator Fan and Condenser Fan (RHD)
* 1 : w/ 12 Volts Battery
* 2 : w/ 24 Volts Battery
CDS FAN NO. 1 RELAY
A17 A/C CONDENSER FAN MOTOR NO. 1
Floor cross member No. 2 center
(Singapore)
(Except Singapore)
From A/C Amplifier <37–6><39–5>
A 1 A/C MAGNETIC CLUTCH
20A CDS FAN NO. 1
20A CDS FAN NO. 2
CDS FAN NO. 2 RELAY
ENGINE MAIN RELAY
A18 A/C CONDENSER FAN MOTOR NO. 2
W 5 WATER TEMP. SW (Sub Radiator Fan)
RADI FAN RELAY
30A(*1) 20A(*2) RADI FAN
S 7 SUB RADIATOR FAN MOTOR
15A ECU–IG
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
60A AM1
100A ALT
60A AM RR
60A A/C FAN
FL MAIN 3. 0W
BATTERY
(*1)
(*2)