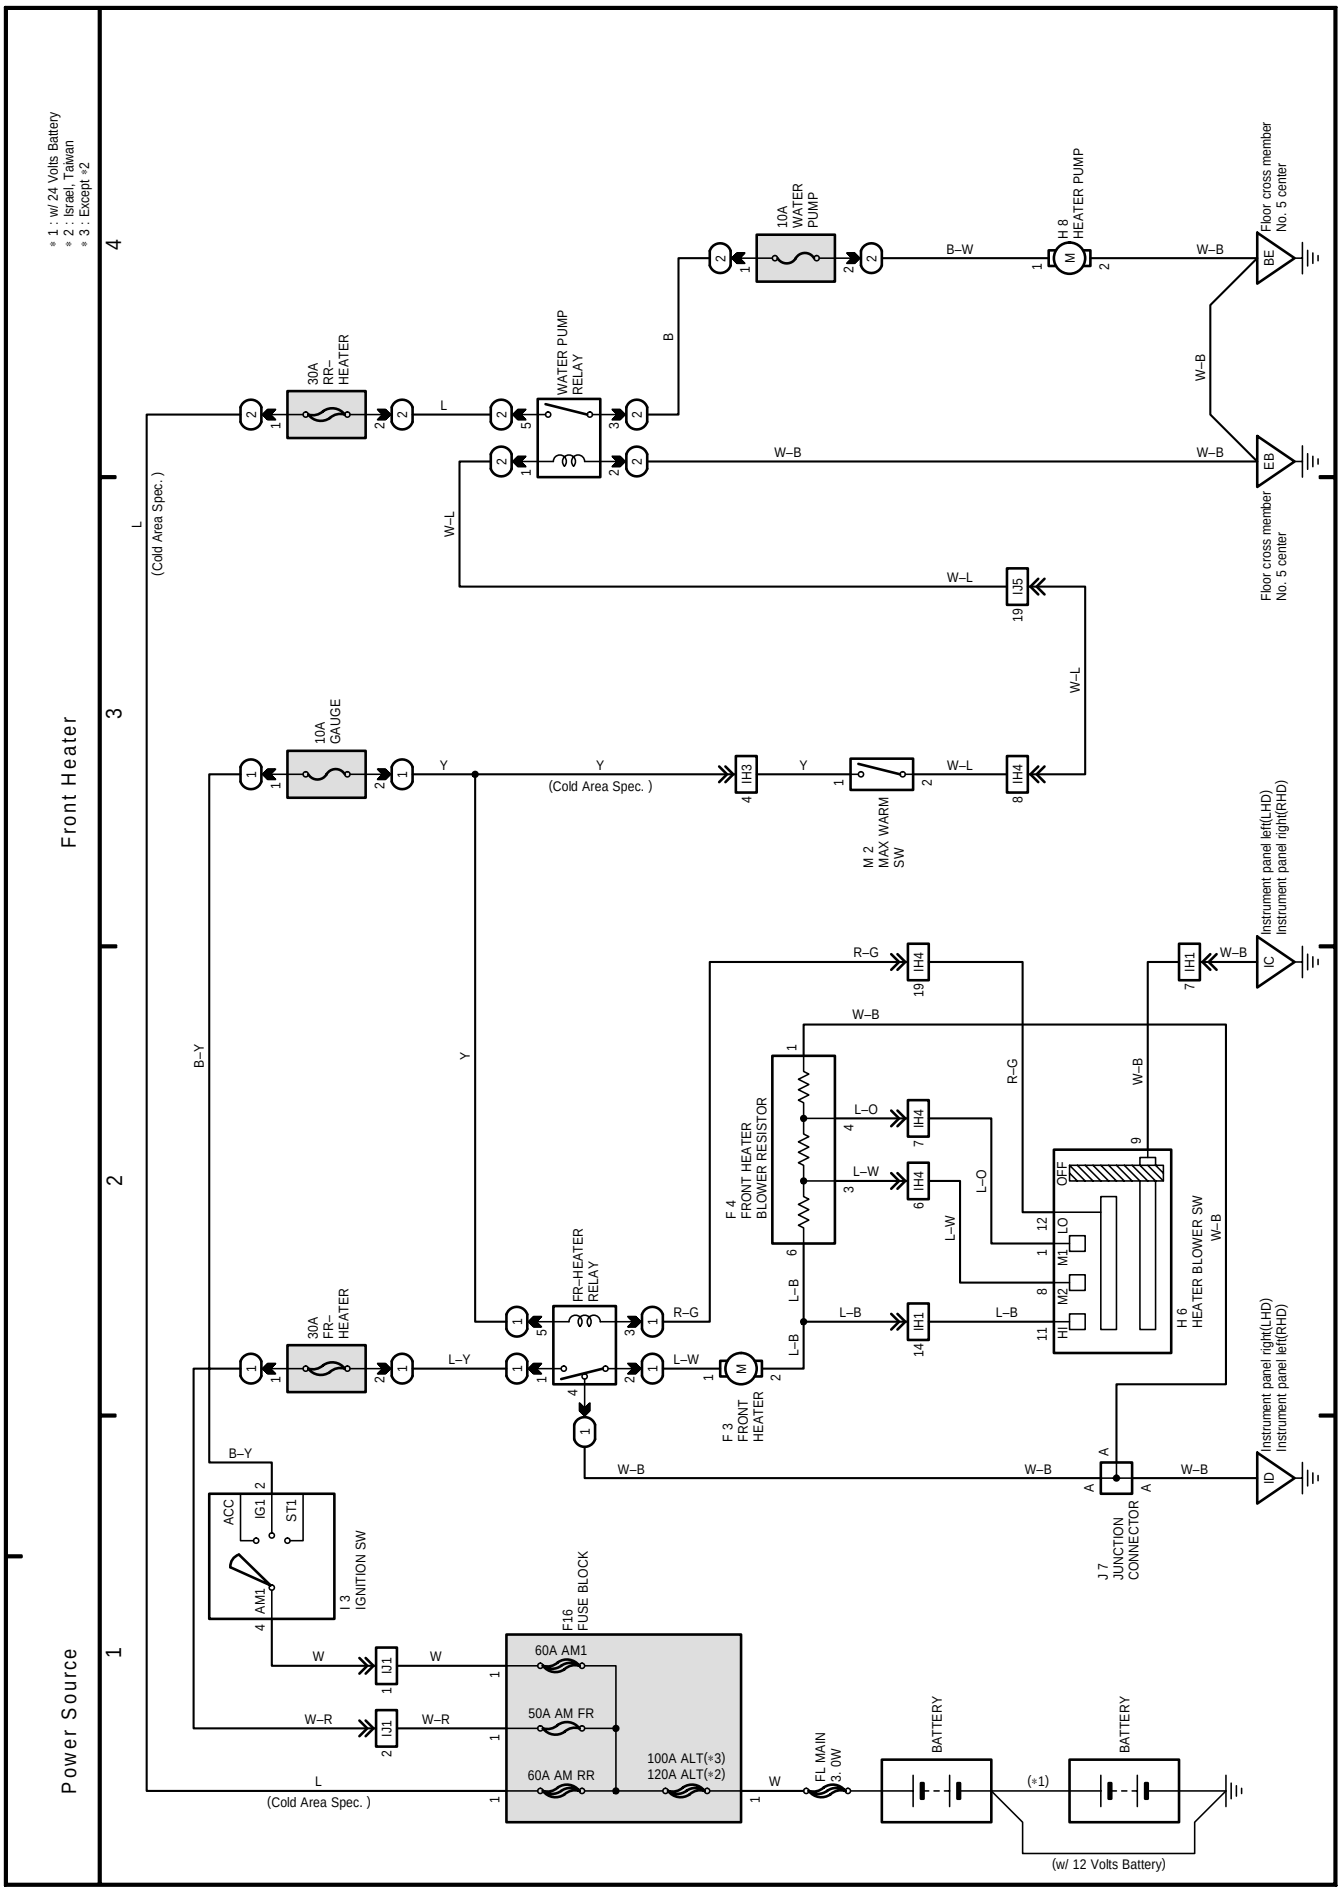

* 1 : w/ 24 Volts Battery
* 2 : Israel, Taiwan
* 3 : Except *2
Front Heater
Power Source
1
2
3
4
34 COASTER
10A WATER PUMP
H 8 HEATER PUMP
Floor cross member No. 5 center
BE
EB
30A RR– HEATER
WATER PUMP RELAY
10A GAUGE
(Cold Area Spec. )
IJ5
IH3
IH4
M 2 MAX WARM SW
IH1
IC
Instrument panel left(LHD) Instrument panel right(RHD)
F 4 FRONT HEATER BLOWER RESISTOR
H 6 HEATER BLOWER SW
OFF
LO
M1
M2
H1
30A FR– HEATER
FR–HEATER RELAY
F 3 FRONT HEATER
ID
J 7 JUNCTION CONNECTOR
I 3 IGNITION SW
ACC
IG1
ST1
AM1
IJ1
F16 FUSE BLOCK
60A AM1
50A AM FR
60A AM RR
100A ALT(*3)
120A ALT(*2)
FL MAIN
3. 0W
BATTERY
(*1)
(w/ 12 Volts Battery)