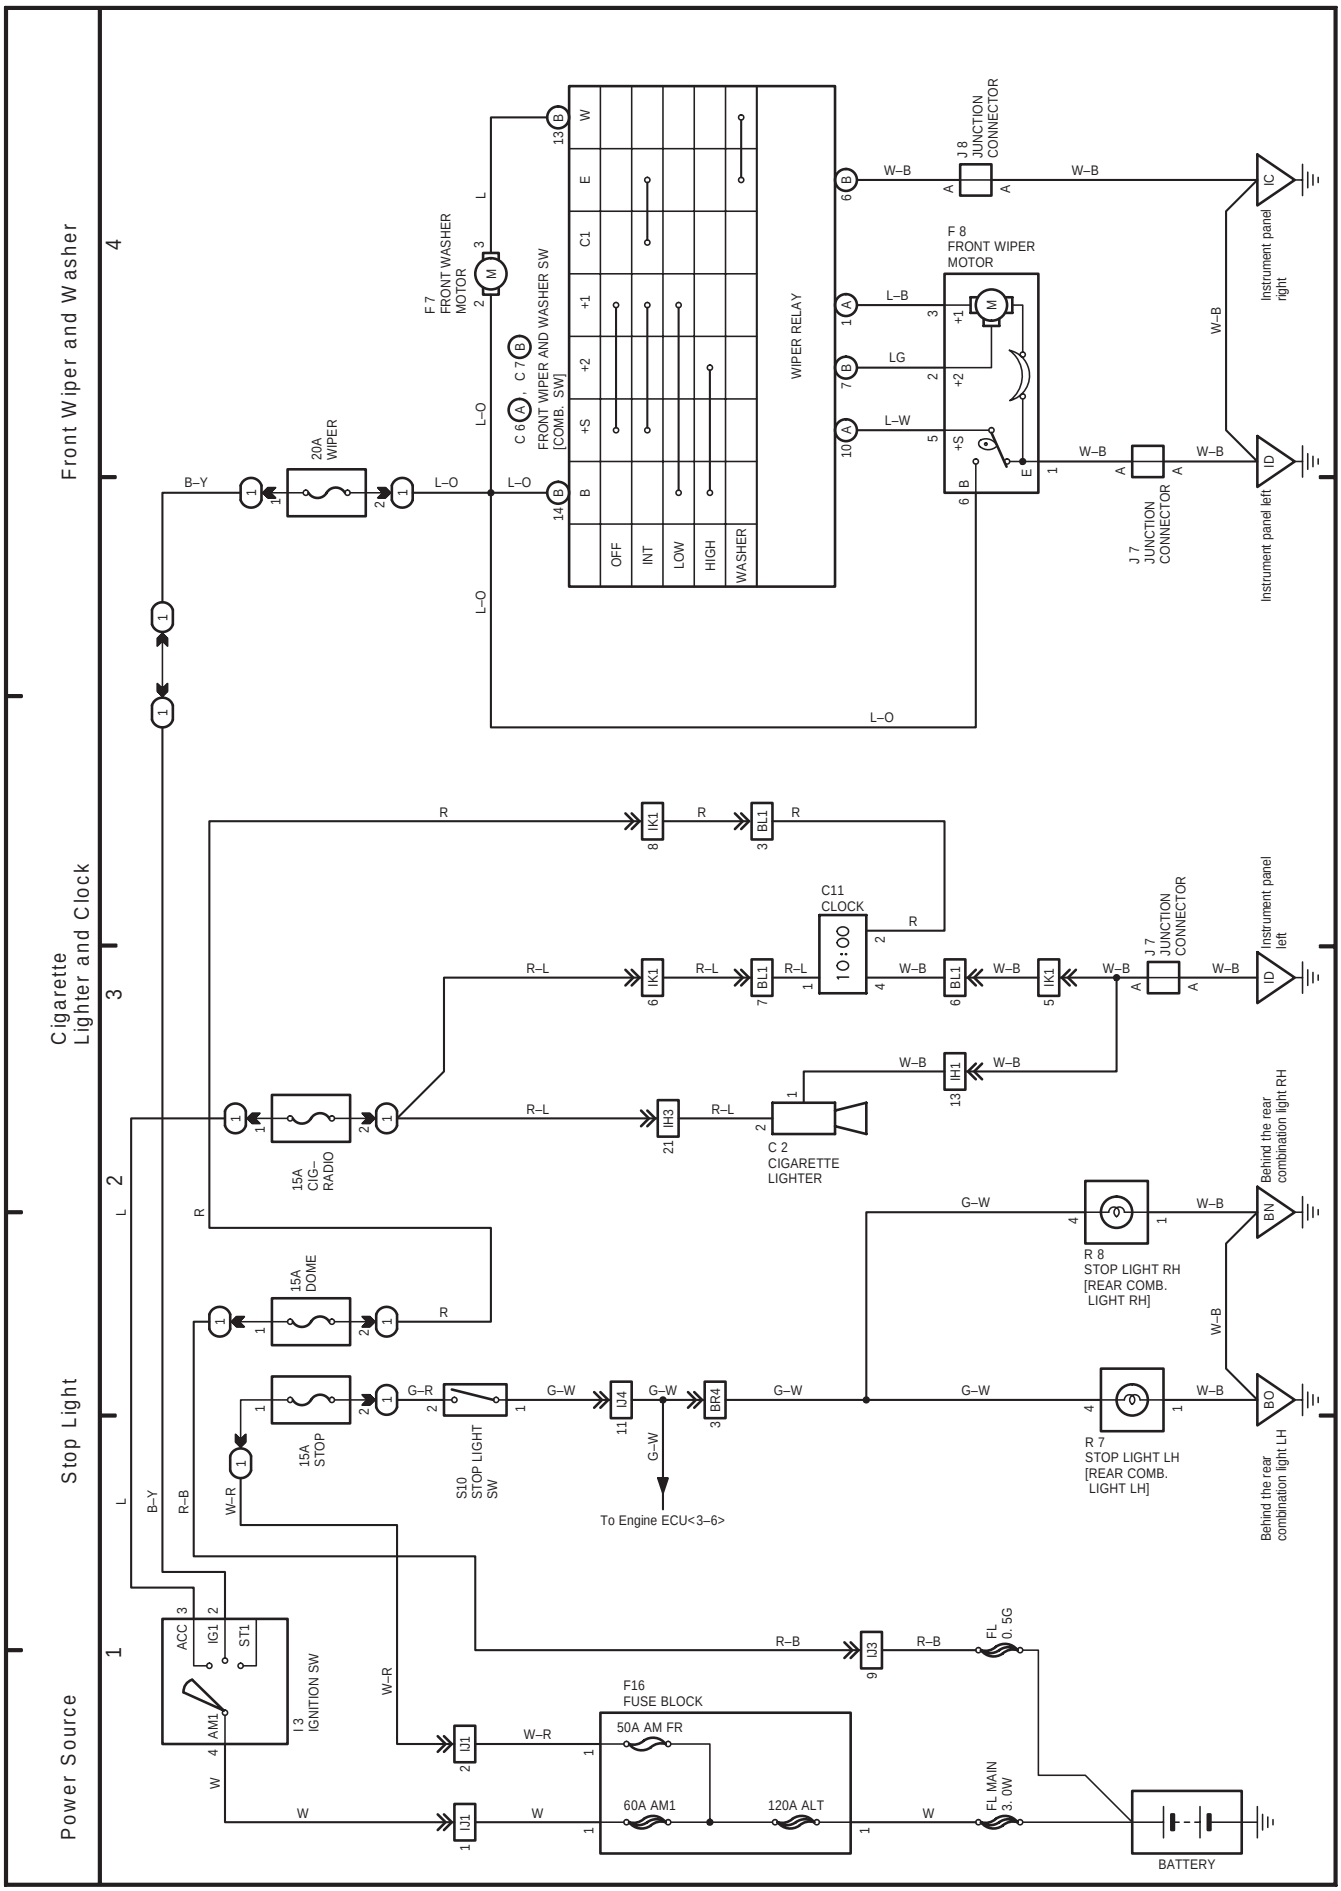

Power Source
Stop Light
Cigarette Lighter and Clock
Front Wiper and Washer
1
2
3
4
BATTERY
I 3 IGNITION SW
ACC
IG1
ST1
AM1
F16 FUSE BLOCK
50A AM FR
60A AM1
120A ALT
FL MAIN 3. 0W
FL 0. 5G
15A STOP
15A DOME
15A CIG– RADIO
20A WIPER
S10 STOP LIGHT SW
To Engine ECU<3–6>
C 2 CIGARETTE LIGHTER
C11 CLOCK
10:00
R 7 STOP LIGHT LH [REAR COMB. LIGHT LH]
R 8 STOP LIGHT RH [REAR COMB. LIGHT RH]
Behind the rear combination light LH
Behind the rear combination light RH
F 7 FRONT WASHER MOTOR
FRONT WIPER AND WASHER SW [COMB. SW]
C 6 , C 7
WIPER RELAY
OFF
INT
LOW
HIGH
WASHER
F 8 FRONT WIPER MOTOR
J 8 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
Instrument panel right
Instrument panel left
IC
ID
BO
BN
IJ1
IJ3
IJ4
IK1
IH1
IH3
BL1
BR4
W–B
R–L
L–O
L–B
LG
L–W
G–W
G–R
R–B
W–R
B–Y
R
L
W