

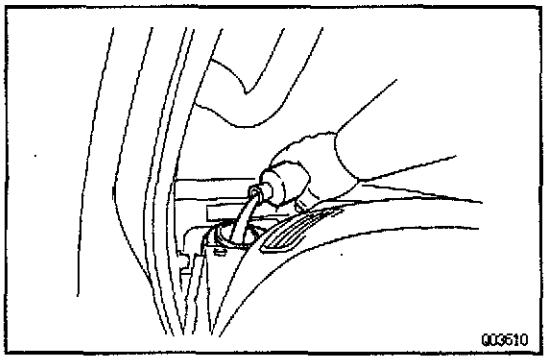


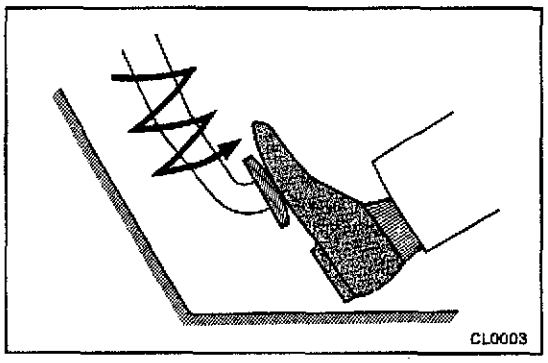

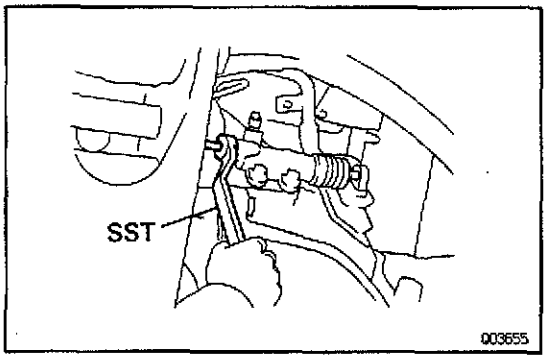

CLUTCH SYSTEM BLEEDING

CL045-01

HINT: If any work is done on the clutch system or if air is suspected on the clutch lines, bleed the system of air.

NOTICE: Do not let brake fluid remain on a painted surface. Wash it off immediately.

1. **FILL CLUTCH RESERVOIR WITH BRAKE FLUID**
Check the reservoir frequently. Add fluid if necessary.
2. **CONNECT VINYL TUBE TO BLEEDER PLUG**
Insert the other end of the tube in a half–full container of brake fluid.
3. **BLEED CLUTCH LINE**

(a) *Slowly pump the clutch pedal several times.*

(b) While pressing on the pedal, loosen the bleeder plug until the fluid starts to run out. Then close the bleeder plug.

(c) Repeat this procedure until there are no more air bubbles in the fluid.

4. **TIGHTEN BLEEDER PLUG**
Torque: 11 N·m (110 kgf·cm, 8 ft·lbf)
SST 09023–00100