
TILT STEERING COLUMN

COMPONENTS


SR0XW–01

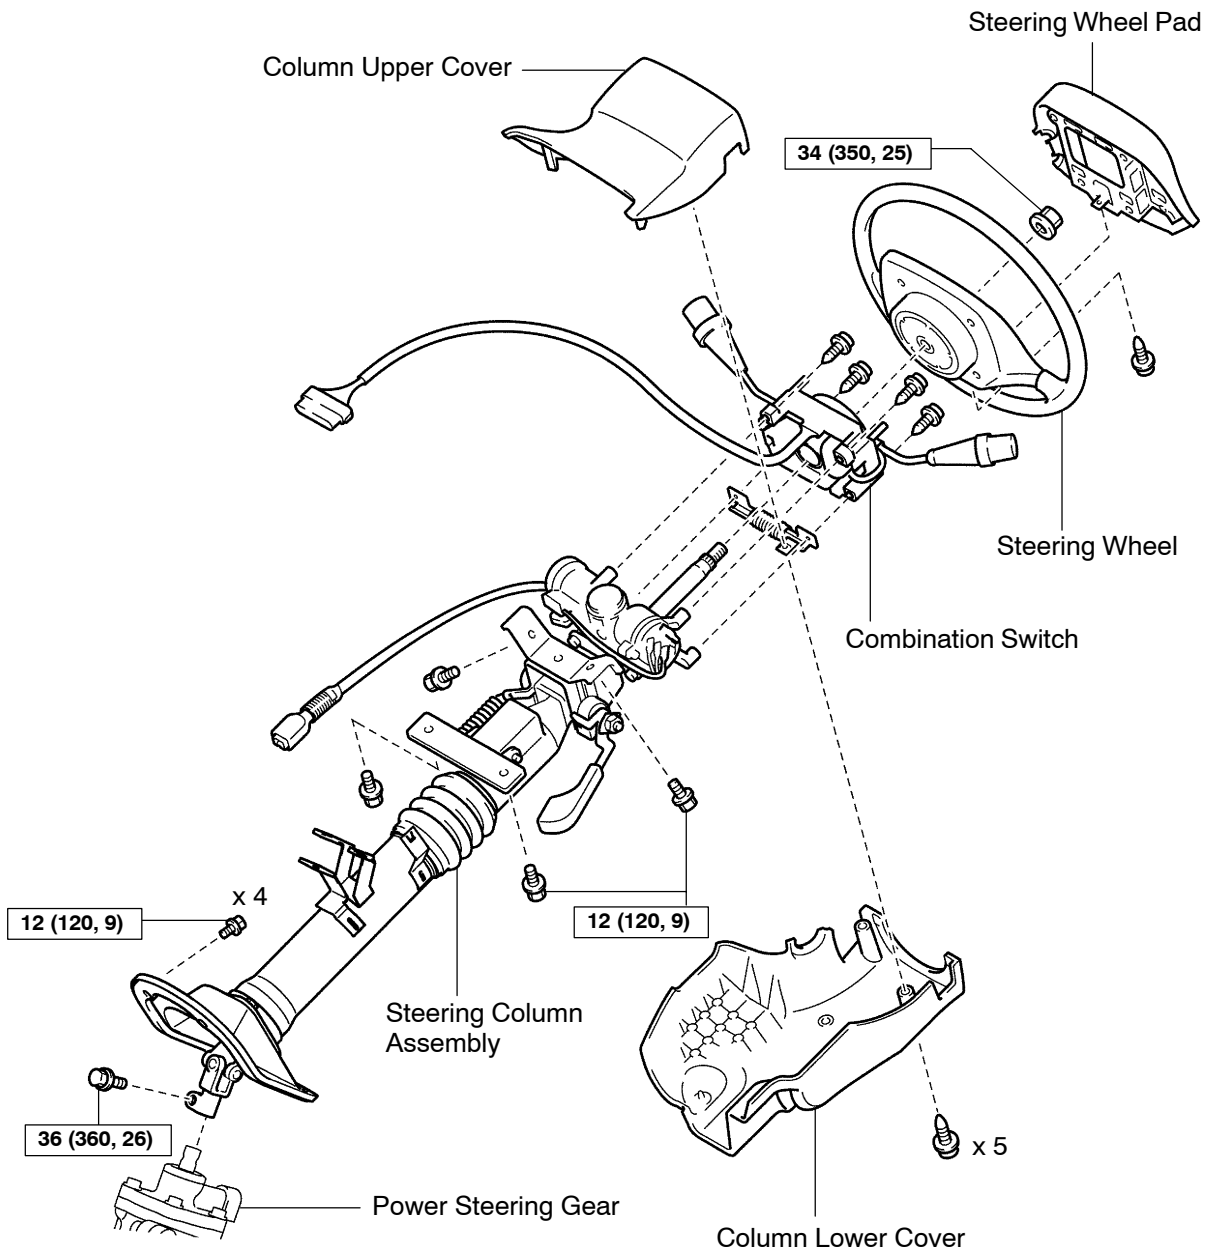

N·m (kgf·cm, ft·lbf) : Specified torque

P

F10060

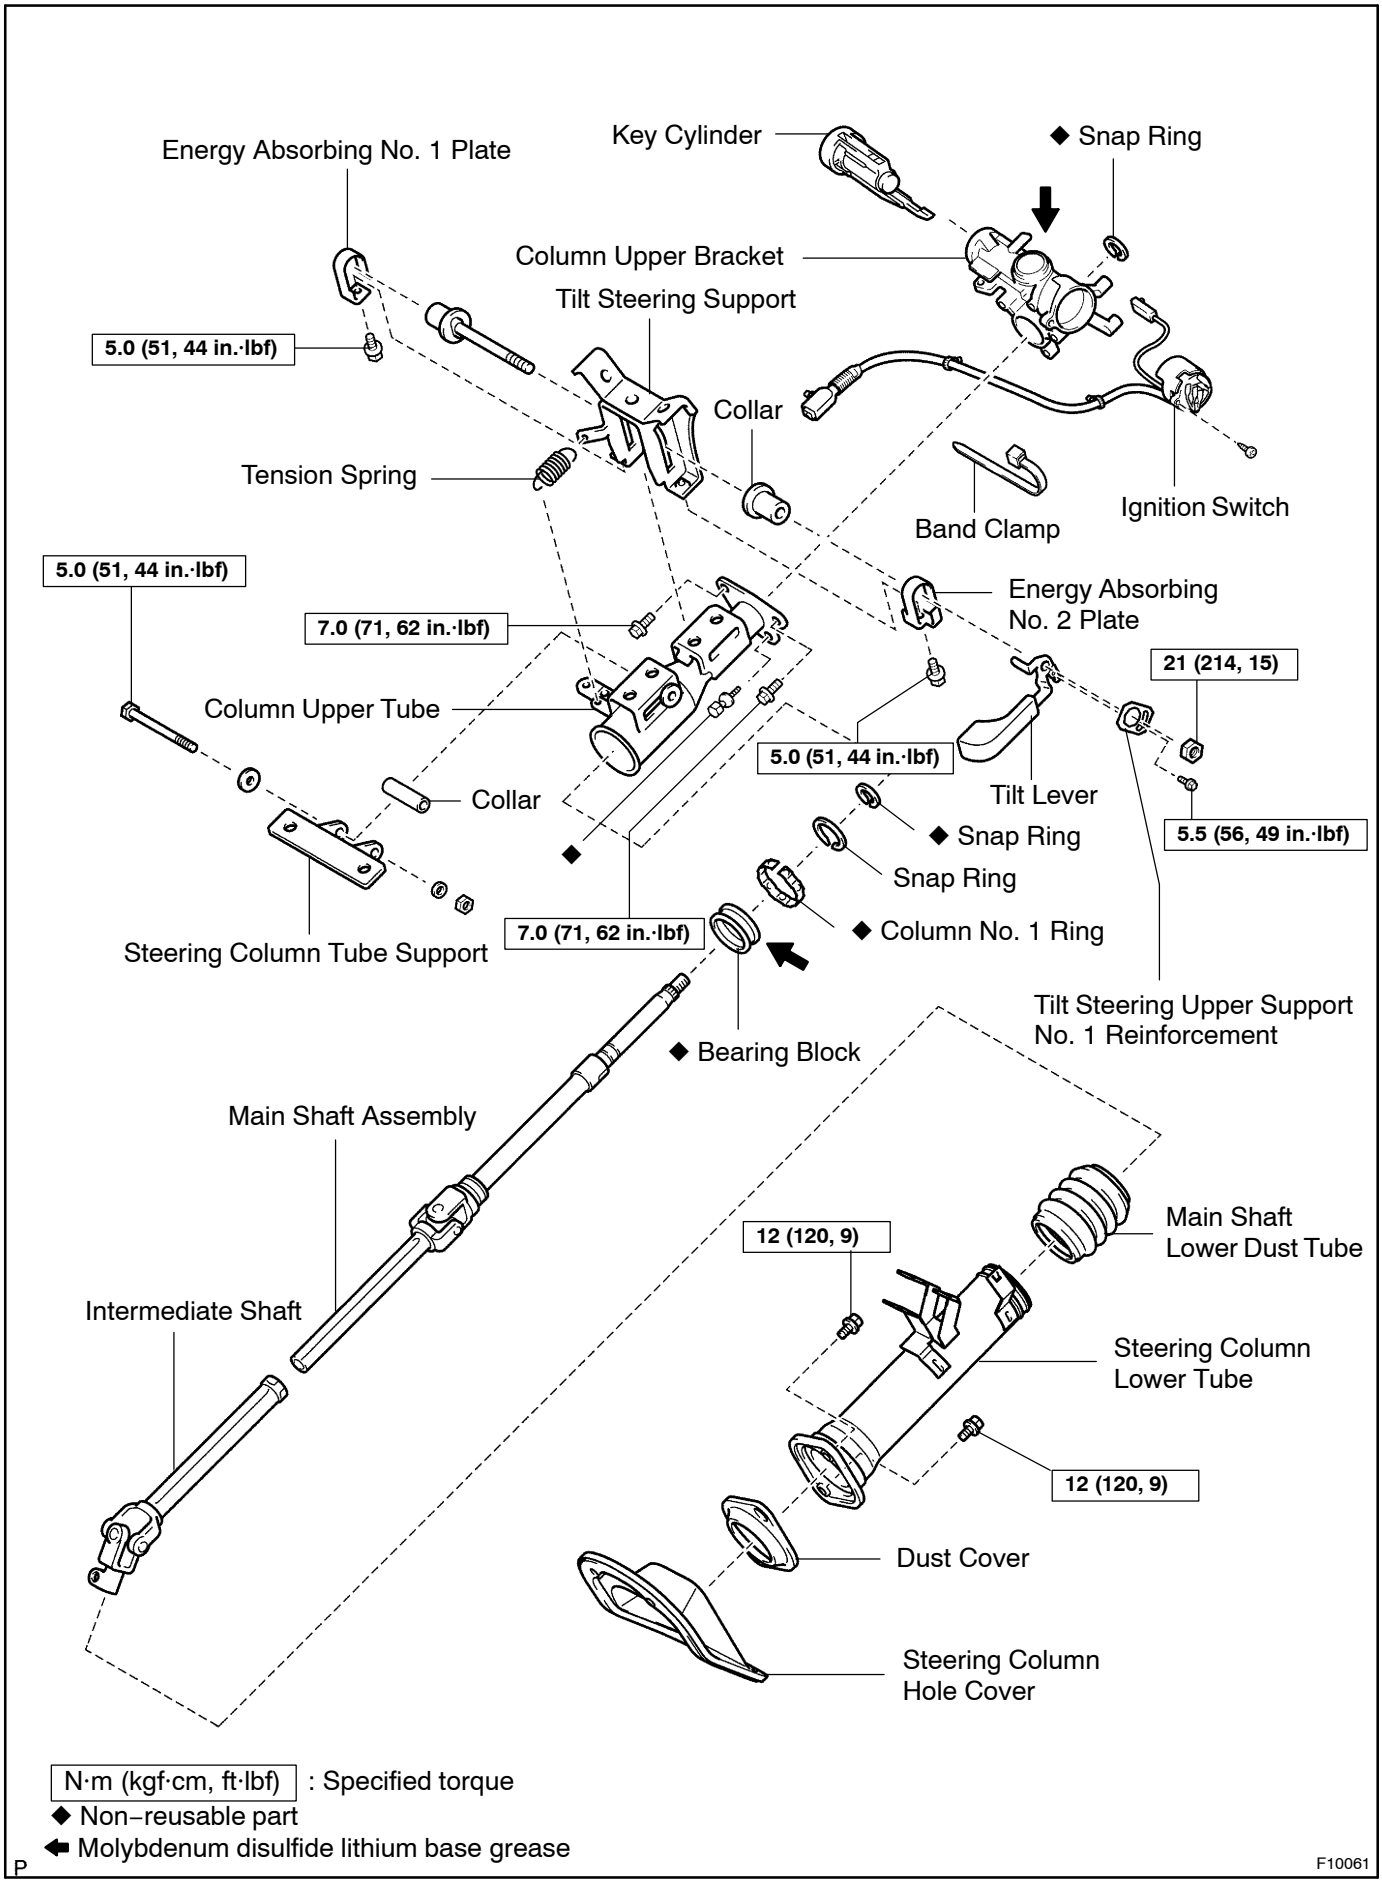
Energy Absorbing No. 1 Plate
Key Cylinder
◆ Snap Ring
Column Upper Bracket
Tilt Steering Support
5.0 (51, 44 in.·lbf)
Collar
Tension Spring
Band Clamp
Ignition Switch
5.0 (51, 44 in.·lbf)
7.0 (71, 62 in.·lbf)
Energy Absorbing No. 2 Plate
21 (214, 15)
Column Upper Tube
5.0 (51, 44 in.·lbf)
Tilt Lever
Collar
◆ Snap Ring
5.5 (56, 49 in.·lbf)
Snap Ring
◆ Column No. 1 Ring
7.0 (71, 62 in.·lbf)
Steering Column Tube Support
Tilt Steering Upper Support No. 1 Reinforcement
◆ Bearing Block
Main Shaft Assembly
12 (120, 9)
Main Shaft Lower Dust Tube
Intermediate Shaft
Steering Column Lower Tube
12 (120, 9)
Dust Cover
Steering Column Hole Cover
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
⬅ Molybdenum disulfide lithium base grease
P
F10061