
FU07K–02


COMPONENTS

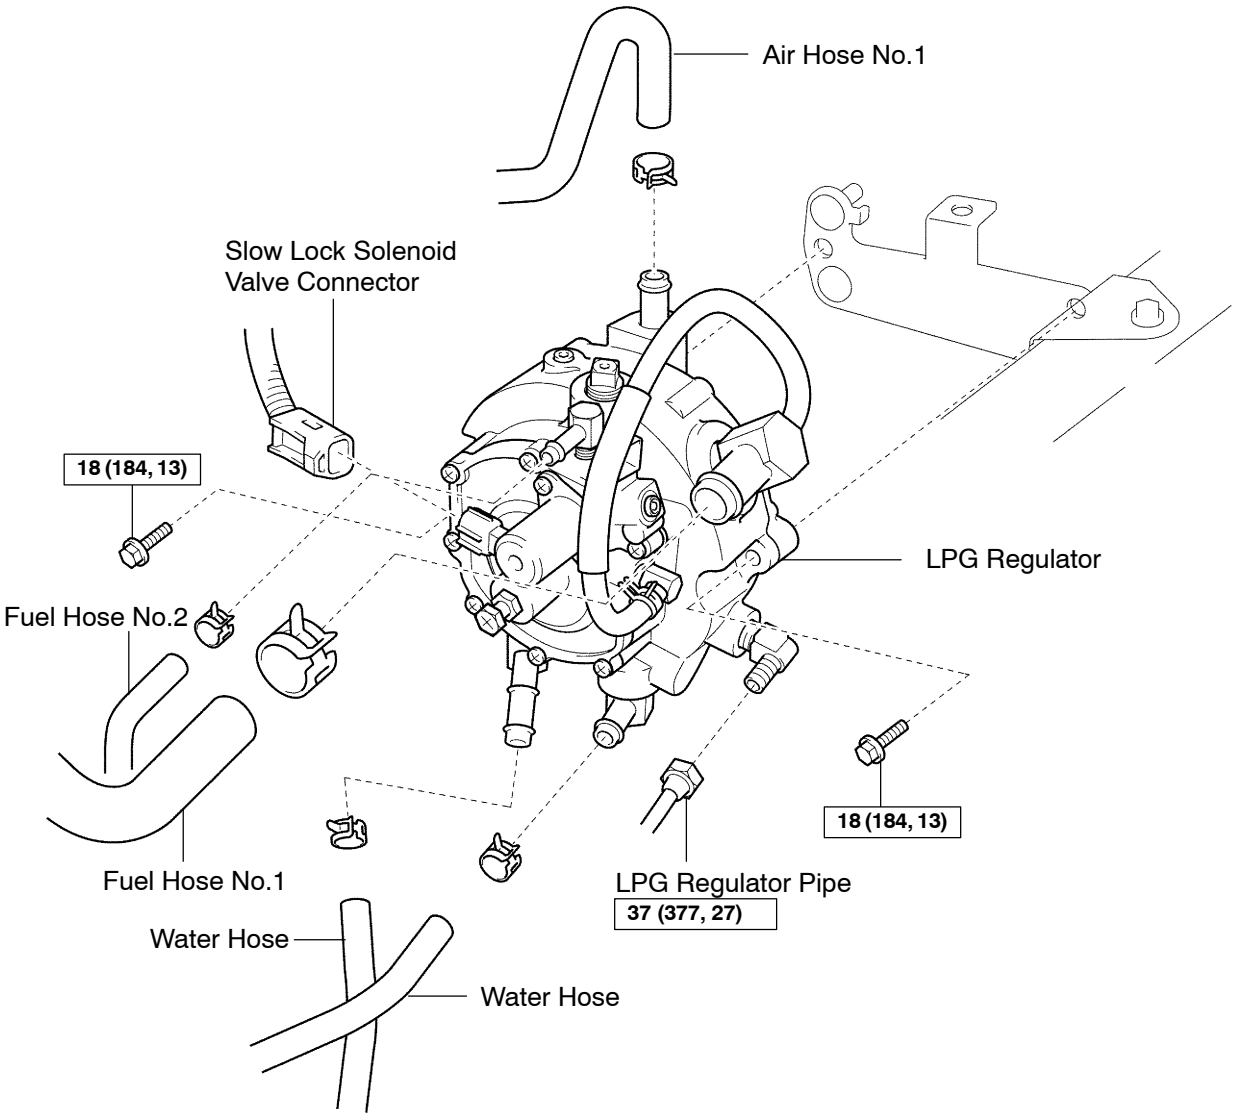

N·m (kgf·cm, ft·lbf) : Specified torque

P

B16313

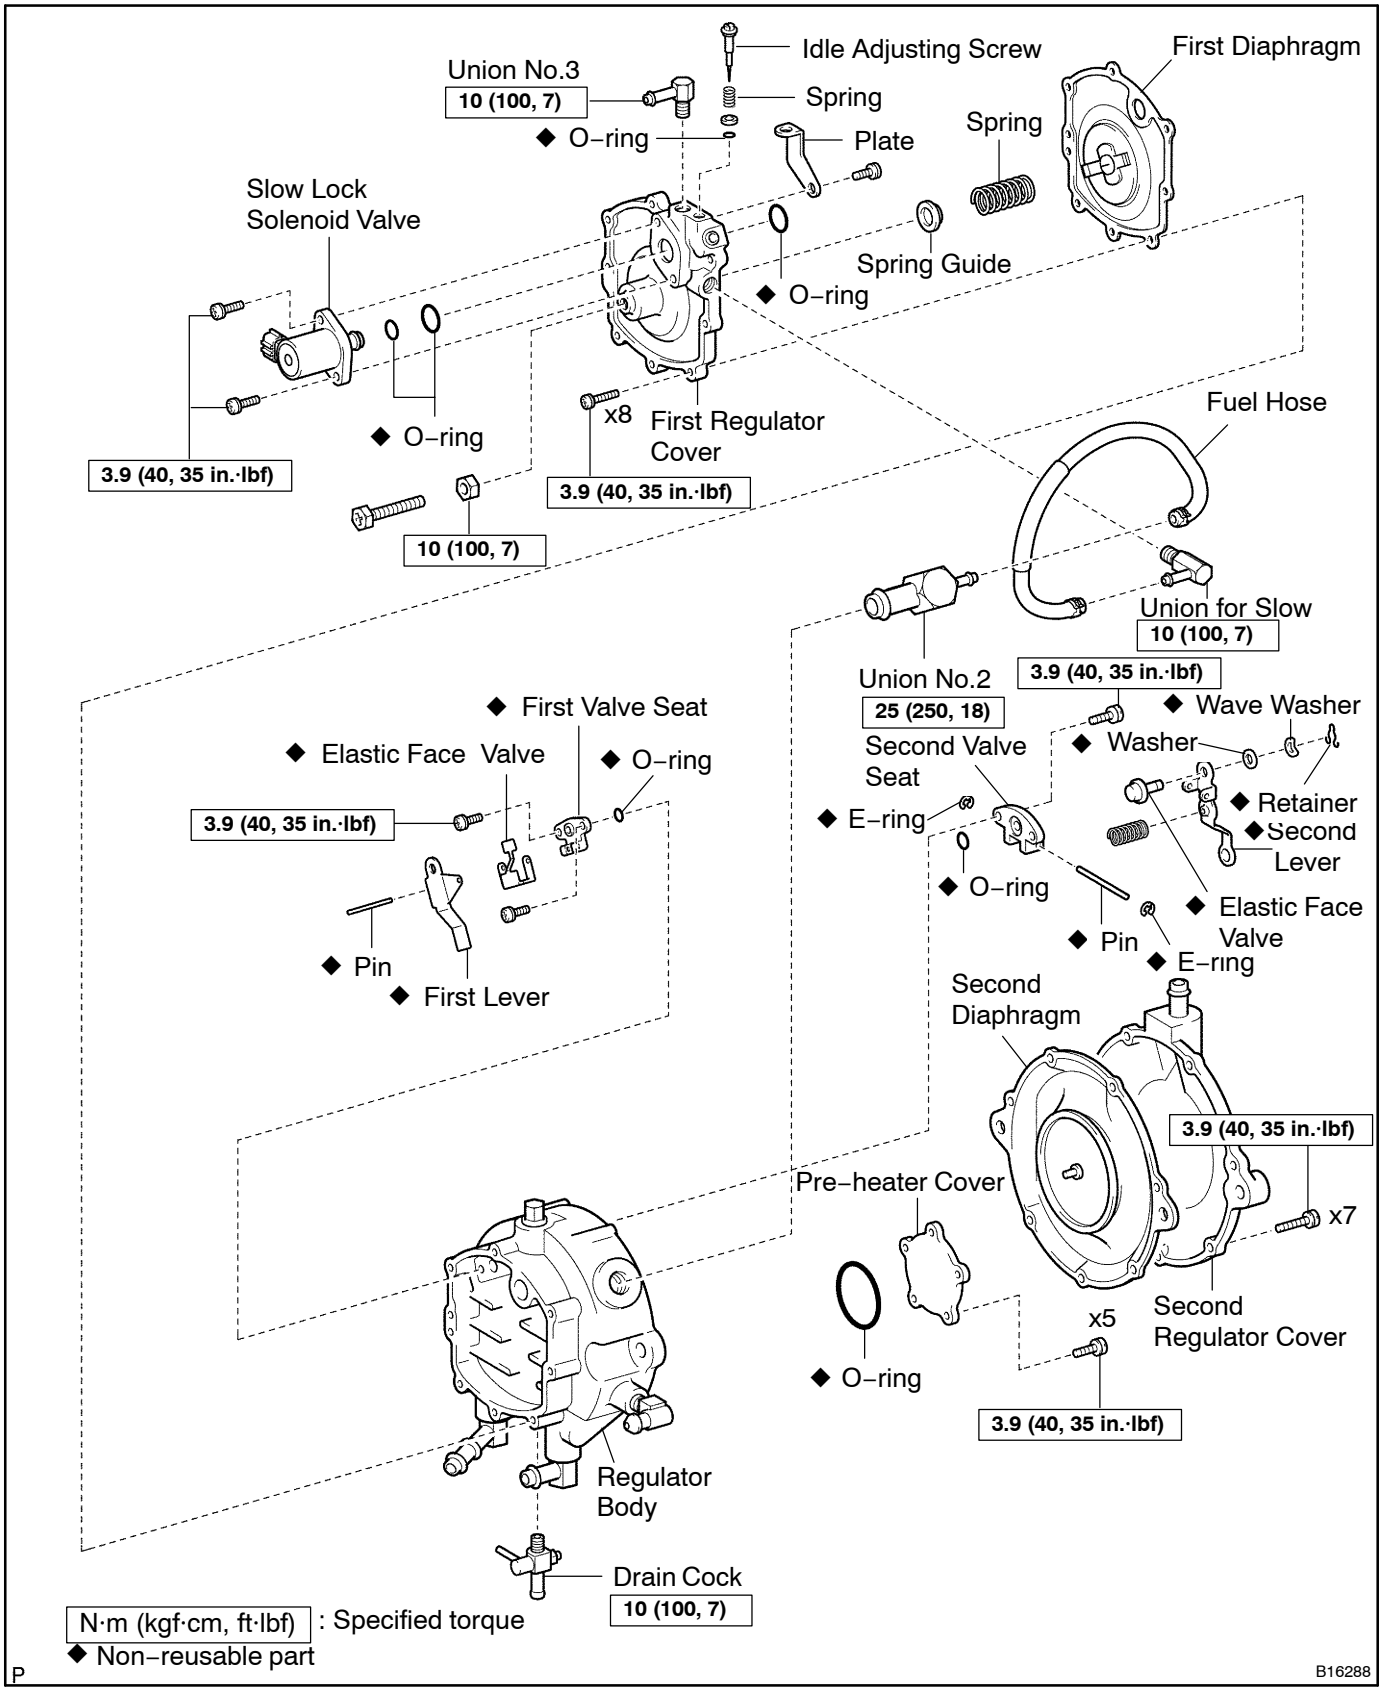
Idle Adjusting Screw
First Diaphragm
Union No.3
10 (100, 7)
Spring
◆ O–ring
Plate
Spring
Slow Lock
Solenoid Valve
Spring Guide
◆ O–ring
x8
First Regulator
Cover
◆ O–ring
3.9 (40, 35 in.·lbf)
3.9 (40, 35 in.·lbf)
10 (100, 7)
Fuel Hose
Union for Slow
10 (100, 7)
Union No.2
25 (250, 18)
3.9 (40, 35 in.·lbf)
◆ Wave Washer
◆ Washer
Second Valve
Seat
◆ First Valve Seat
◆ Elastic Face Valve
◆ O–ring
3.9 (40, 35 in.·lbf)
◆ E–ring
◆ Retainer
◆ Second
Lever
◆ O–ring
◆ Elastic Face
Valve
◆ Pin
◆ E–ring
◆ Pin
◆ First Lever
Second
Diaphragm
3.9 (40, 35 in.·lbf)
Pre–heater Cover
x7
x5
Second
Regulator Cover
◆ O–ring
3.9 (40, 35 in.·lbf)
Regulator
Body
Drain Cock
10 (100, 7)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
B16288