
FU07W–02

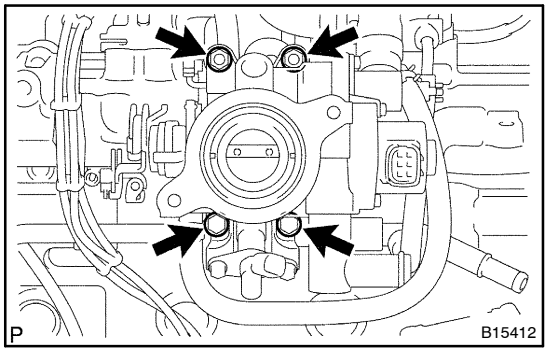

INSTALLATION

1. INSTALL CARBURETOR

Install a new gasket and the carburetor with the 2 nuts and 2 bolts.

Torque: 25 N·m (255 kgf·cm, 18 ft·lbf)

2. CONNECT 2 FUEL HOSES
3. CONNECT 3 CONNECTORS
4. CONNECT 3 VACUUM HOSES
5. A/T:

   CONNECT THROTTLE CABLE
6. CONNECT ACCELERATOR CABLE
7. INSTALL INTAKE AIR CONNECTOR

Install the intake air connector with the nut and bolt.

Torque: 18.5 N·m (190 kgf·cm, 14 ft·lbf)

8. CHECK AND ADJUST IDLE SPEED

   (See page EM–9)
9. CHECK AND ADJUST CO/HC

   (See page EM–2)