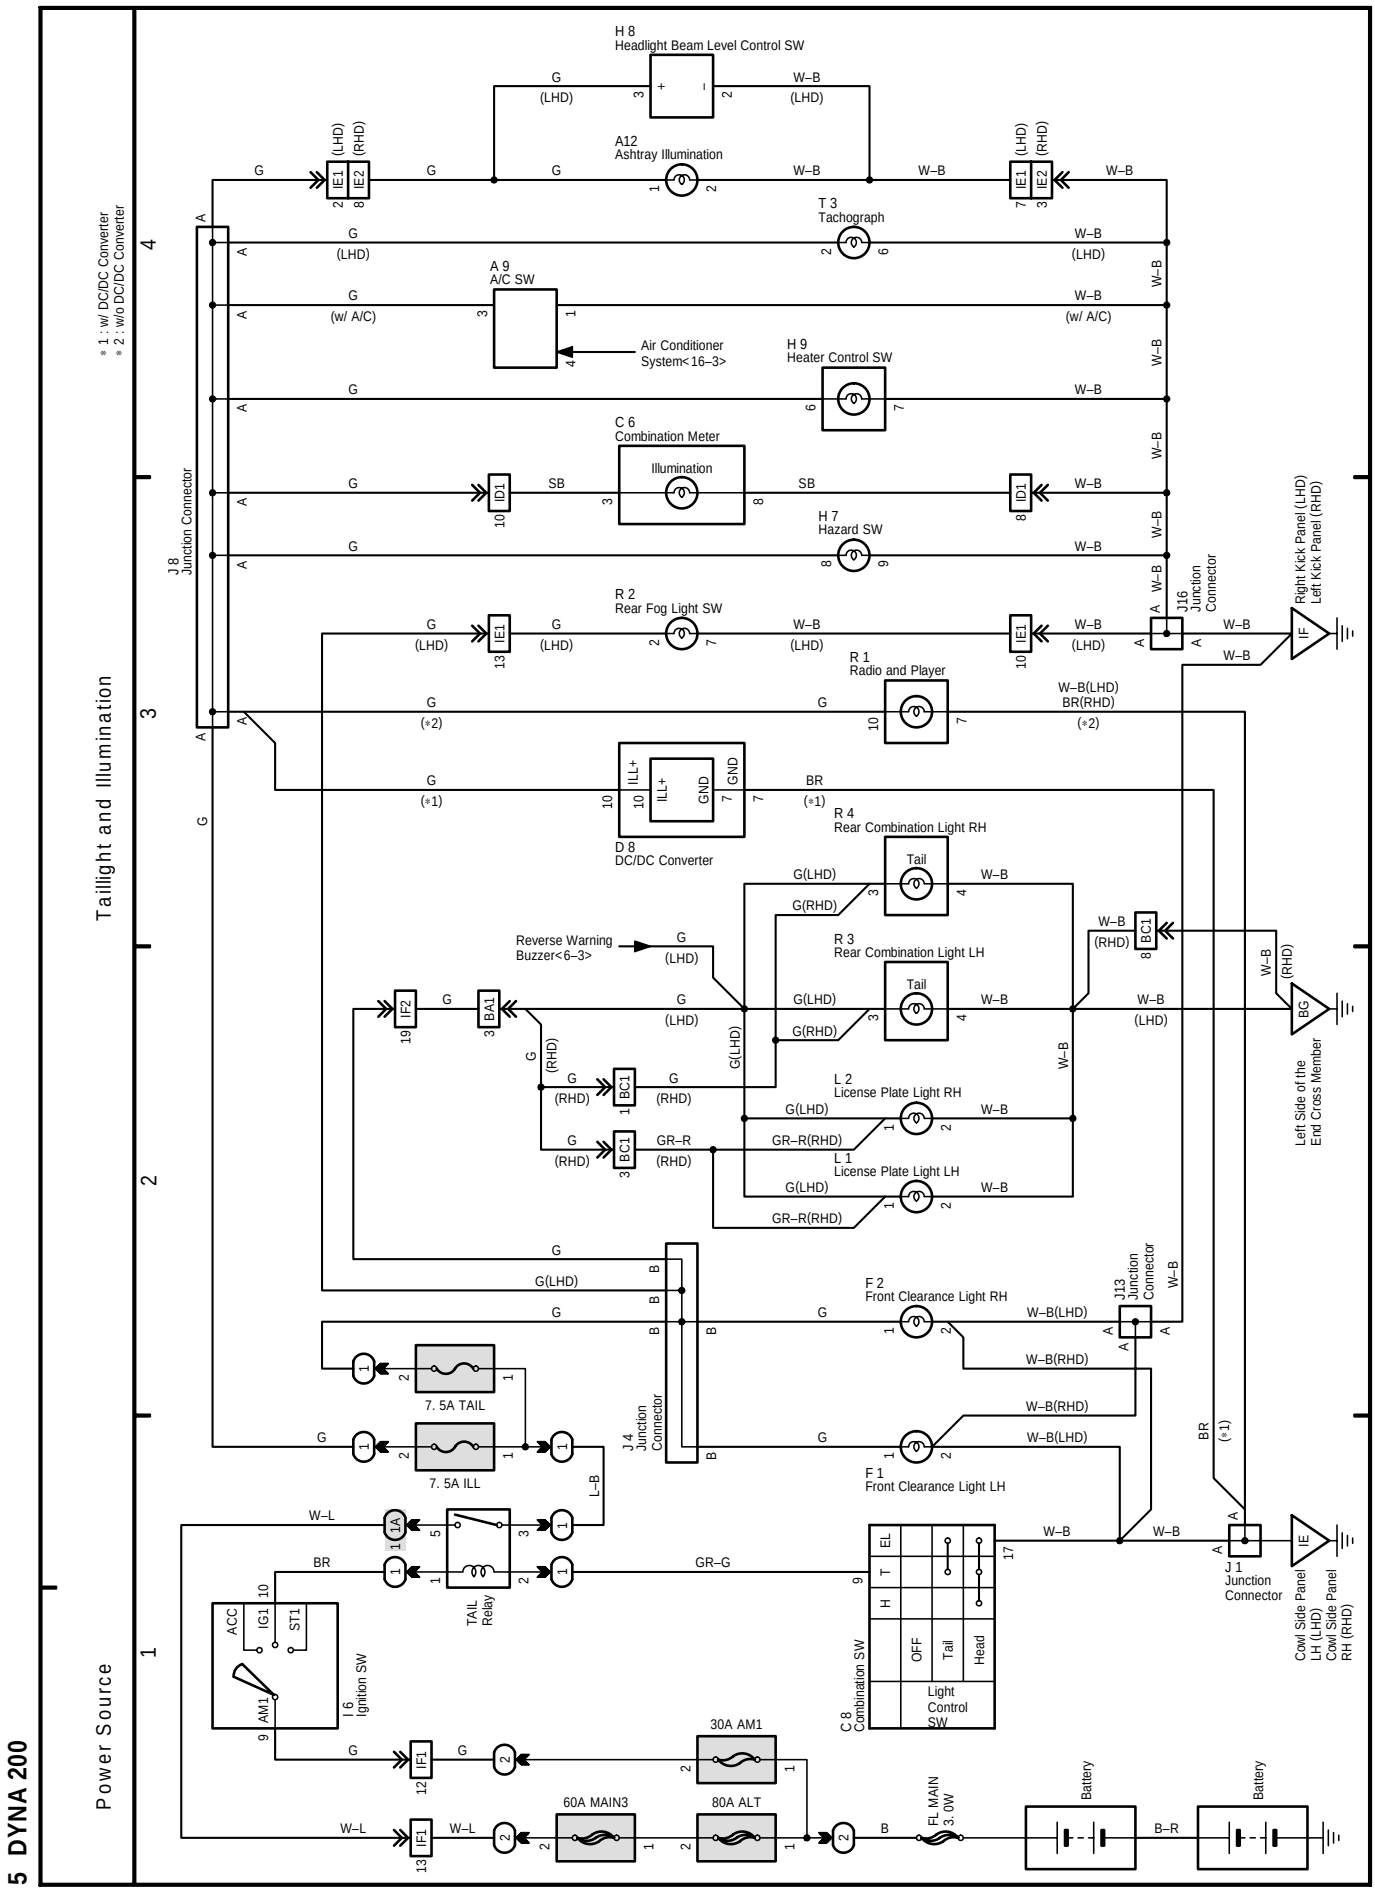

5 DYNA 200
Power Source
Taillight and Illumination
* 1 : w/ DC/DC Converter
* 2 : w/o DC/DC Converter
H 8
Headlight Beam Level Control SW
A12
Ashtray Illumination
T 3
Tachograph
A 9
A/C SW
Air Conditioner System<16–3>
H 9
Heater Control SW
C 6
Combination Meter
Illumination
H 7
Hazard SW
J 8
Junction Connector
R 2
Rear Fog Light SW
R 1
Radio and Player
D 8
DC/DC Converter
R 4
Rear Combination Light RH
R 3
Rear Combination Light LH
Reverse Warning Buzzer<6–3>
L 2
License Plate Light RH
L 1
License Plate Light LH
F 2
Front Clearance Light RH
F 1
Front Clearance Light LH
J16
Junction Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
Left Side of the End Cross Member
J13
Junction Connector
J 4
Junction Connector
J 1
Junction Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
7. 5A TAIL
7. 5A ILL
TAIL Relay
I 6
Ignition SW
ACC
IG1
ST1
AM1
C 8
Combination SW
Light Control SW
OFF
Tail
Head
30A AM1
60A MAIN3
80A ALT
FL MAIN
3. 0W
Battery
Battery