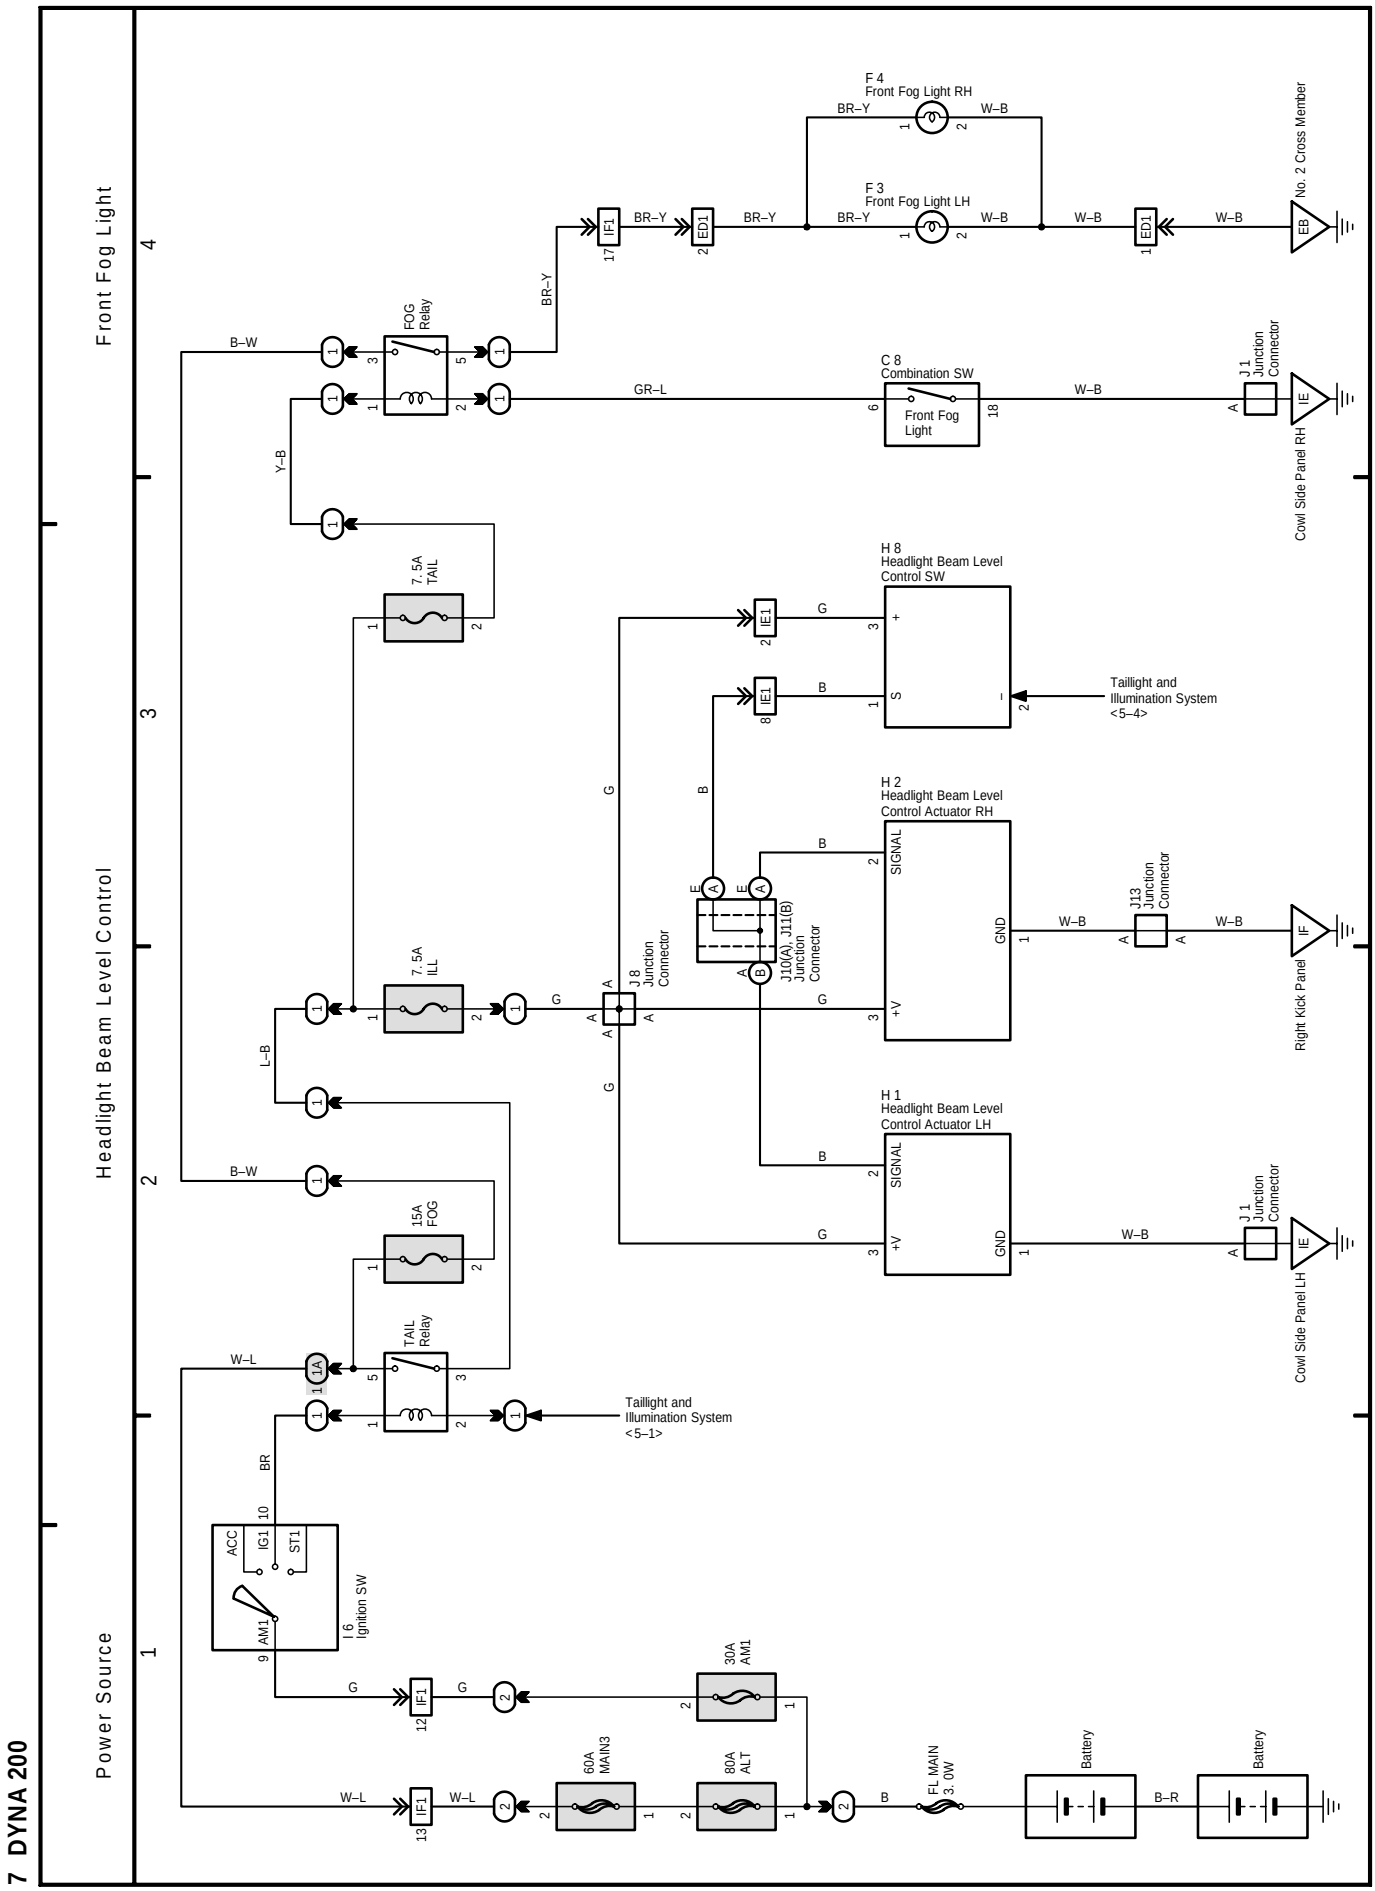

7 DYNA 200
Power Source
Headlight Beam Level Control
Front Fog Light
F 4
Front Fog Light RH
F 3
Front Fog Light LH
No. 2 Cross Member
FOG Relay
C 8
Combination SW
Front Fog Light
J 1
Junction Connector
Cowl Side Panel RH
H 8
Headlight Beam Level Control SW
Taillight and Illumination System <5–4>
7.5A TAIL
7.5A ILL
15A FOG
TAIL Relay
H 2
Headlight Beam Level Control Actuator RH
H 1
Headlight Beam Level Control Actuator LH
J 8
Junction Connector
J10(A), J11(B)
Junction Connector
J13
Junction Connector
Right Kick Panel
Cowl Side Panel LH
Taillight and Illumination System <5–1>
I 6
Ignition SW
ACC
IG1
ST1
AM1
30A AM1
60A MAIN3
80A ALT
FL MAIN 3. 0W
Battery
Battery