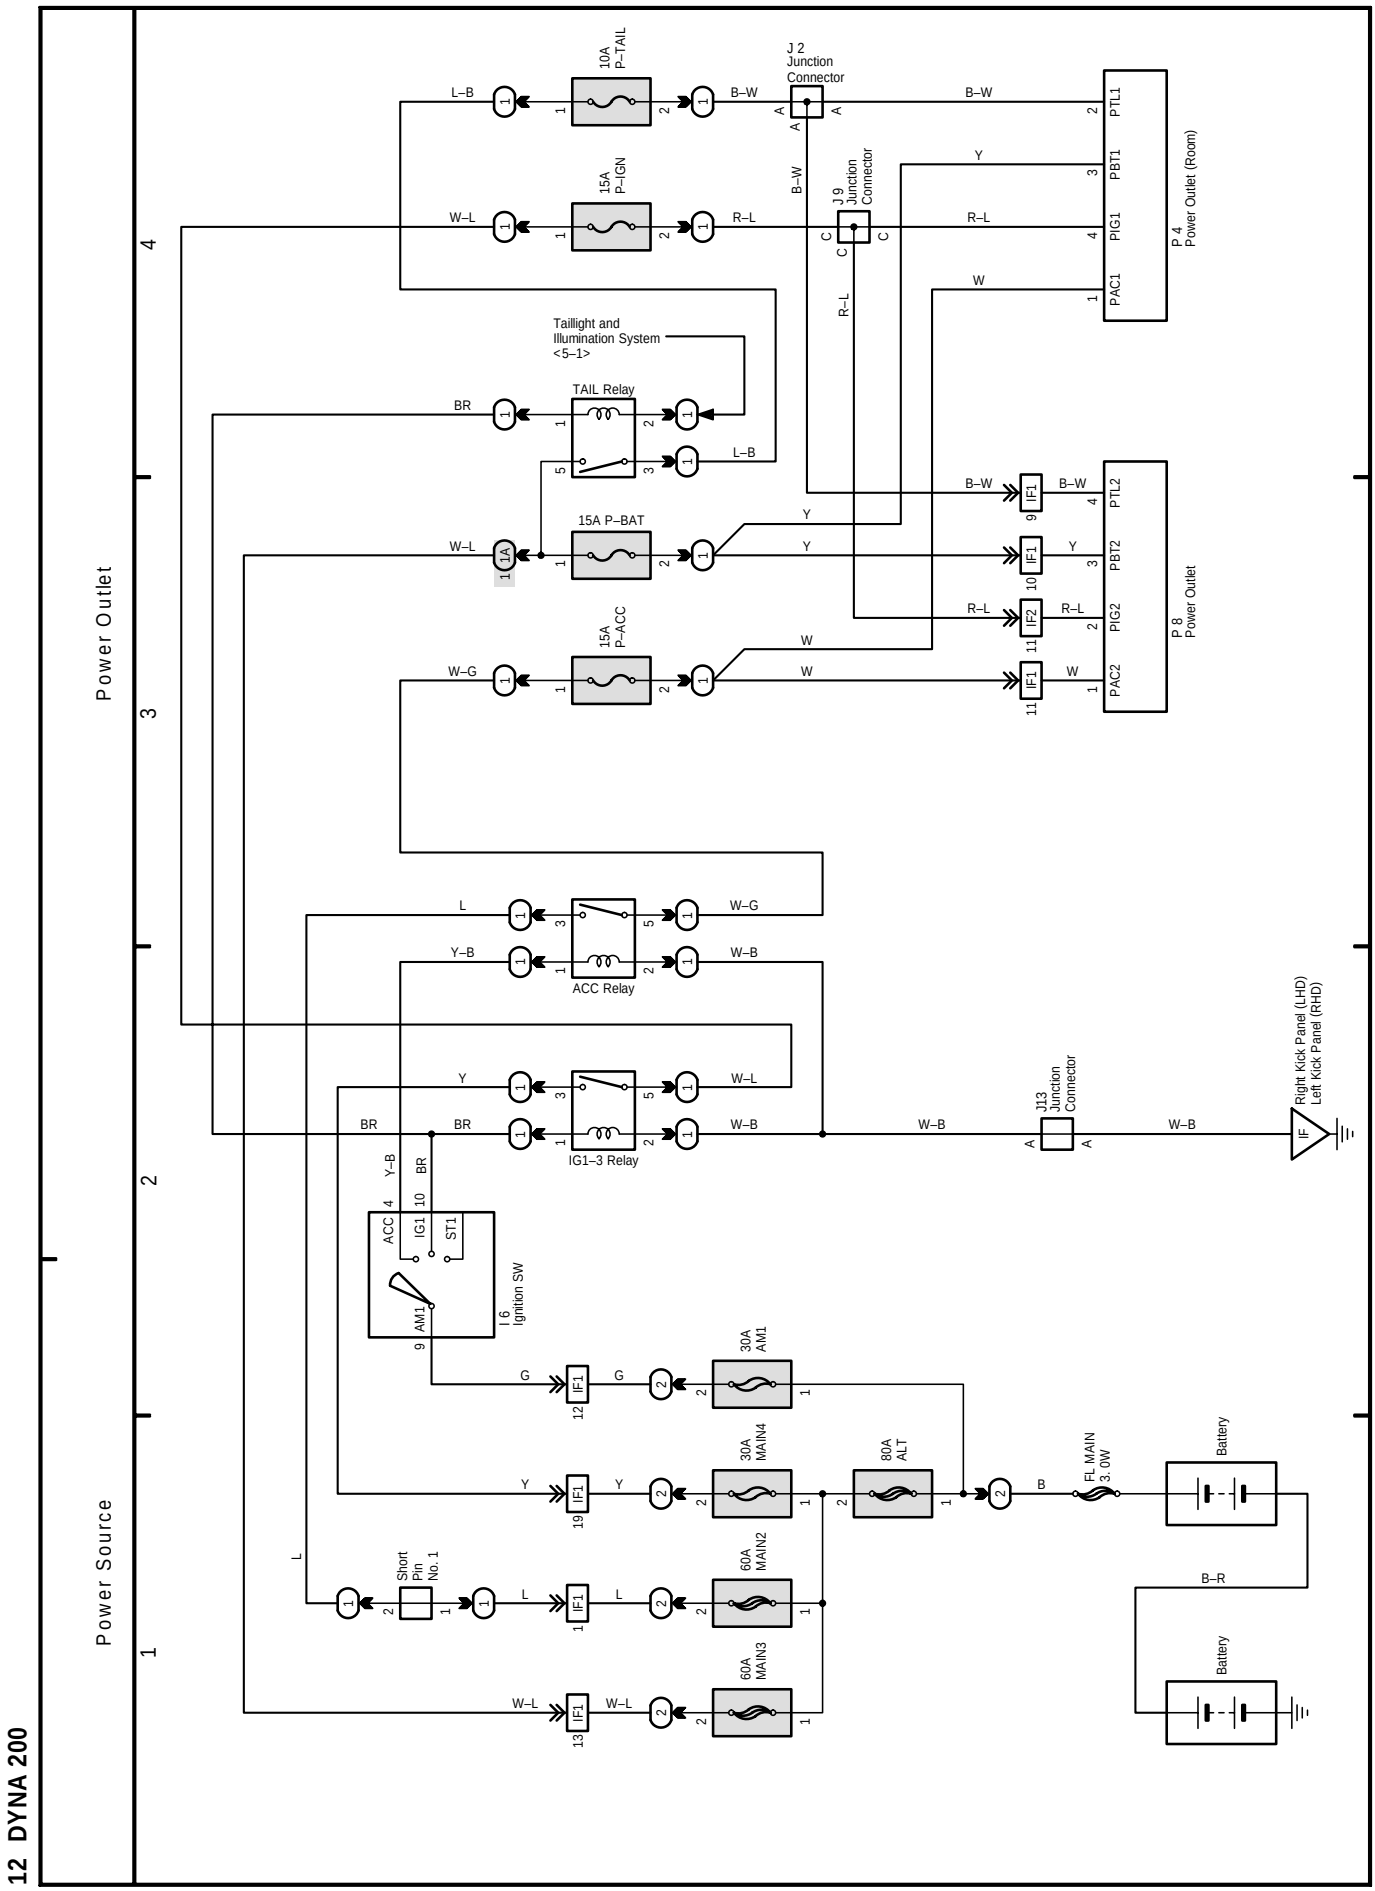

12 DYNA 200
Power Source
Power Outlet
10A P–TAIL
15A P–IGN
15A P–BAT
15A P–ACC
J 2 Junction Connector
J 9 Junction Connector
J13 Junction Connector
P 4 Power Outlet (Room)
P 8 Power Outlet
PTL1
PBT1
PIG1
PAC1
PTL2
PBT2
PIG2
PAC2
Taillight and Illumination System <5–1>
TAIL Relay
ACC Relay
IG1–3 Relay
I 6 Ignition SW
ACC
IG1
ST1
AM1
Short Pin No. 1
30A AM1
30A MAIN4
80A ALT
60A MAIN2
60A MAIN3
FL MAIN 3. 0W
Battery
Battery
Right Kick Panel (LHD) Left Kick Panel (RHD)
IF
IF1
IF2
L–B
B–W
W–L
R–L
BR
Y
W
W–G
L
Y–B
W–B
G
B
B–R