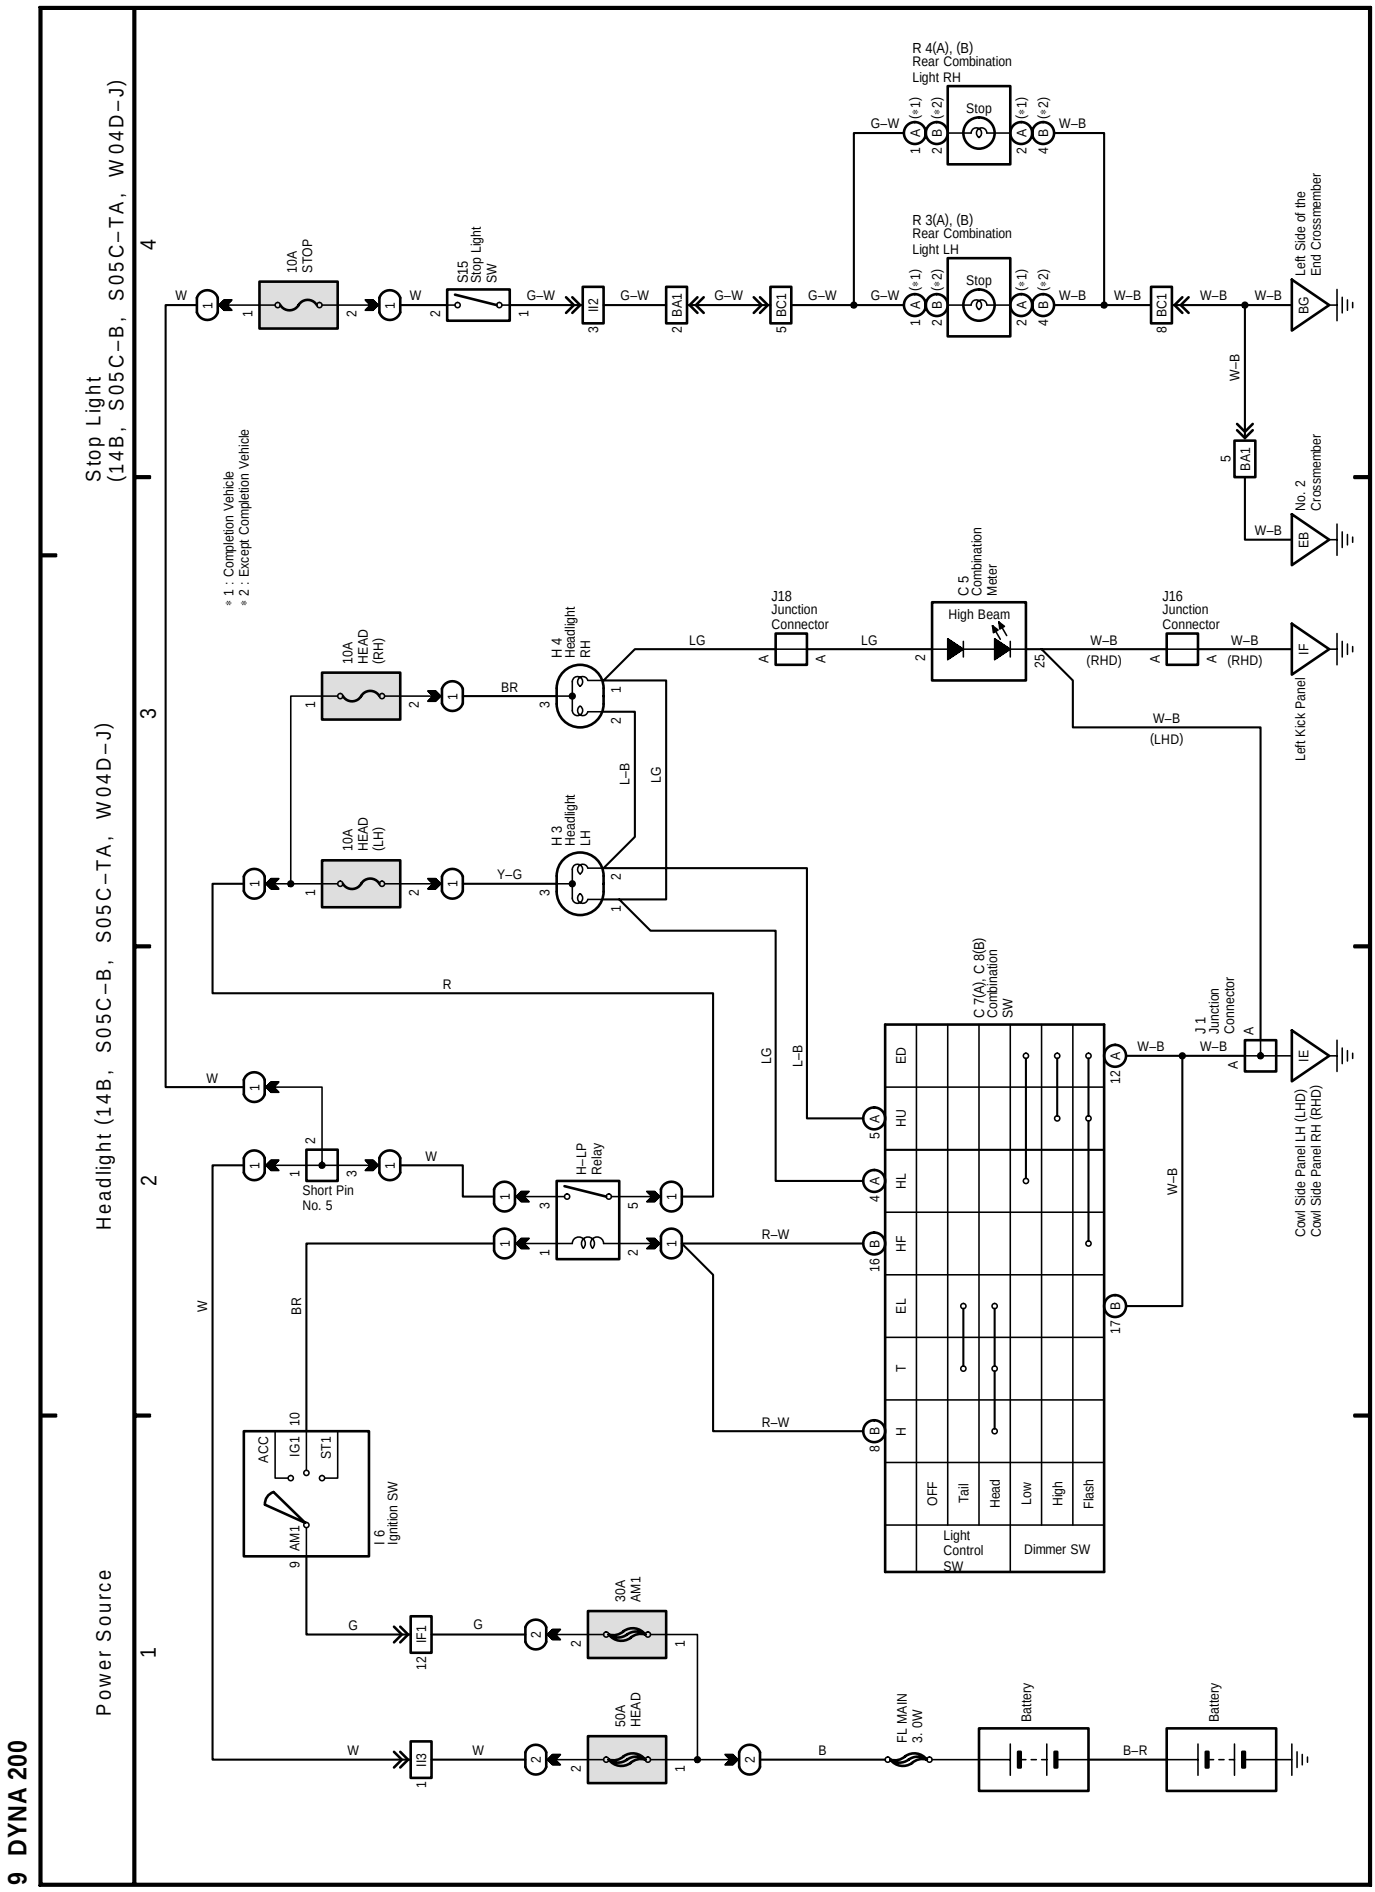

Stop Light
(14B, S05C–B, S05C–TA, W04D–J)
Headlight (14B, S05C–B, S05C–TA, W04D–J)
Power Source
* 1 : Completion Vehicle
* 2 : Except Completion Vehicle
R 4(A), (B)
Rear Combination
Light RH
R 3(A), (B)
Rear Combination
Light LH
Stop
10A
STOP
St5
Stop Light
SW
Left Side of the
End Crossmember
BG
No. 2
Crossmember
EB
10A
HEAD
(RH)
10A
HEAD
(LH)
H 4
Headlight
RH
H 3
Headlight
LH
J18
Junction
Connector
C 5
Combination
Meter
High Beam
J16
Junction
Connector
Left Kick Panel
IF
J1
Junction
Connector
IE
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
C 7(A), C 8(B)
Combination
SW
Light
Control
SW
Dimmer SW
OFF
Tail
Head
Low
High
Flash
H-LP
Relay
Short Pin
No. 5
I 6
Ignition SW
ACC
IG1
ST1
AM1
30A
AM1
50A
HEAD
FL MAIN
3. 0W
Battery
Battery
(RHD)
(LHD)