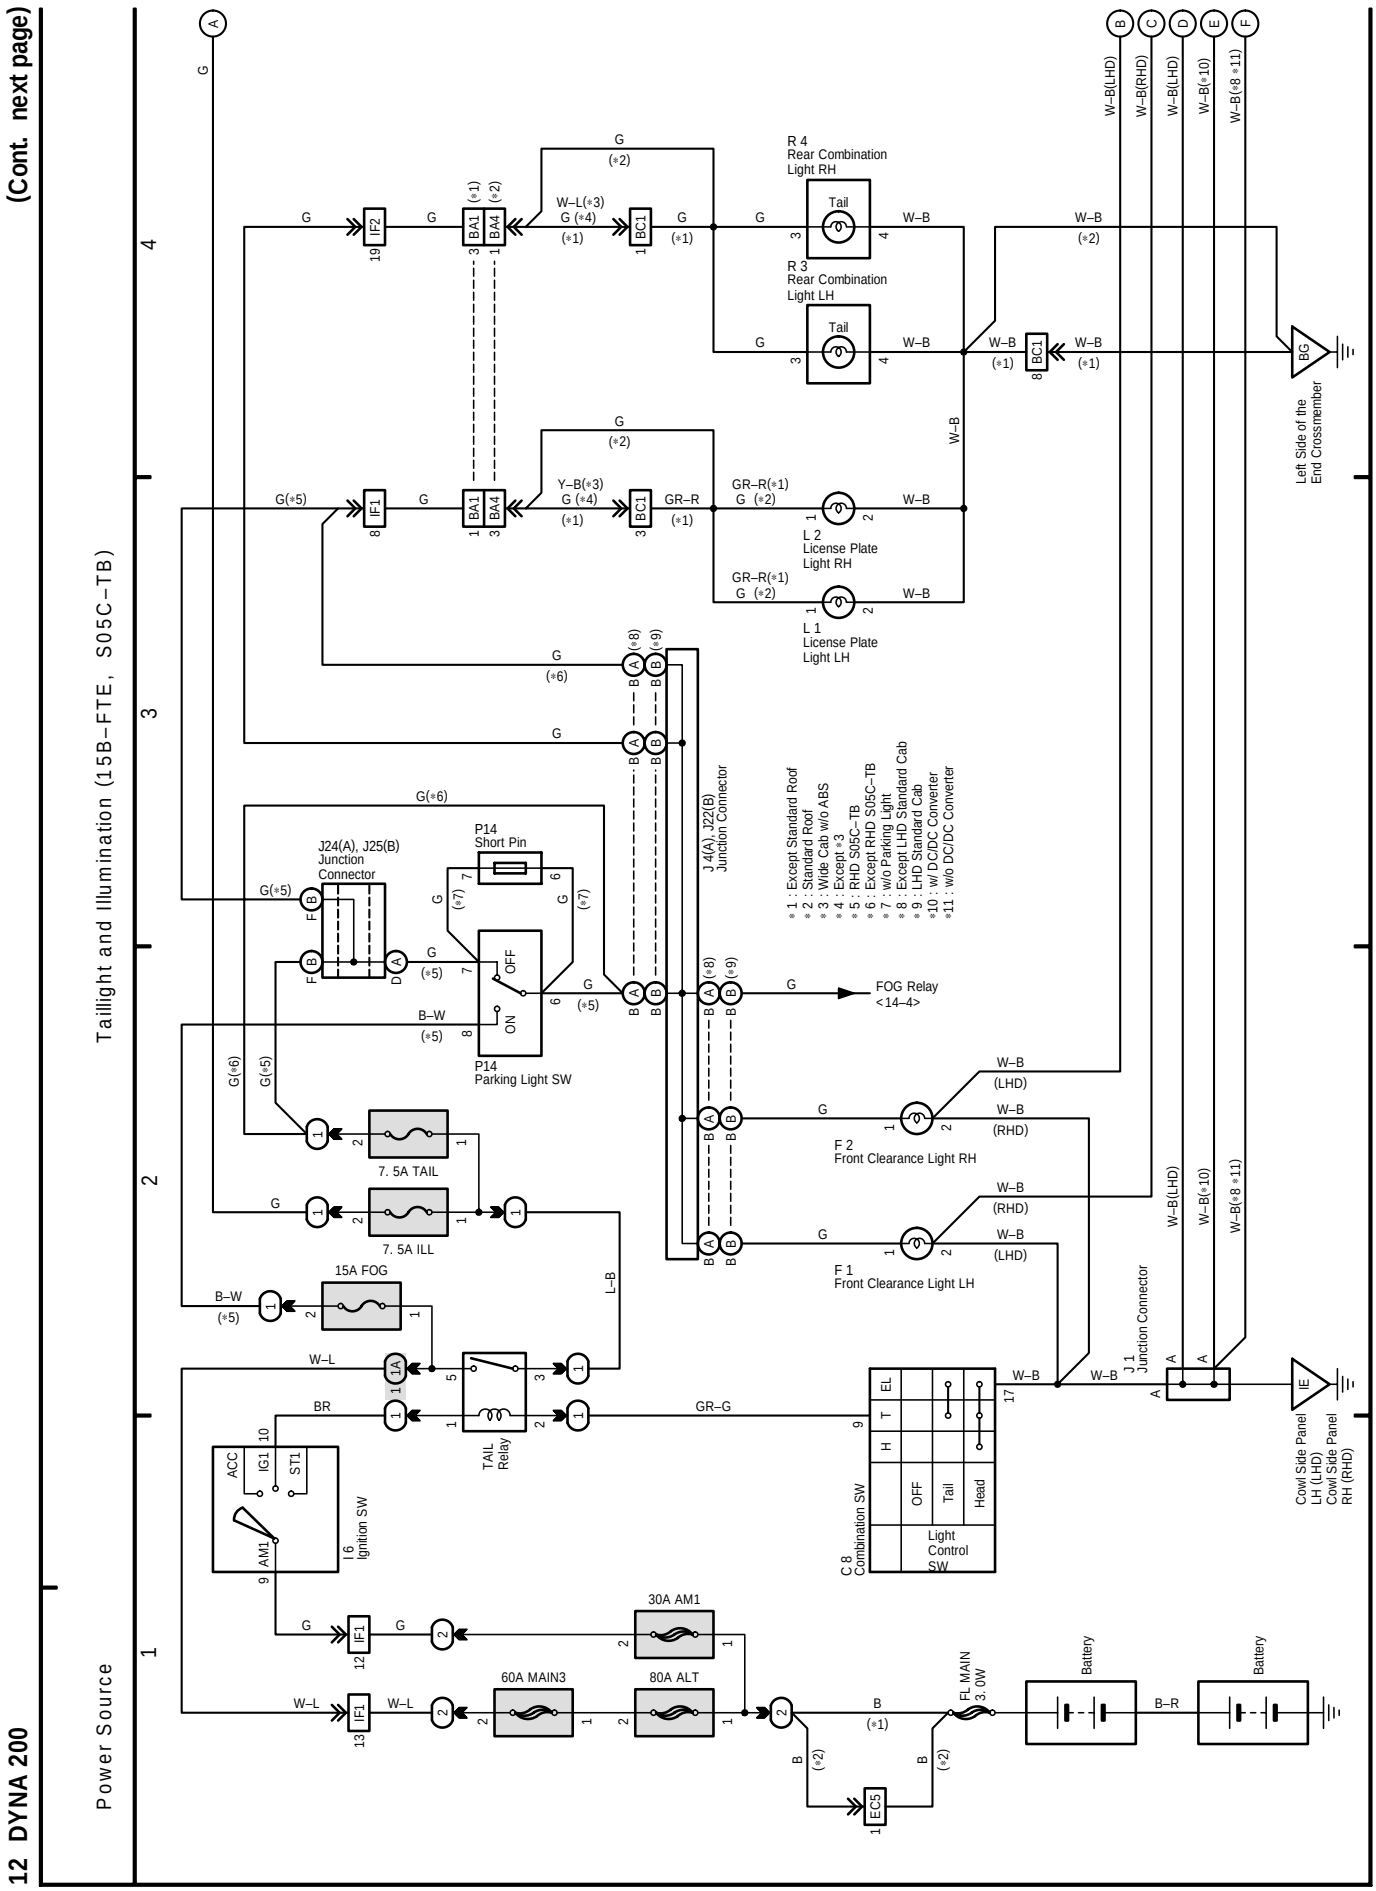

(Cont. next page)
Taillight and Illumination (15B–FTE, S05C–TB)
Power Source
12 DYNA 200
R 4 Rear Combination Light RH
R 3 Rear Combination Light LH
L 2 License Plate Light RH
L 1 License Plate Light LH
F 2 Front Clearance Light RH
F 1 Front Clearance Light LH
Left Side of the End Crossmember
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
J24(A), J25(B) Junction Connector
J4(A), J22(B) Junction Connector
J1 Junction Connector
P14 Short Pin
P14 Parking Light SW
FOG Relay <14–4>
7. 5A TAIL
7. 5A ILL
15A FOG
TAIL Relay
I6 Ignition SW
C8 Combination SW
Light Control SW
30A AM1
60A MAIN3
80A ALT
FL MAIN 3. 0W
Battery
* 1 : Except Standard Roof
* 2 : Standard Roof
* 3 : Wide Cab w/o ABS
* 4 : Except *3
* 5 : RHD S05C–TB
* 6 : Except RHD S05C–TB
* 7 : w/o Parking Light
* 8 : Except LHD Standard Cab
* 9 : LHD Standard Cab
*10 : w/ DC/DC Converter
*11 : w/o DC/DC Converter

12 DYNA 200 (Cont' d)

