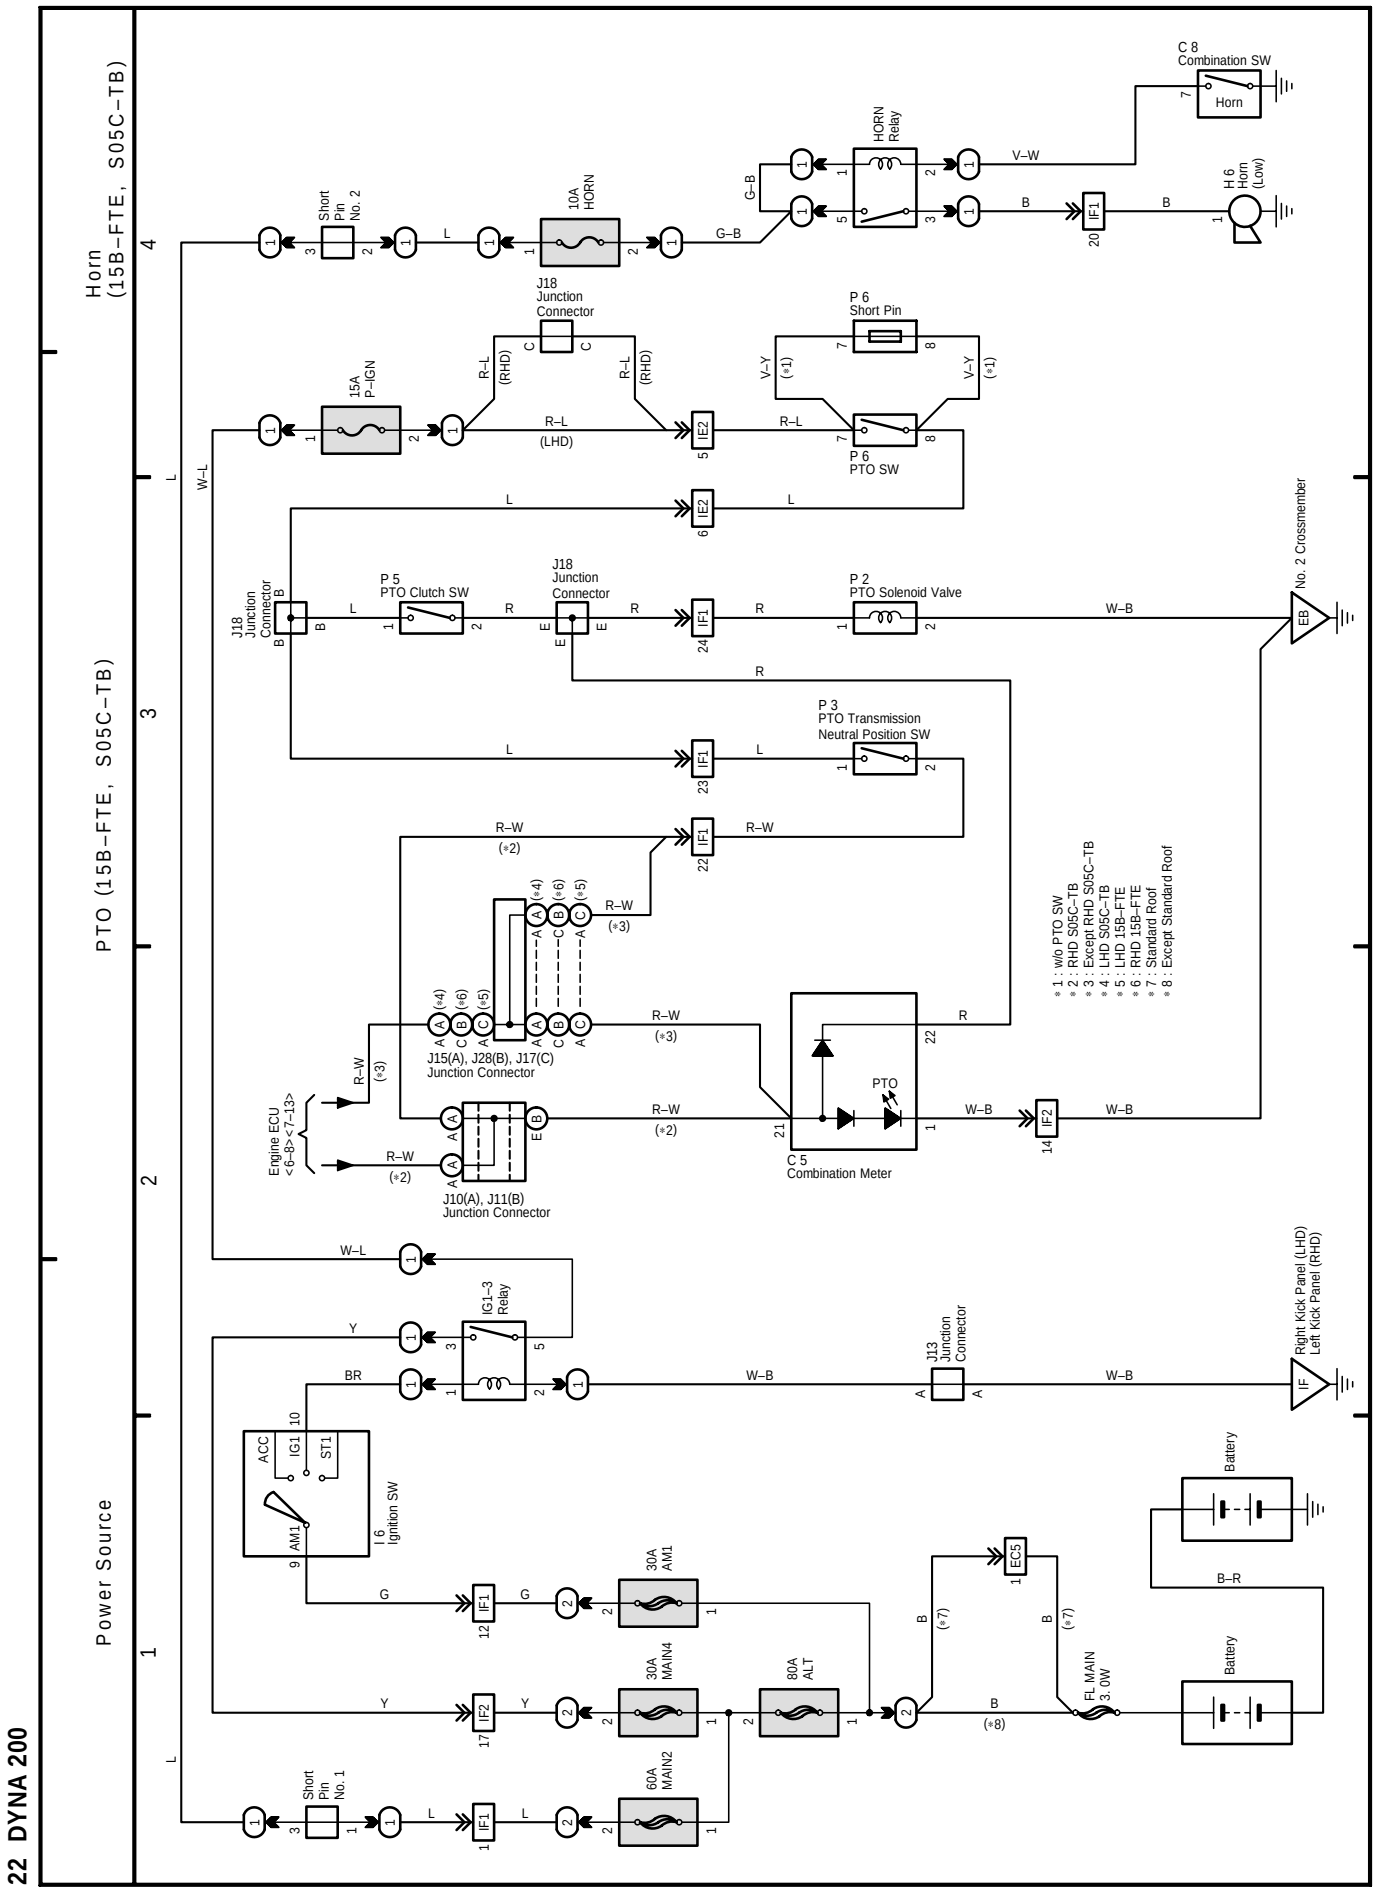

Horn (15B–FTE, S05C–TB)
PTO (15B–FTE, S05C–TB)
Power Source
1
2
3
4
C 8
Combination SW
Horn
HORN Relay
10A HORN
Short Pin No. 2
H 6
Horn (Low)
J18 Junction Connector
P 6
Short Pin
15A P–IGN
P 6
PTO SW
P 5
PTO Clutch SW
P 2
PTO Solenoid Valve
No. 2 Crossmember
P 3
PTO Transmission Neutral Position SW
J15(A), J28(B), J17(C) Junction Connector
J10(A), J11(B) Junction Connector
Engine ECU <6–8><7–13>
C 5
Combination Meter
PTO
IG1–3 Relay
J13 Junction Connector
Right Kick Panel (LHD)
Left Kick Panel (RHD)
I 6
Ignition SW
ACC
IG1
ST1
AM1
30A AM1
30A MAIN4
80A ALT
60A MAIN2
Short Pin No. 1
EC5
FL MAIN 3. 0W
Battery
Battery
* 1 : w/o PTO SW
* 2 : RHD S05C–TB
* 3 : Except RHD S05C–TB
* 4 : LHD S05C–TB
* 5 : LHD 15B–FTE
* 6 : RHD 15B–FTE
* 7 : Standard Roof
* 8 : Except Standard Roof