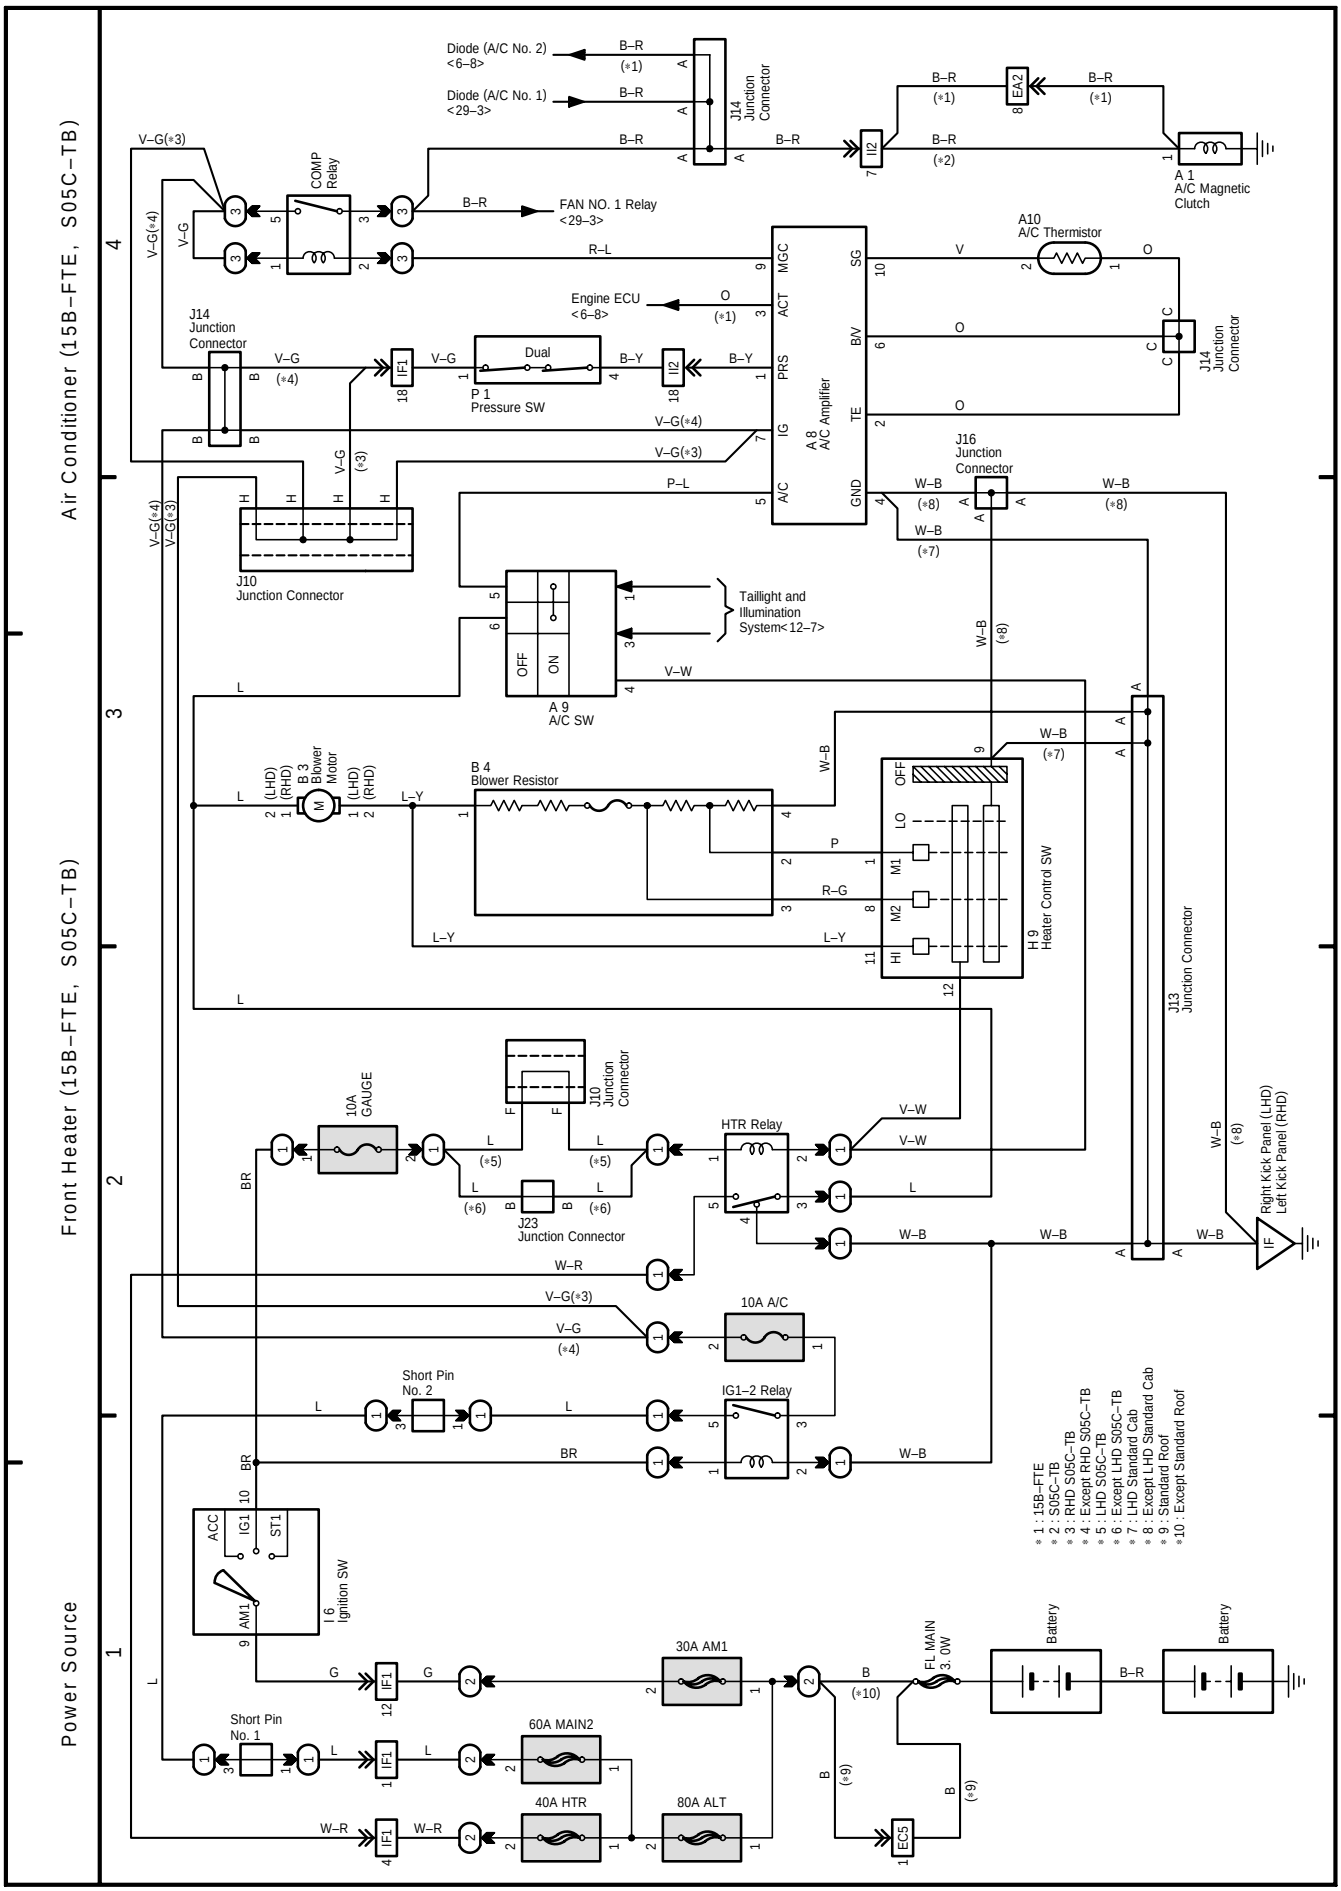

Power Source
Front Heater (15B–FTE, S05C–TB)
Air Conditioner (15B–FTE, S05C–TB)
Diode (A/C No. 2) <6–8>
Diode (A/C No. 1) <29–3>
J14 Junction Connector
A 1 A/C Magnetic Clutch
COMP Relay
FAN NO. 1 Relay <29–3>
A10 A/C Thermistor
Engine ECU <6–8>
J14 Junction Connector
P 1 Pressure SW
A 8 A/C Amplifier
J16 Junction Connector
J10 Junction Connector
Taillight and Illumination System<12–7>
A 9 A/C SW
B 3 Blower Motor
B 4 Blower Resistor
H 9 Heater Control SW
J13 Junction Connector
10A GAUGE
HTR Relay
J23 Junction Connector
Right Kick Panel (LHD) Left Kick Panel (RHD)
10A A/C
Short Pin No. 2
IG1–2 Relay
I 6 Ignition SW
30A AM1
FL MAIN 3. 0W
Battery
Short Pin No. 1
60A MAIN2
40A HTR
80A ALT
* 1 : 15B–FTE
* 2 : S05C–TB
* 3 : RHD S05C–TB
* 4 : Except RHD S05C–TB
* 5 : LHD S05C–TB
* 6 : Except LHD S05C–TB
* 7 : LHD Standard Cab
* 8 : Except LHD Standard Cab
* 9 : Standard Roof
*10 : Except Standard Roof