


OVERALL ELECTRICAL WIRING DIAGRAM

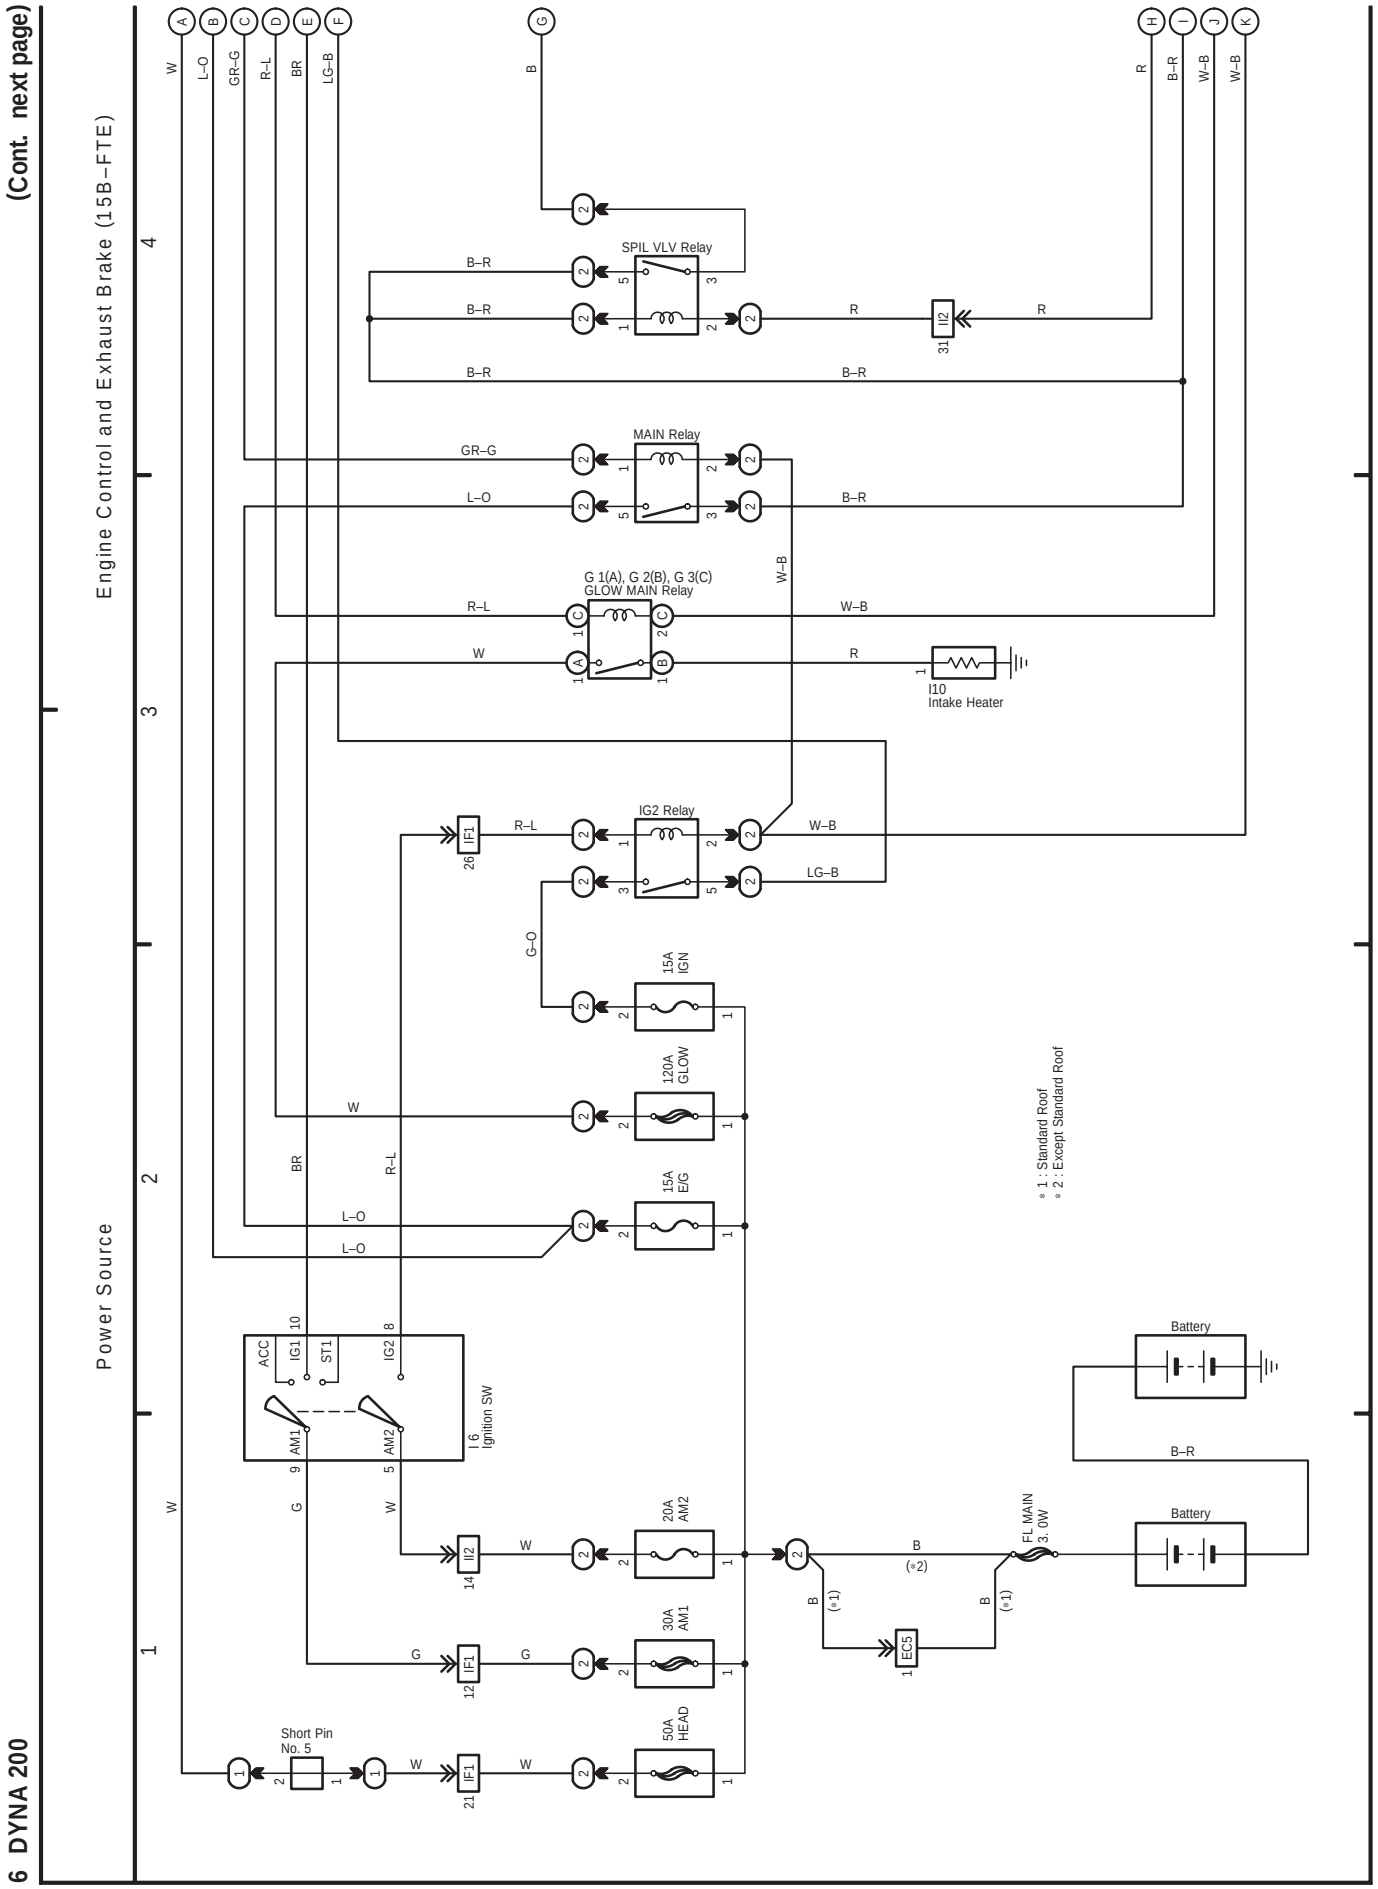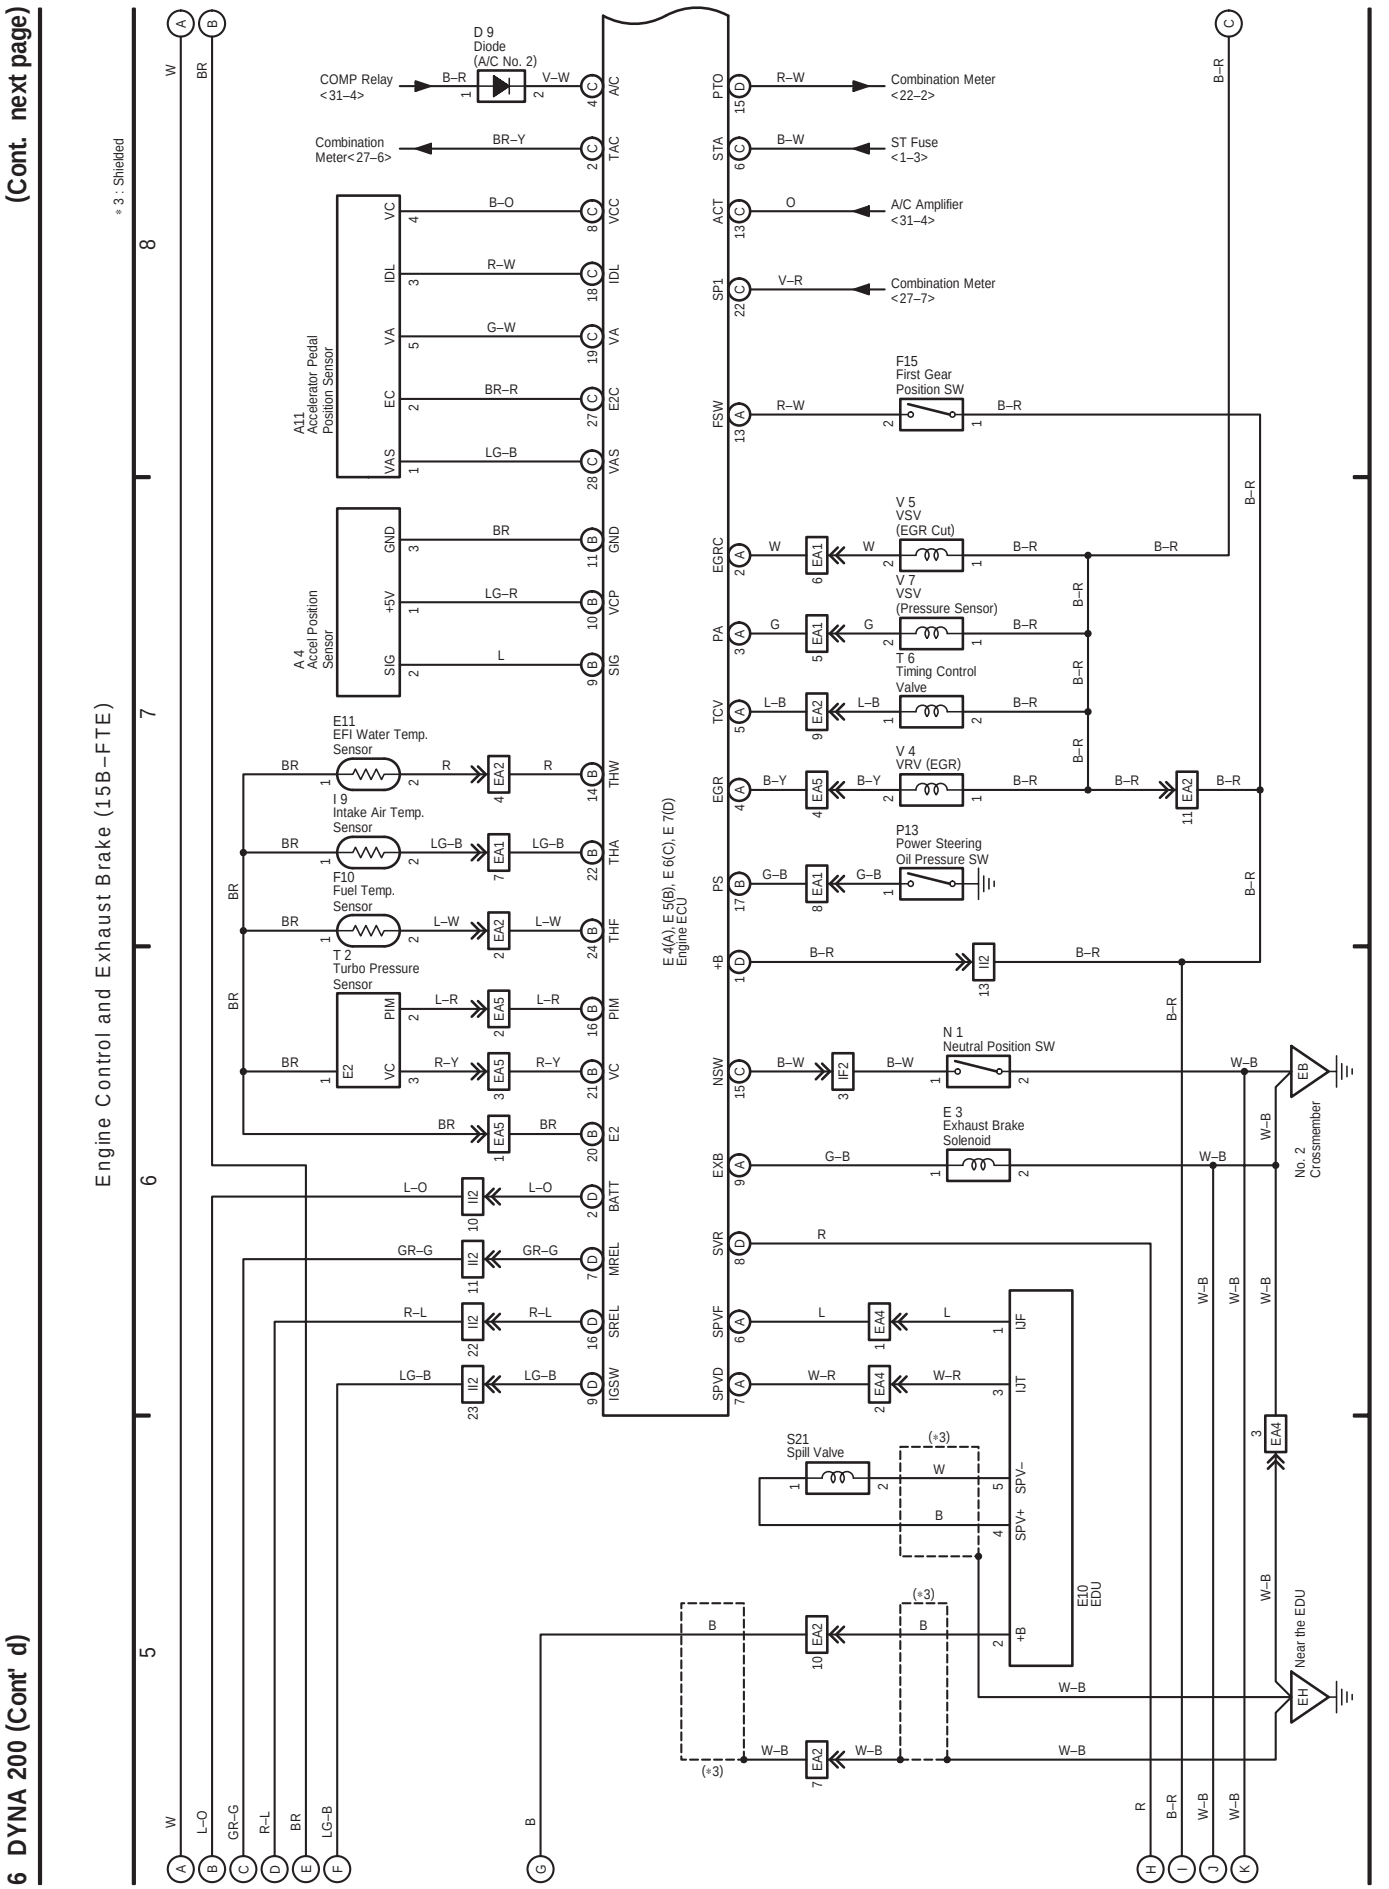

OVERALL ELECTRICAL WIRING DIAGRAM

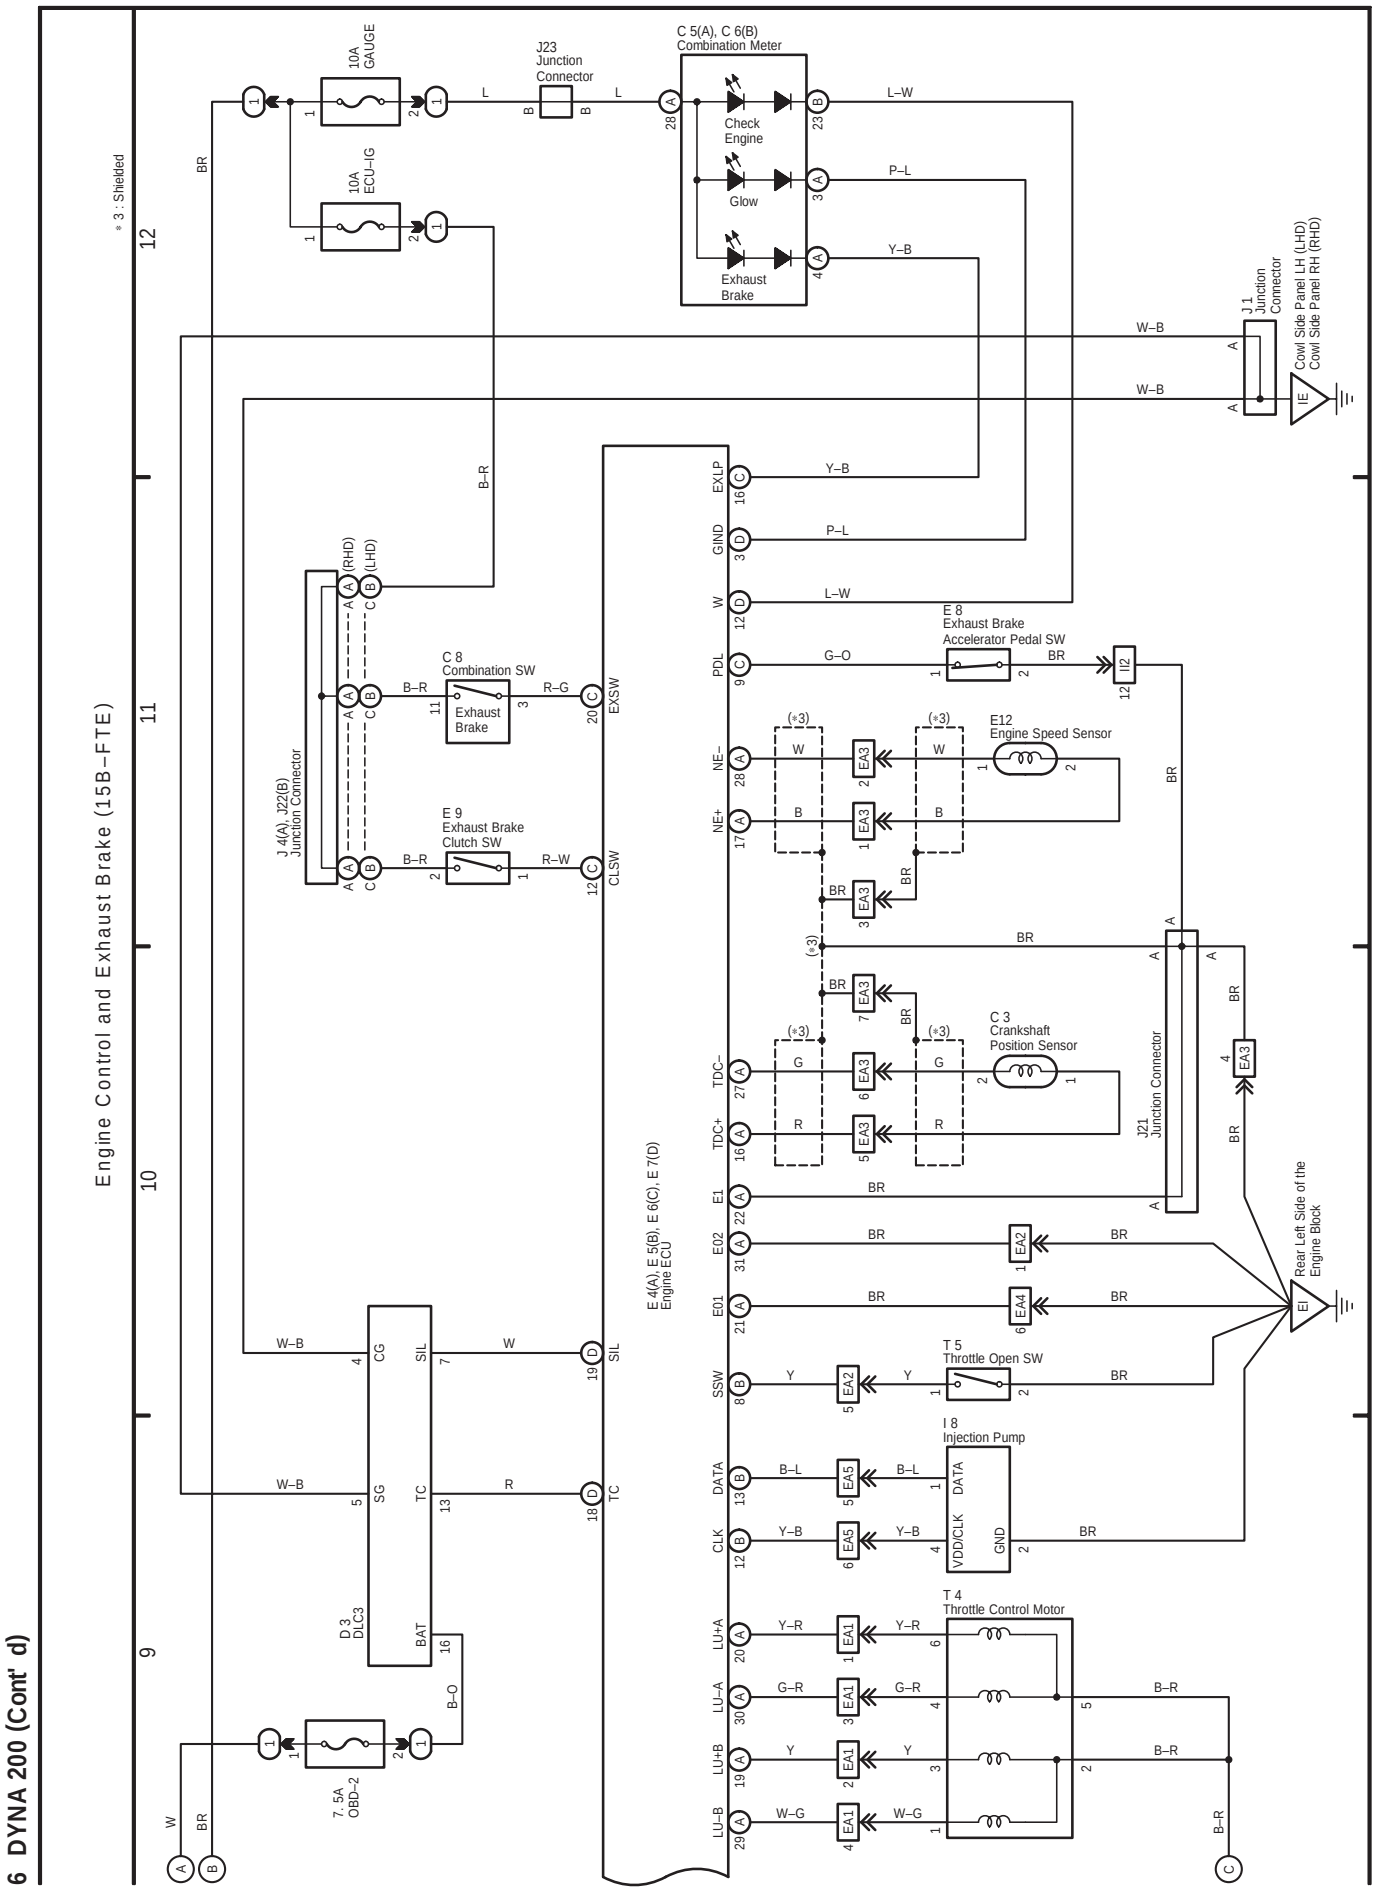


Engine Control and Exhaust Brake (15B–FTE)
6 DYNA 200 (Cont' d)
* 3 : Shielded
10A GAUGE
10A ECU–IG
J23 Junction Connector
C 5(A), C 6(B) Combination Meter
Check Engine
Glow
Exhaust Brake
J1 Junction Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
E 8 Exhaust Brake Accelerator Pedal SW
C 8 Combination SW
Exhaust Brake
E 9 Exhaust Brake Clutch SW
J 4(A), J22(B) Junction Connector
E12 Engine Speed Sensor
C 3 Crankshaft Position Sensor
J21 Junction Connector
Rear Left Side of the Engine Block
T 5 Throttle Open SW
I 8 Injection Pump
T 4 Throttle Control Motor
D 3 DLC3
7.5A OBD–2
E 4(A), E 5(B), E 6(C), E 7(D) Engine ECU