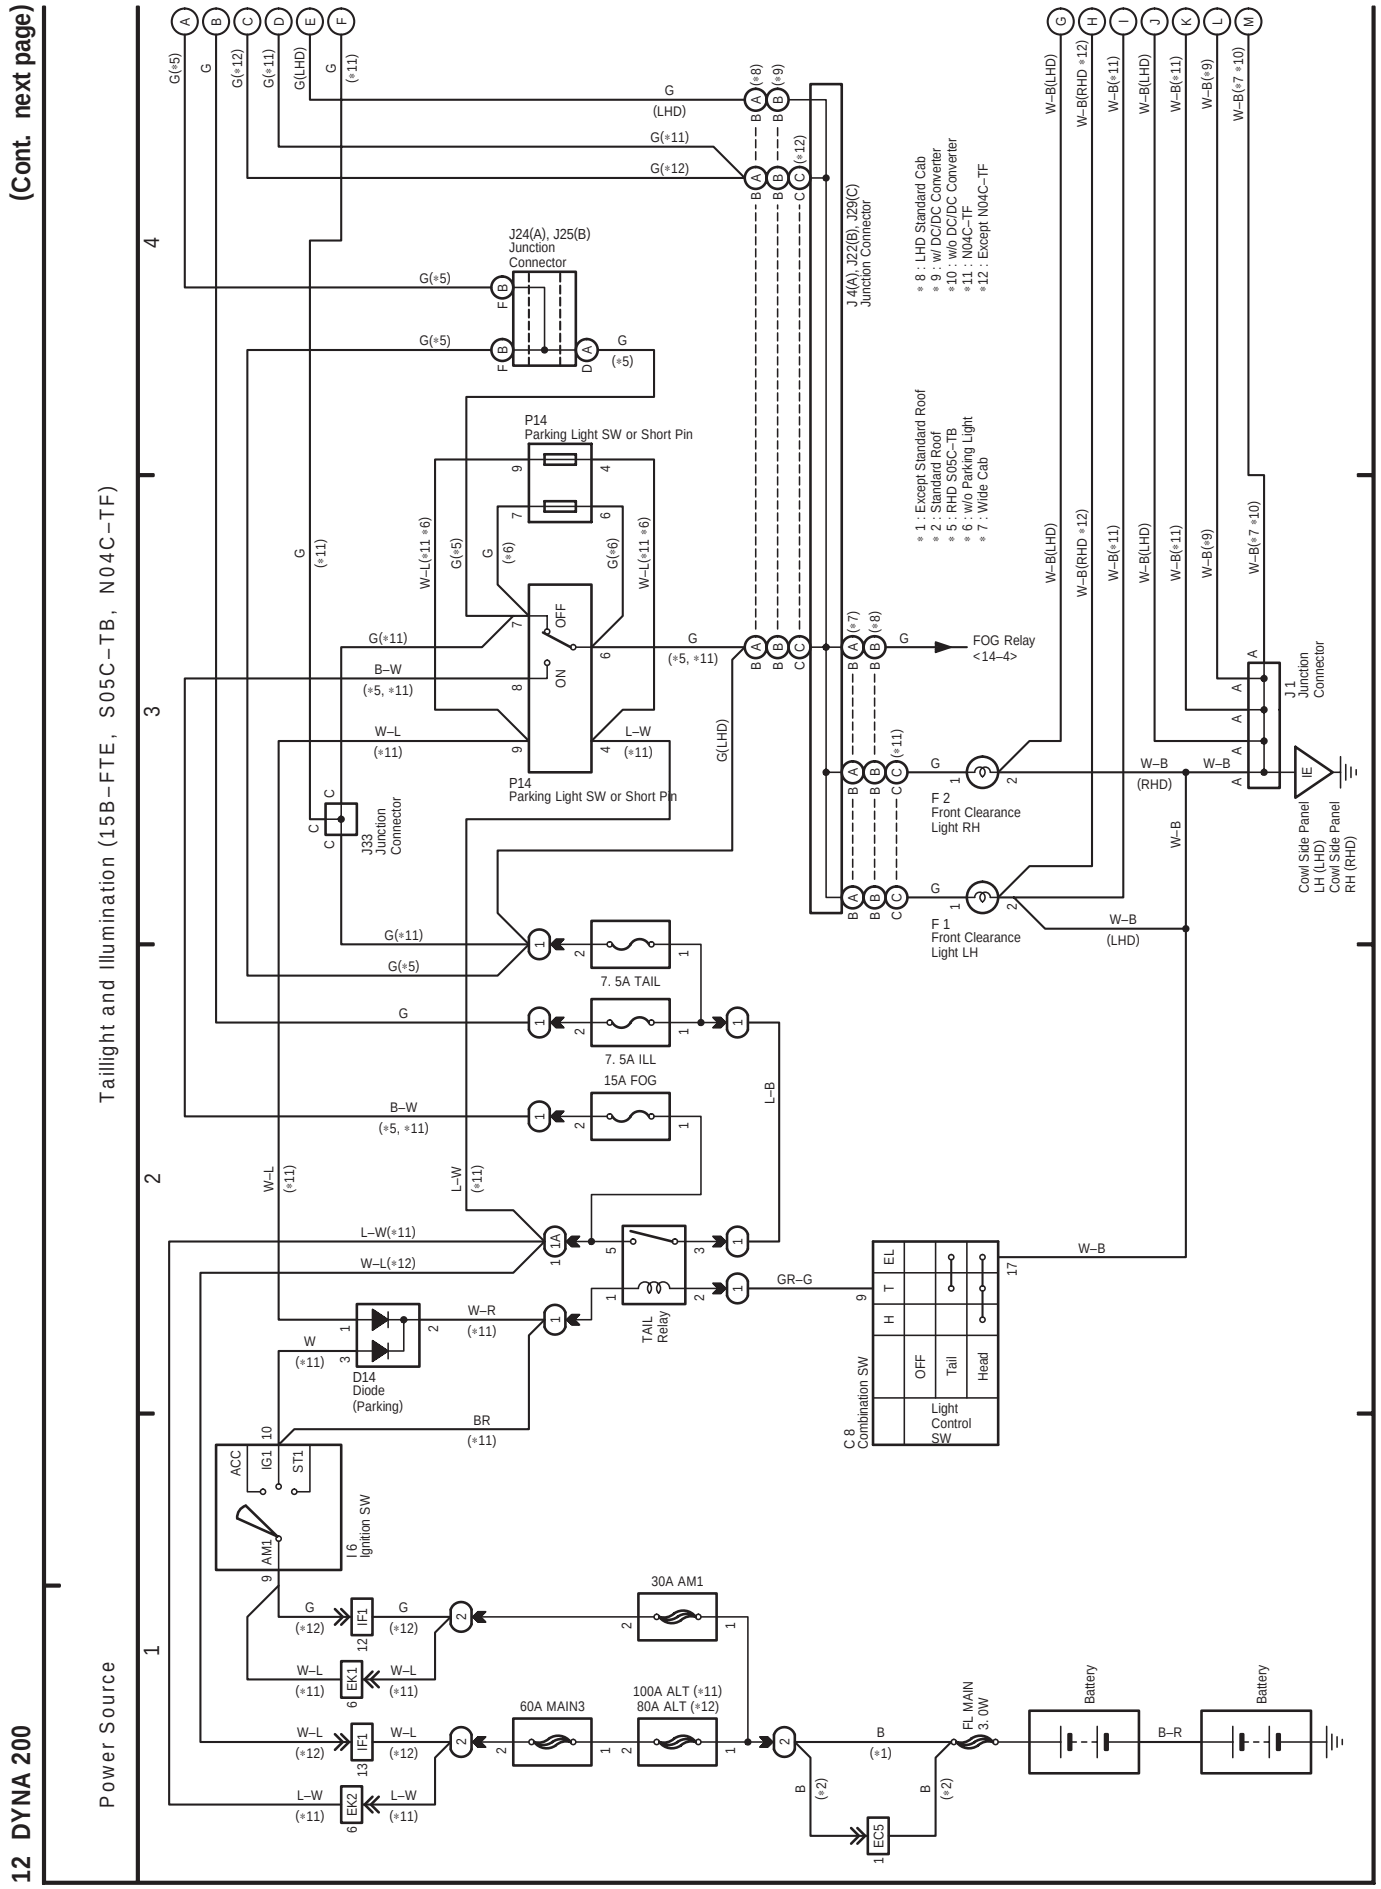

(Cont. next page)
12 DYNA 200
Power Source
Taillight and Illumination (15B–FTE, S05C–TB, N04C–TF)
J24(A), J25(B) Junction Connector
J 4(A), J22(B), J29(C) Junction Connector
P14 Parking Light SW or Short Pin
J33 Junction Connector
J 1 Junction Connector
F 2 Front Clearance Light RH
F 1 Front Clearance Light LH
FOG Relay <14–4>
7. 5A TAIL
7. 5A ILL
15A FOG
TAIL Relay
D14 Diode (Parking)
I 6 Ignition SW
C 8 Combination SW
Light Control SW
30A AM1
60A MAIN3
100A ALT (*11) 80A ALT (*12)
FL MAIN 3. 0W
Battery
Cowl Side Panel LH (LHD) Cowl Side Panel RH (RHD)
* 1 : Except Standard Roof
* 2 : Standard Roof
* 5 : RHD S05C–TB
* 6 : w/o Parking Light
* 7 : Wide Cab
* 8 : LHD Standard Cab
* 9 : w/ DC/DC Converter
*10 : w/o DC/DC Converter
*11 : N04C–TF
*12 : Except N04C–TF

OVERALL ELECTRICAL WIRING DIAGRAM

