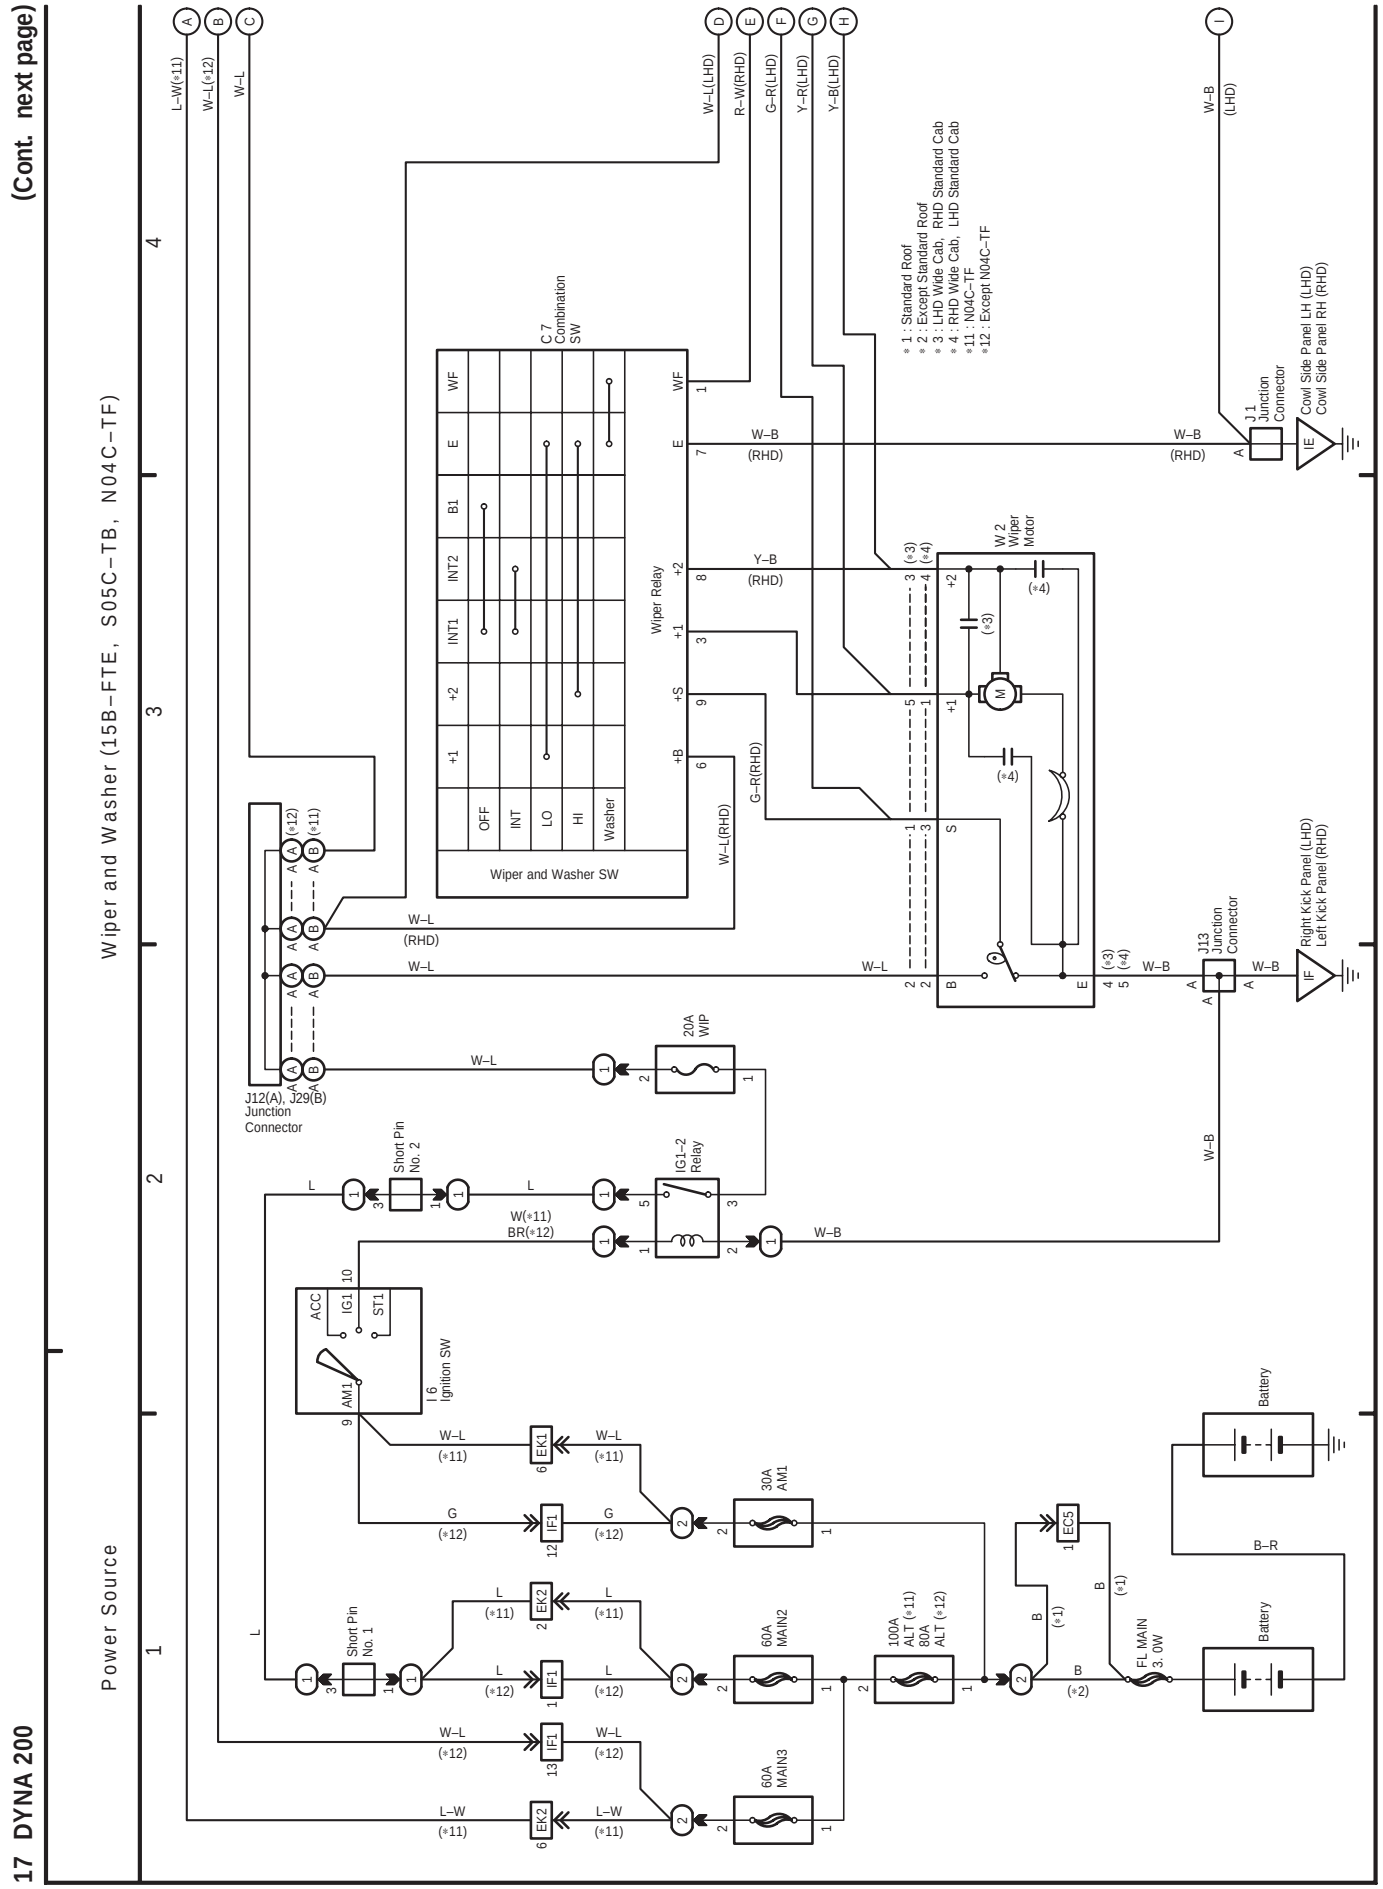

(Cont. next page)
17 DYNA 200
Power Source
Wiper and Washer (15B–FTE, S05C–TB, N04C–TF)
1
2
3
4
Wiper and Washer SW
OFF
INT
LO
HI
Washer
C 7 Combination SW
Wiper Relay
W 2 Wiper Motor
J1 Junction Connector
J13 Junction Connector
J12(A), J29(B) Junction Connector
Cowl Side Panel LH (LHD)
Cowl Side Panel RH (RHD)
Right Kick Panel (LHD)
Left Kick Panel (RHD)
I 6 Ignition SW
ACC
IG1
ST1
Short Pin No. 1
Short Pin No. 2
IG1–2 Relay
20A WIP
30A AM1
60A MAIN2
60A MAIN3
100A ALT (*11)
80A ALT (*12)
FL MAIN
Battery
EK1
EK2
IF1
EC5
* 1 : Standard Roof
* 2 : Except Standard Roof
* 3 : LHD Wide Cab, RHD Standard Cab
* 4 : RHD Wide Cab, LHD Standard Cab
*11 : N04C–TF
*12 : Except N04C–TF

OVERALL ELECTRICAL WIRING DIAGRAM

