SOUND QUALITY IS BAD ONLY WHEN PLAYING TAPE

INSPECTION PROCEDURE

1	REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK

(a) Replace the faulty cassette tape with the normal one in order to see if the same trouble occurs again.
Standard: Malfunction disappears.

OK → **CASSETTE TAPE FAULTY**

NG


2	CHECK FOR ANY FOREIGN OBJECT

(a) Check that no foreign object and defect are detected in the cassette tape player of the radio receiver.
Standard: No foreign object and defect are detected.

NG → **REMOVE FOREIGN OBJECT**

OK

3	CLEAN HEAD AND CHECK OPERATION

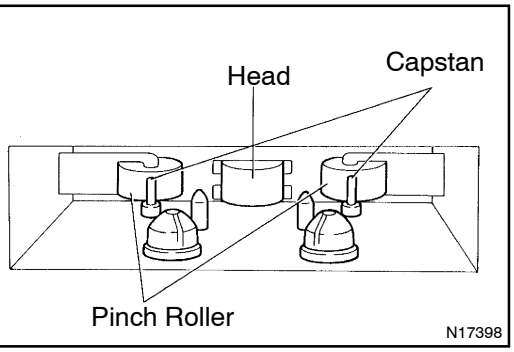

(a) Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
(b) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
(c) Check that the same trouble occurs again.
Standard: Malfunction disappear.

OK → **HEAD DIRTY**

NG

REPAIR OR REPLACE RADIO RECEIVER ASSY