
ECD SYSTEM (S05C–TB)

INSPECTION

1007R–02

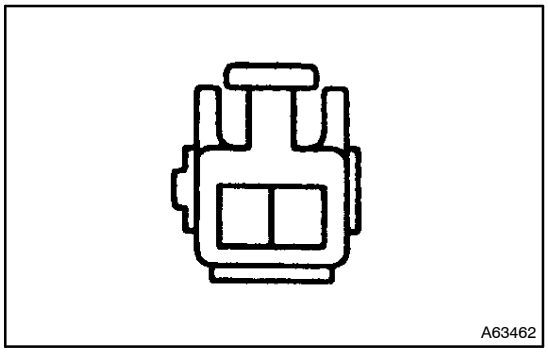

1. INSPECT ACCELERATOR PEDAL SWITCH

(a) Disconnect the switch connector.

(b) Using an ohmmeter, check the continuity between the terminals.

Standard:

Accelerator Pedal Position	Specified Condition
Fully closed	No Continuity
Fully open	Continuity

IF the is not as continuity, replace the switch.

(c) Reconnect the switch connector.