
CYLINDER HEAD GASKET (15B–FTE)

COMPONENTS


1417D–01

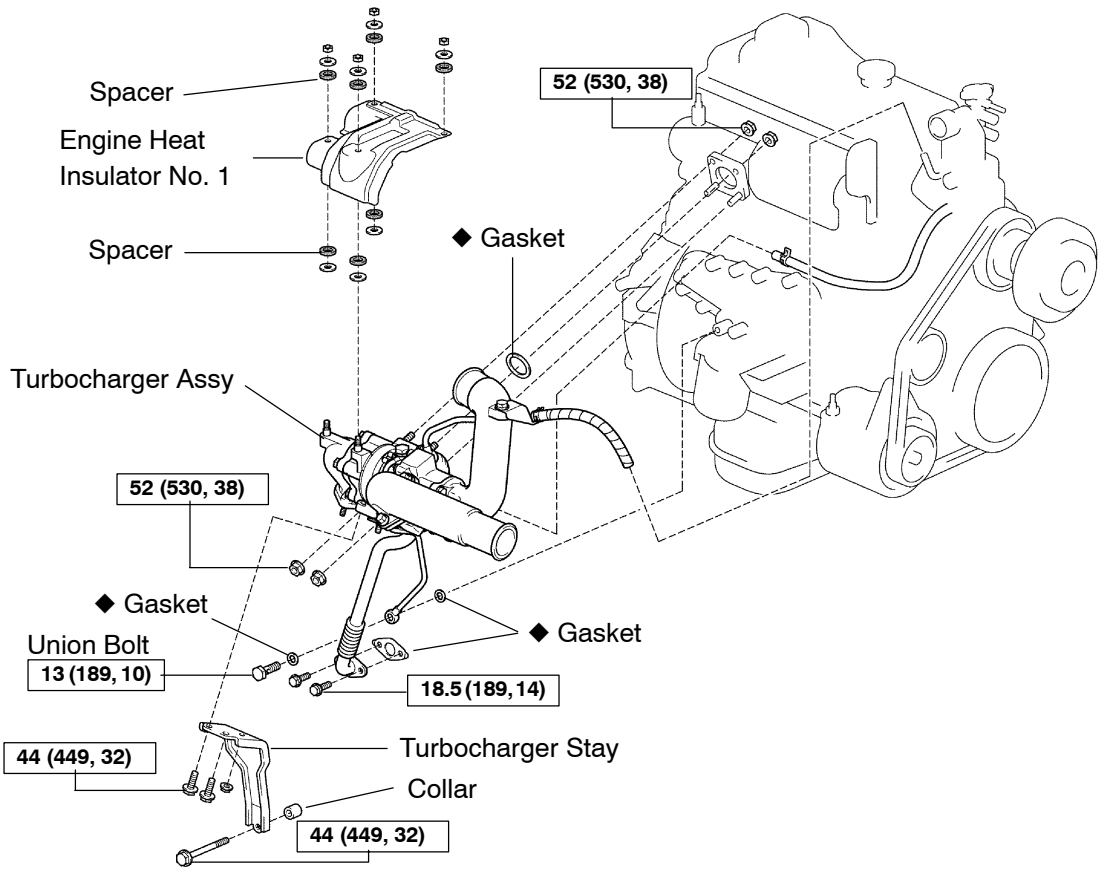

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

A79886

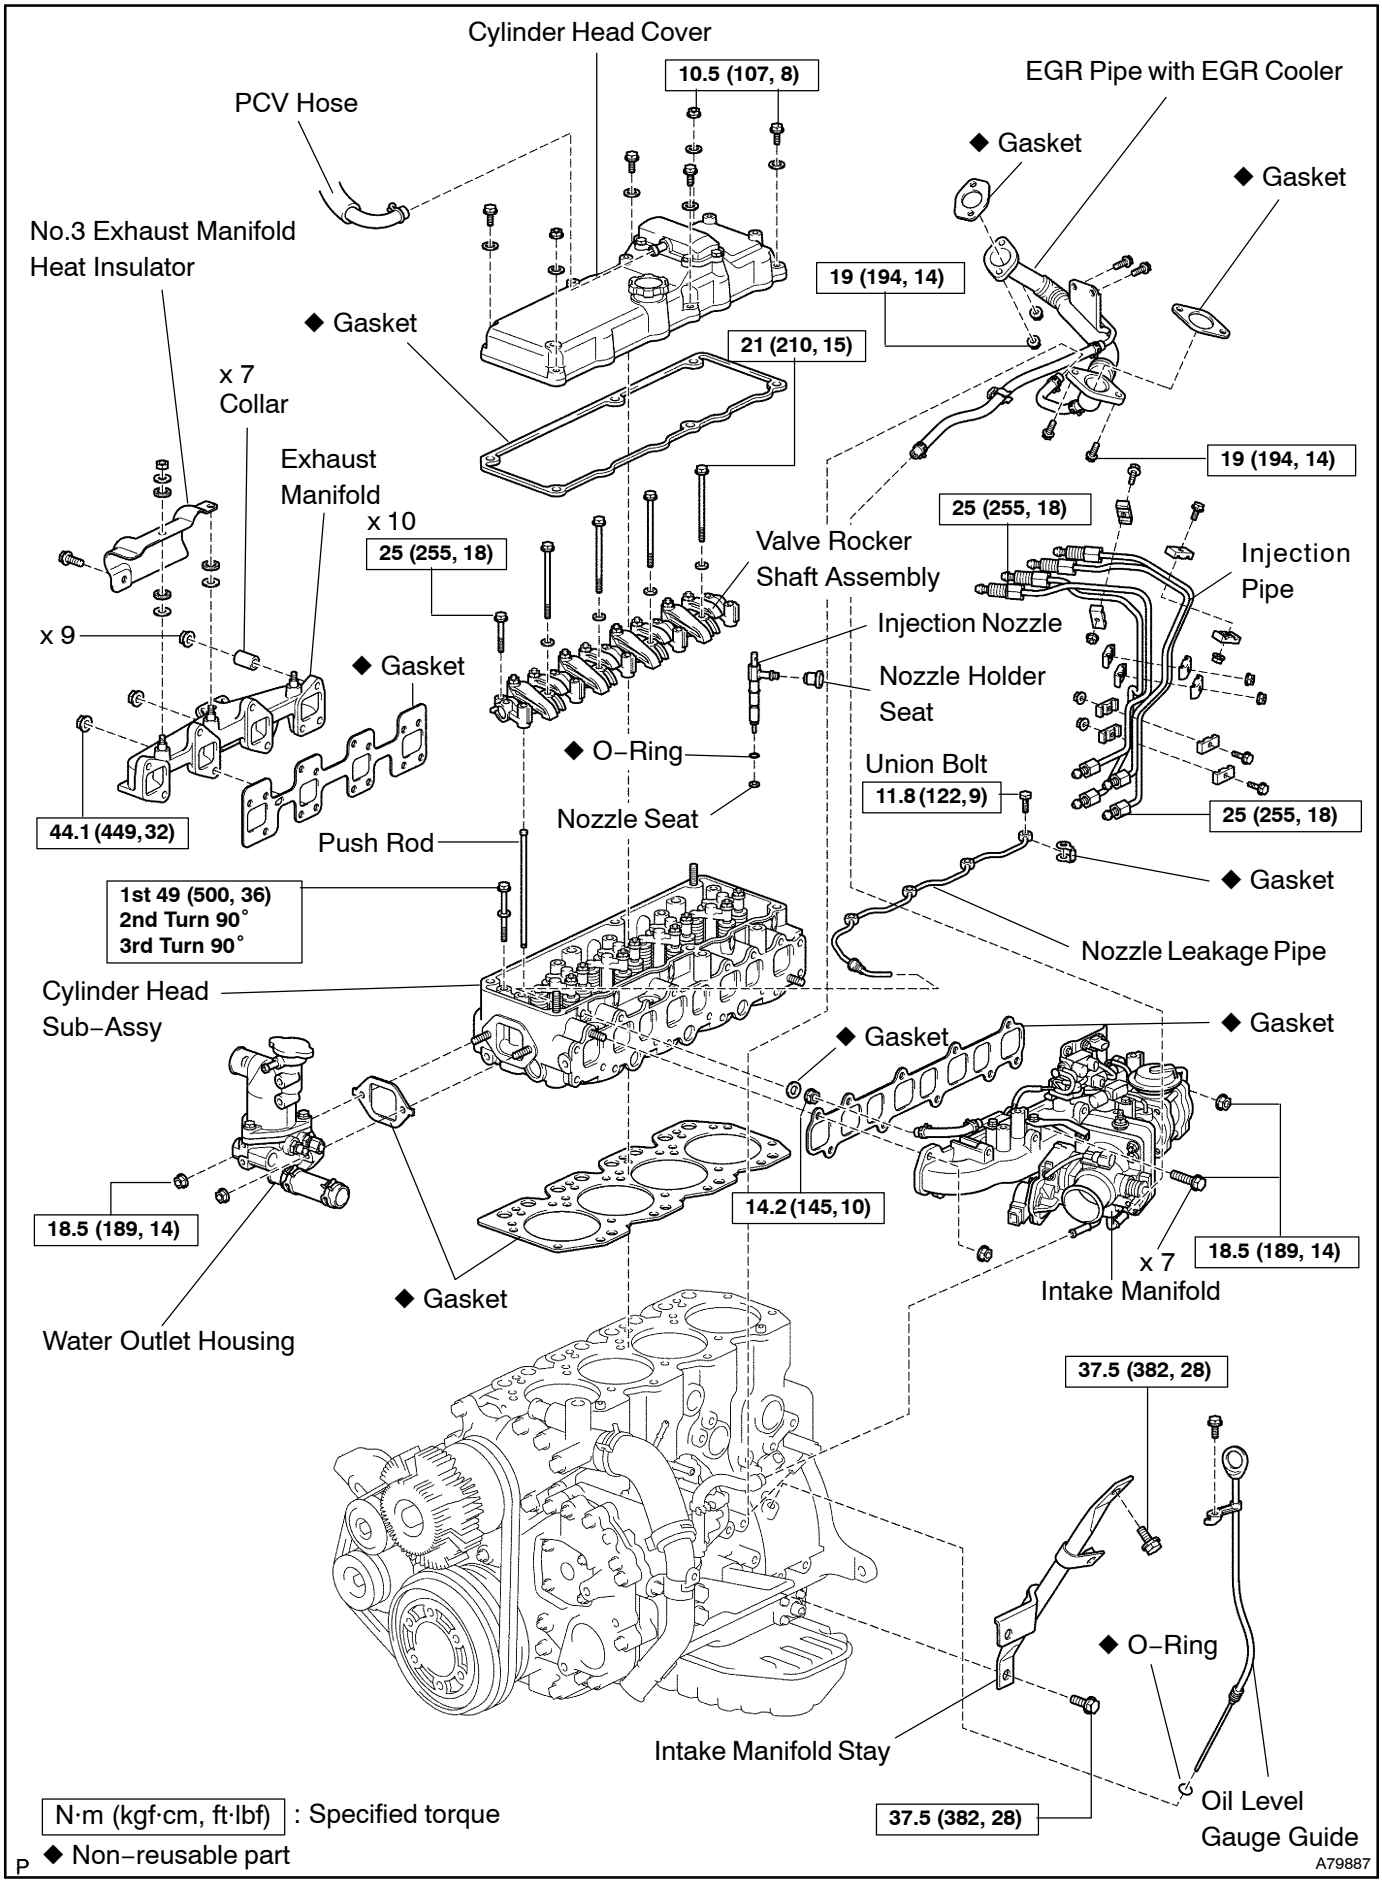
Cylinder Head Cover
10.5 (107, 8)
PCV Hose
EGR Pipe with EGR Cooler
◆ Gasket
◆ Gasket
No.3 Exhaust Manifold Heat Insulator
19 (194, 14)
◆ Gasket
21 (210, 15)
x 7
Collar
Exhaust Manifold
19 (194, 14)
25 (255, 18)
x 10
25 (255, 18)
Valve Rocker Shaft Assembly
Injection Pipe
x 9
Injection Nozzle
◆ Gasket
Nozzle Holder Seat
◆ O–Ring
Union Bolt
11.8 (122, 9)
Nozzle Seat
25 (255, 18)
44.1 (449, 32)
Push Rod
◆ Gasket
1st 49 (500, 36)
2nd Turn 90°
3rd Turn 90°
Nozzle Leakage Pipe
Cylinder Head Sub–Assy
◆ Gasket
◆ Gasket
18.5 (189, 14)
14.2 (145, 10)
18.5 (189, 14)
x 7
Intake Manifold
◆ Gasket
Water Outlet Housing
37.5 (382, 28)
◆ O–Ring
Intake Manifold Stay
37.5 (382, 28)
Oil Level Gauge Guide
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
A79887