

FRONT DOOR

COMPONENTS

750L3–01

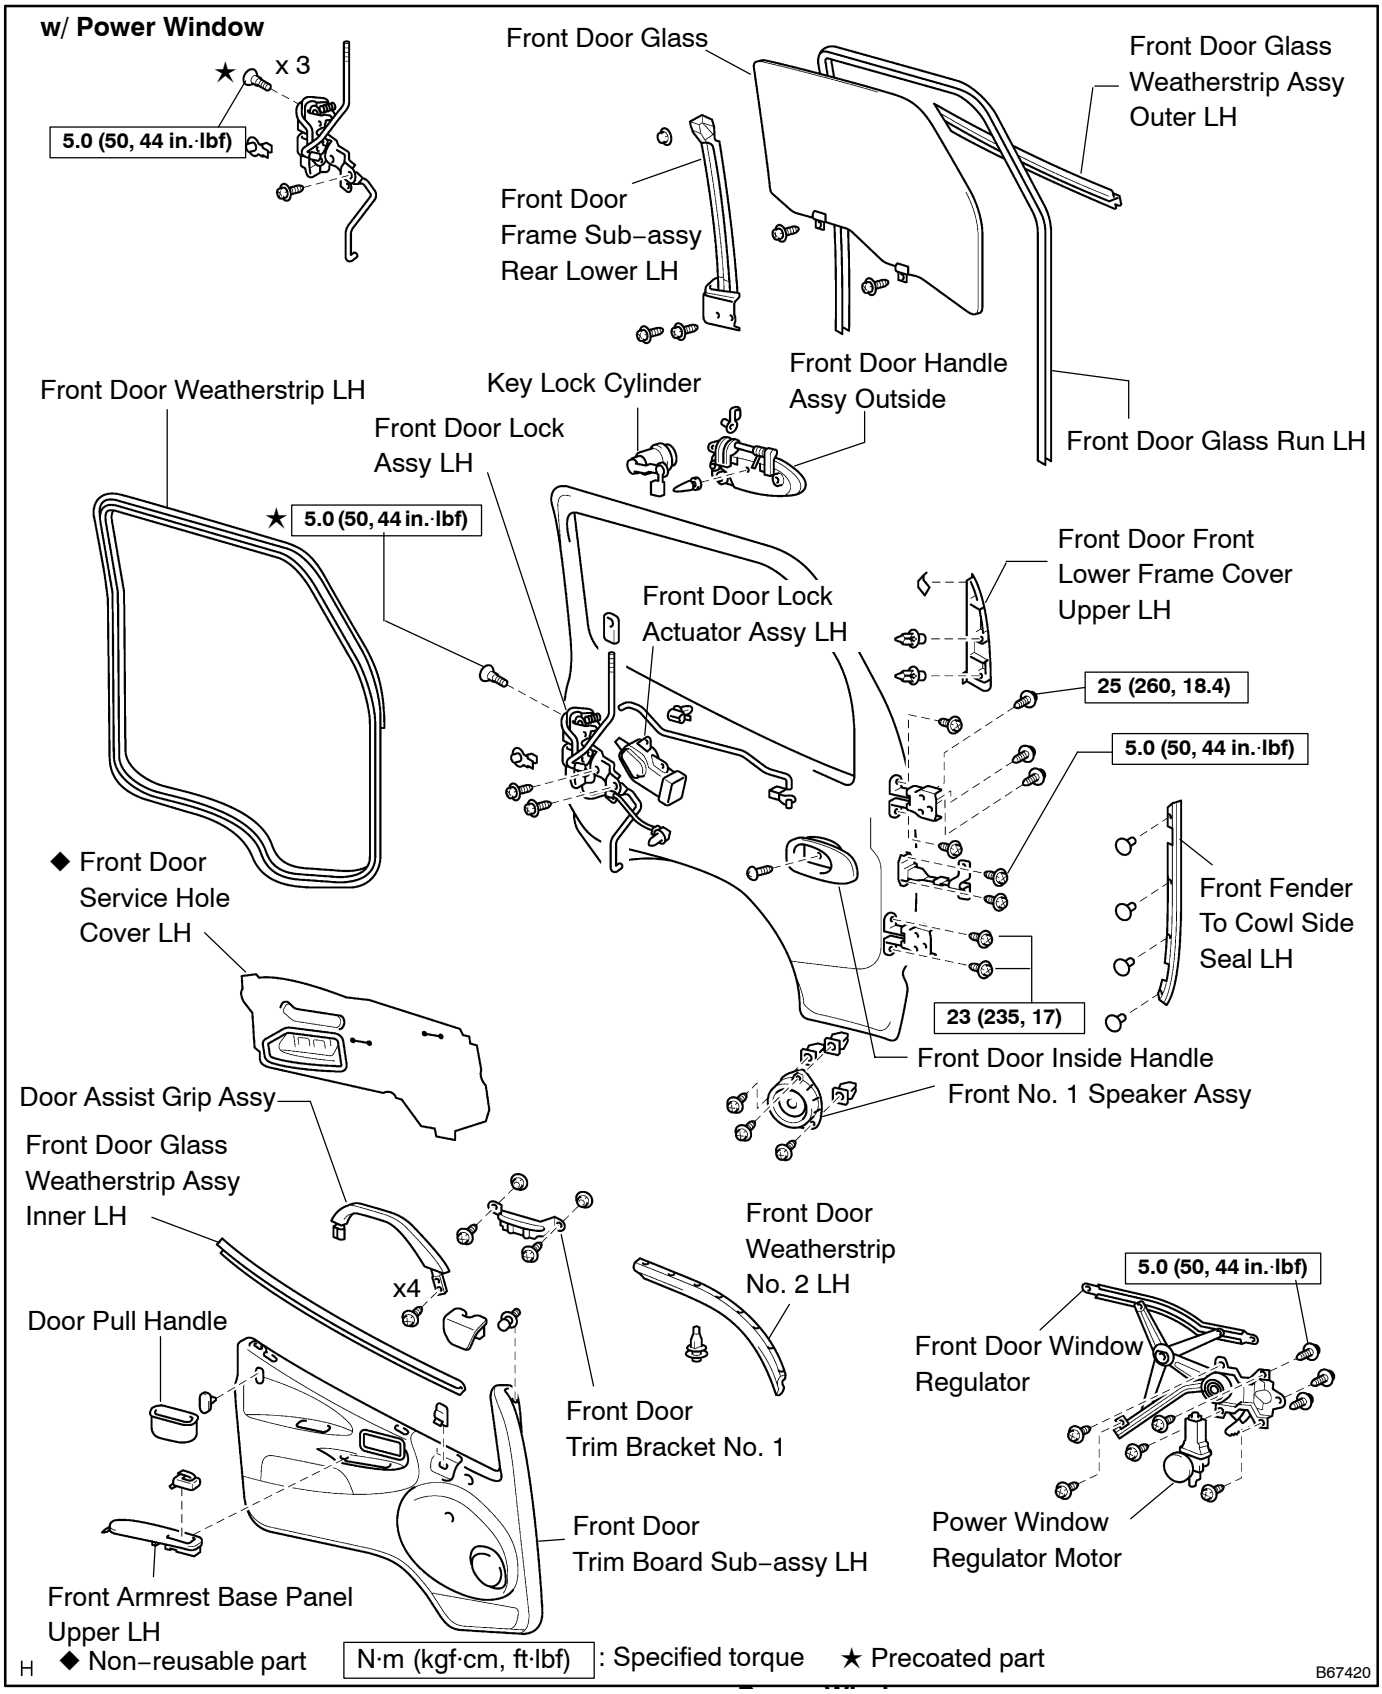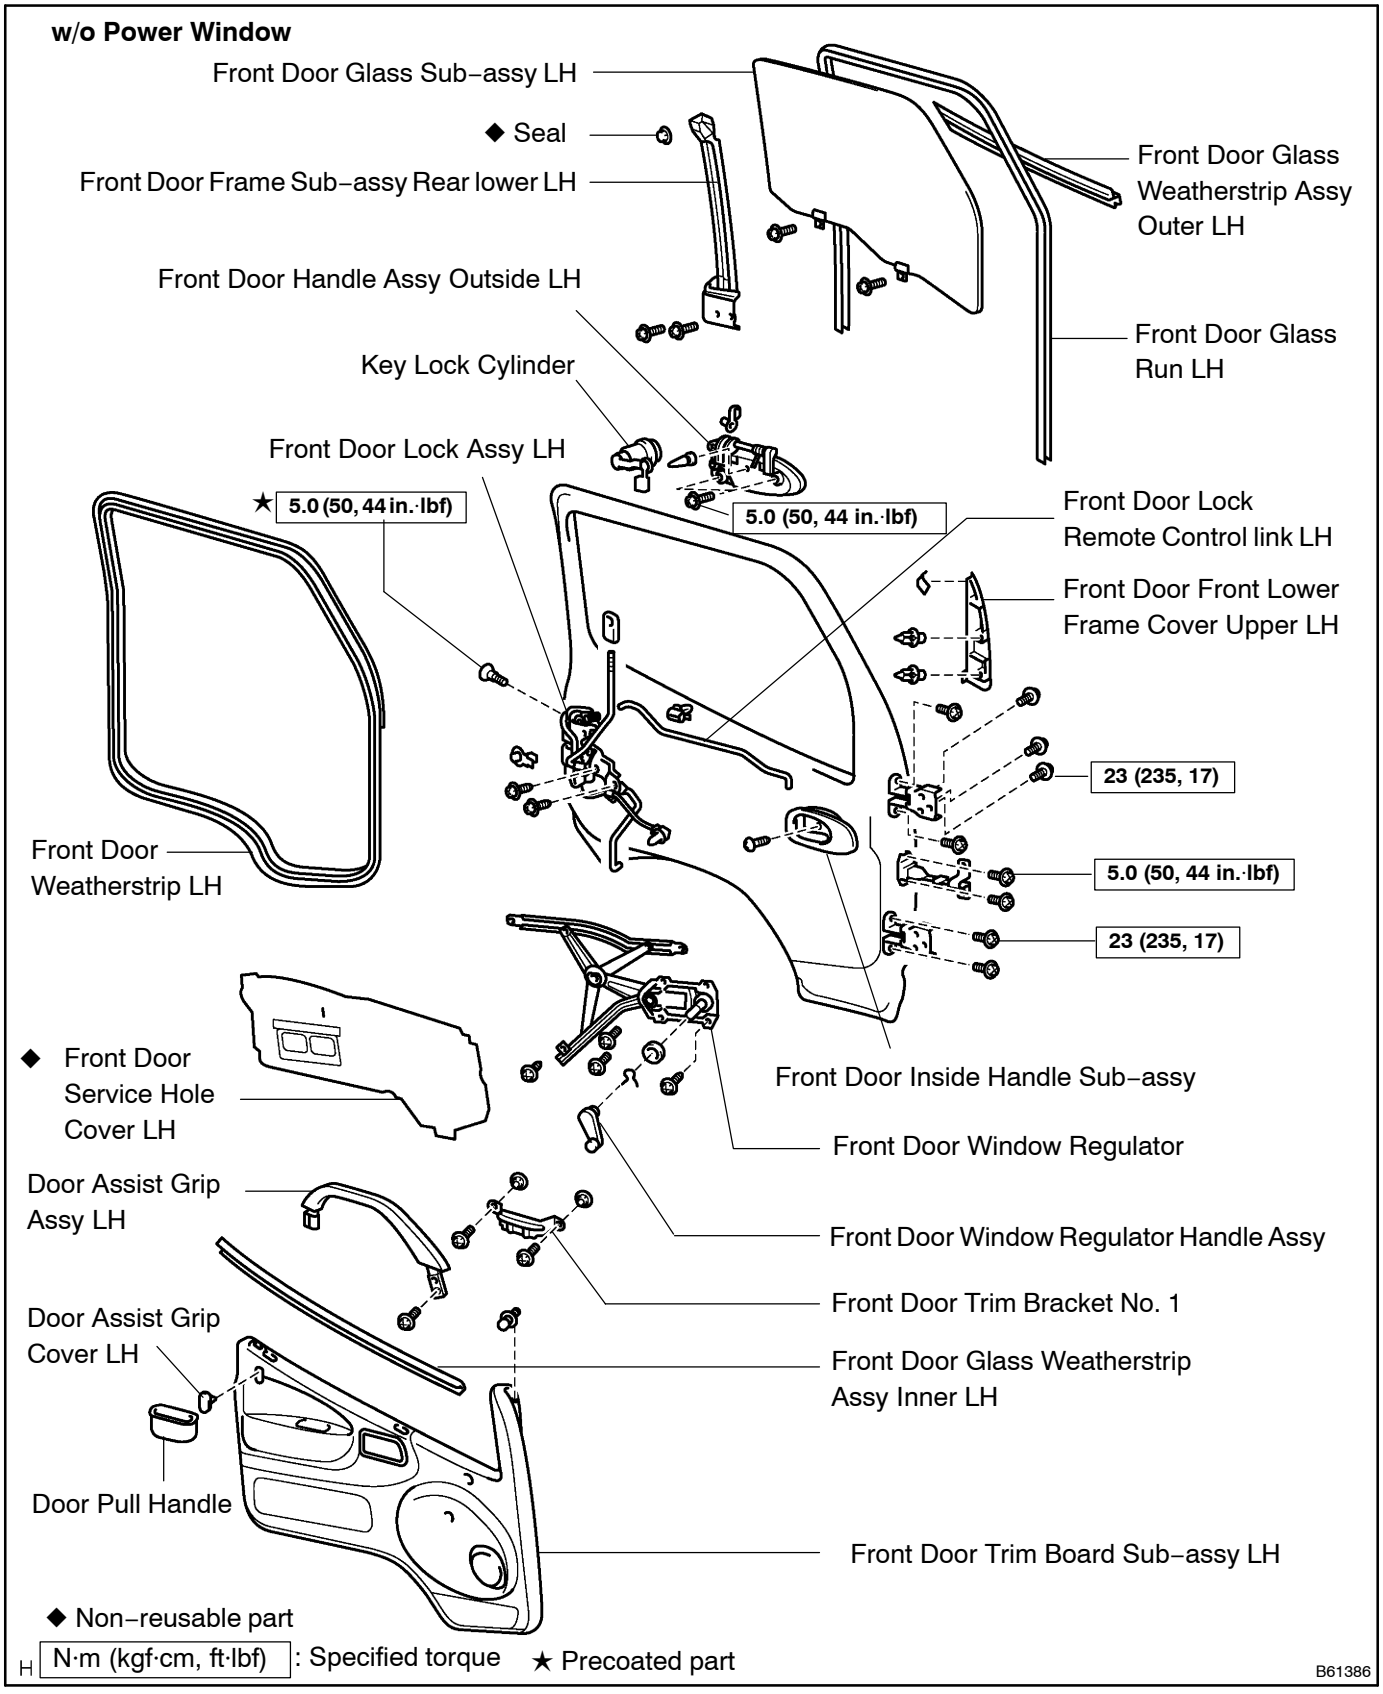


w/o Power Window
Front Door Glass Sub–assy LH
◆ Seal
Front Door Frame Sub–assy Rear lower LH
Front Door Handle Assy Outside LH
Key Lock Cylinder
Front Door Lock Assy LH
★ 5.0 (50, 44 in.·lbf)
5.0 (50, 44 in.·lbf)
Front Door Glass Weatherstrip Assy Outer LH
Front Door Glass Run LH
Front Door Lock Remote Control link LH
Front Door Front Lower Frame Cover Upper LH
23 (235, 17)
5.0 (50, 44 in.·lbf)
23 (235, 17)
Front Door Weatherstrip LH
◆ Front Door Service Hole Cover LH
Front Door Inside Handle Sub–assy
Front Door Window Regulator
Door Assist Grip Assy LH
Front Door Window Regulator Handle Assy
Front Door Trim Bracket No. 1
Door Assist Grip Cover LH
Front Door Glass Weatherstrip Assy Inner LH
Door Pull Handle
Front Door Trim Board Sub–assy LH
◆ Non–reusable part
H N·m (kgf·cm, ft·lbf) : Specified torque
★ Precoated part
B61386