
EXHAUST MANIFOLD (14B)

1507T–01

INSPECTION

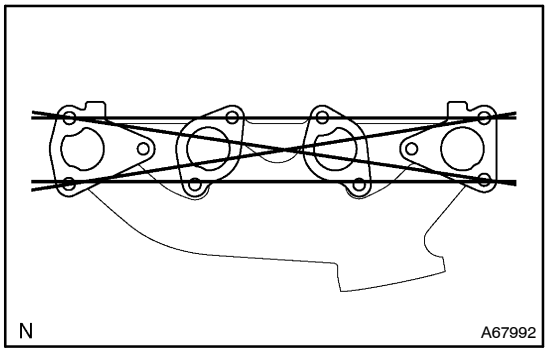

1. INSPECT EXHAUST MANIFOLD

(a) Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head for warpage.

Maximum warpage: 0.20 mm (0.0079 in.)

If the warpage is greater than the maximum, replace the manifold.