

(Cont. next page)

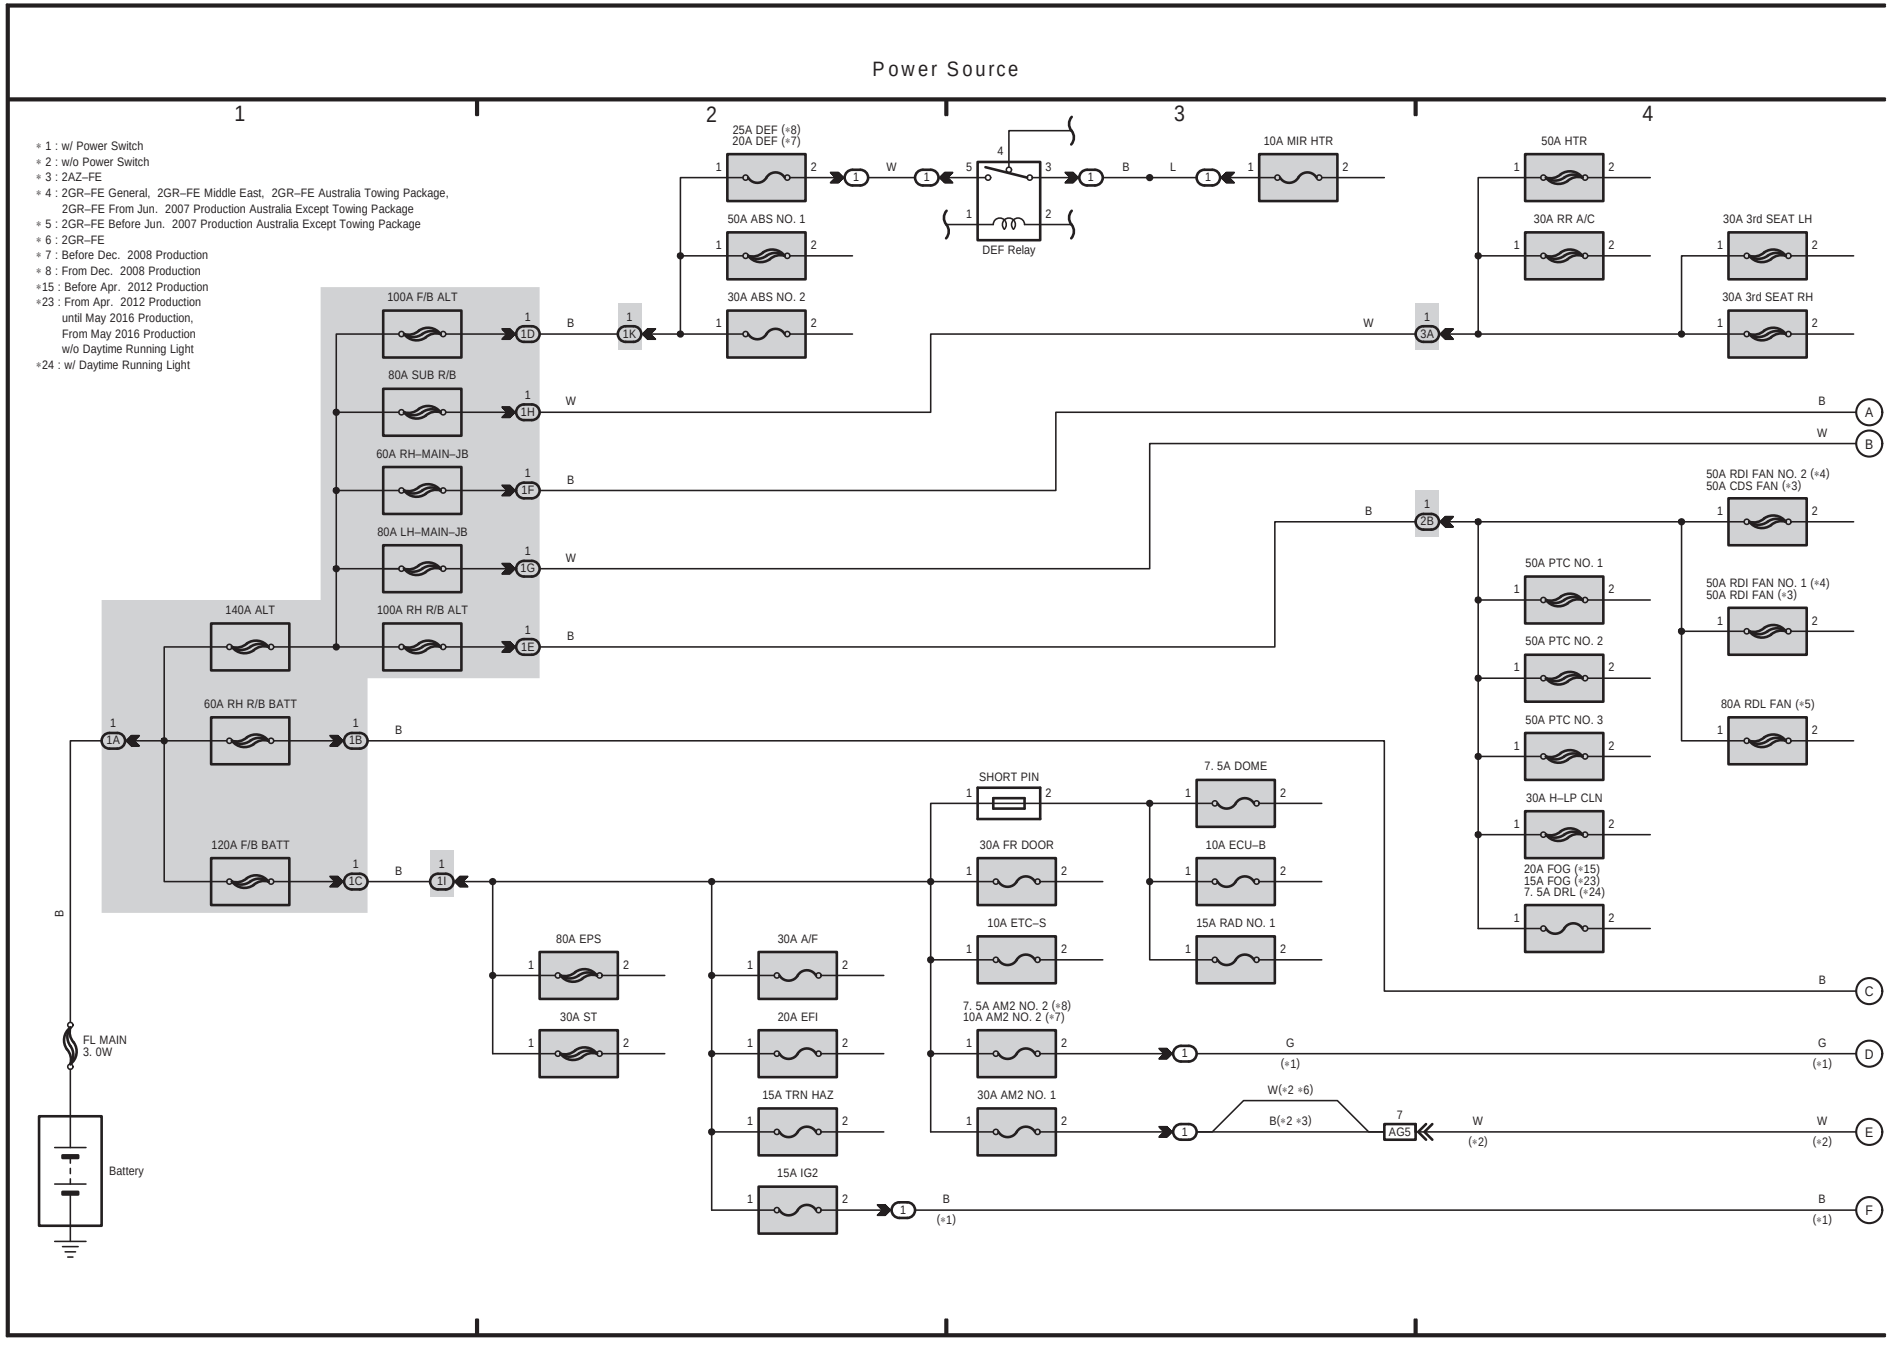



(Cont. next page)

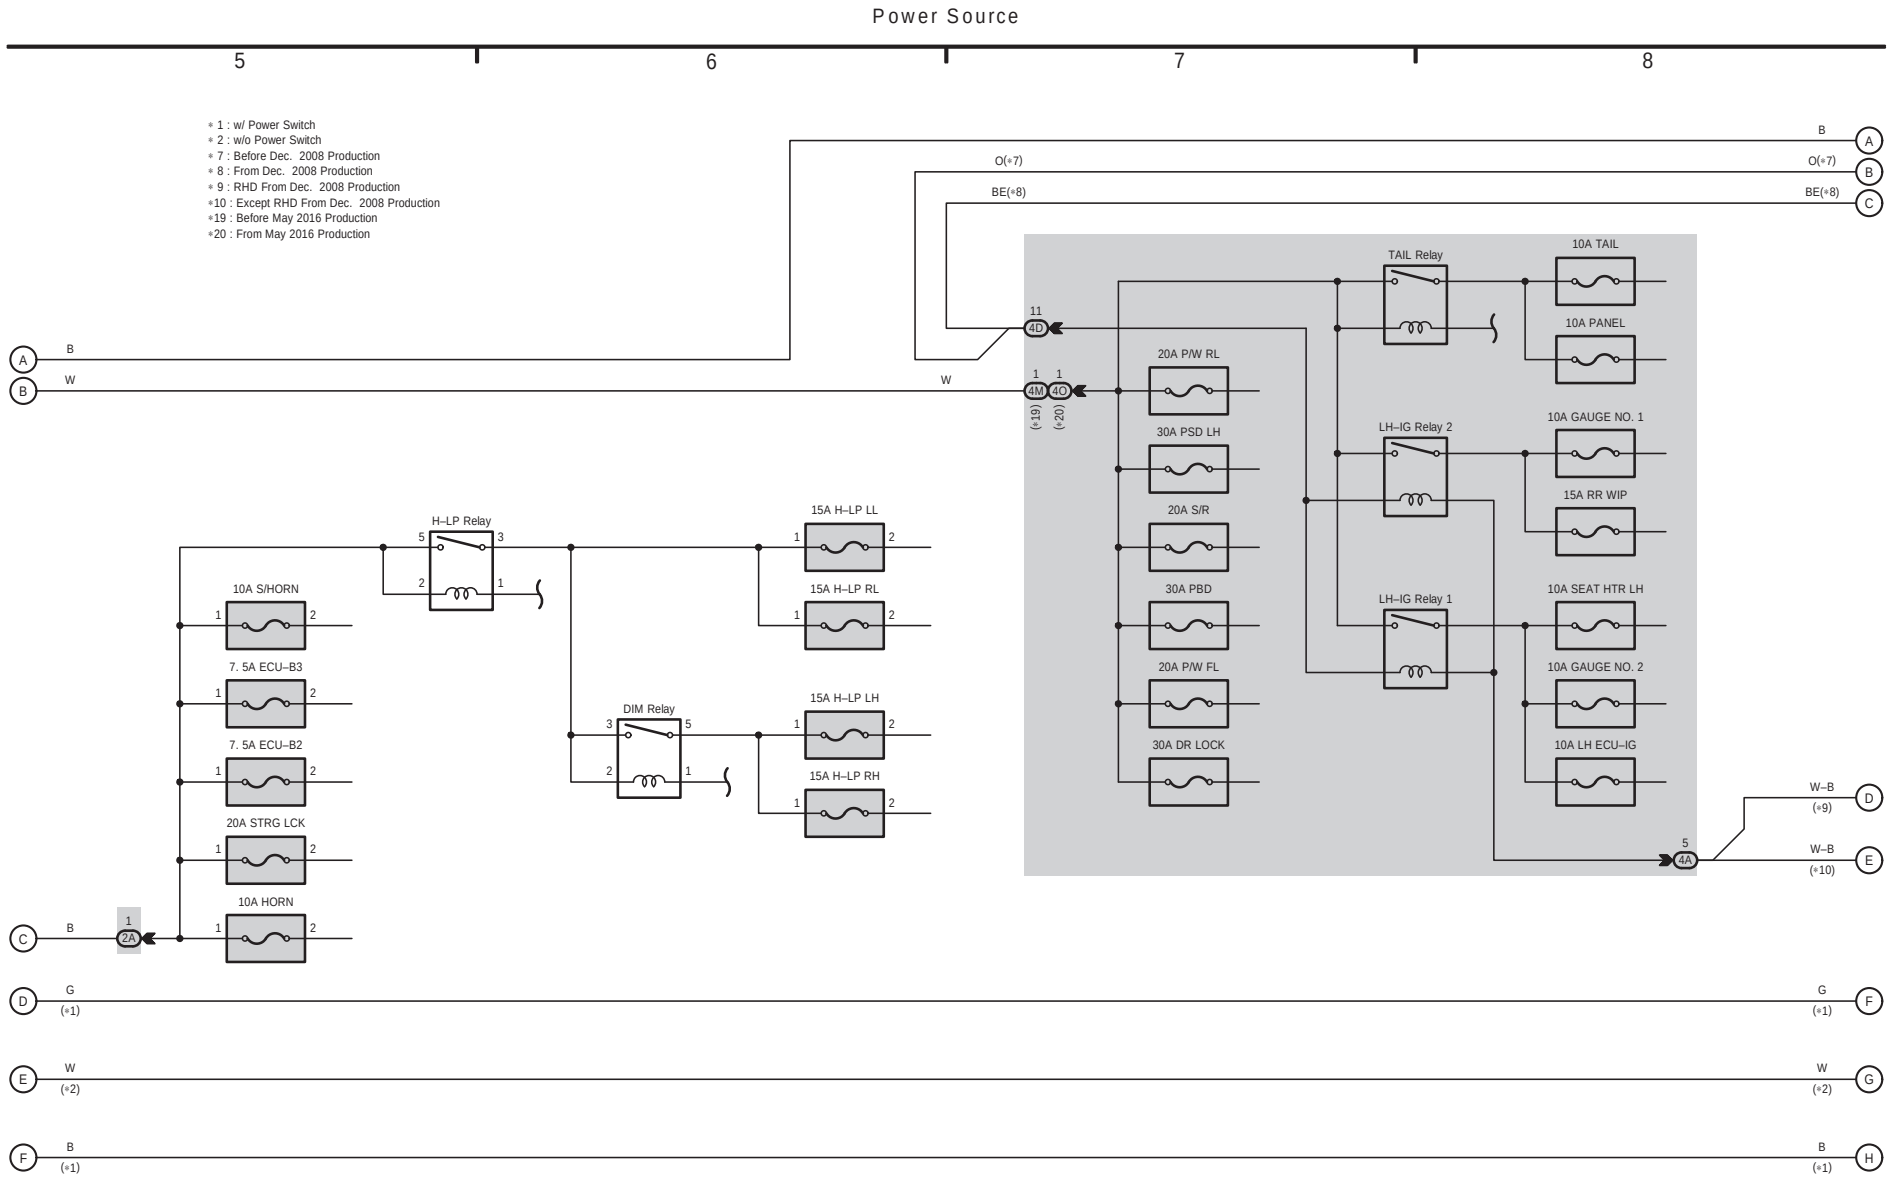

1 PREVIA / TARAGO (Cont' d)

(Cont. next page)

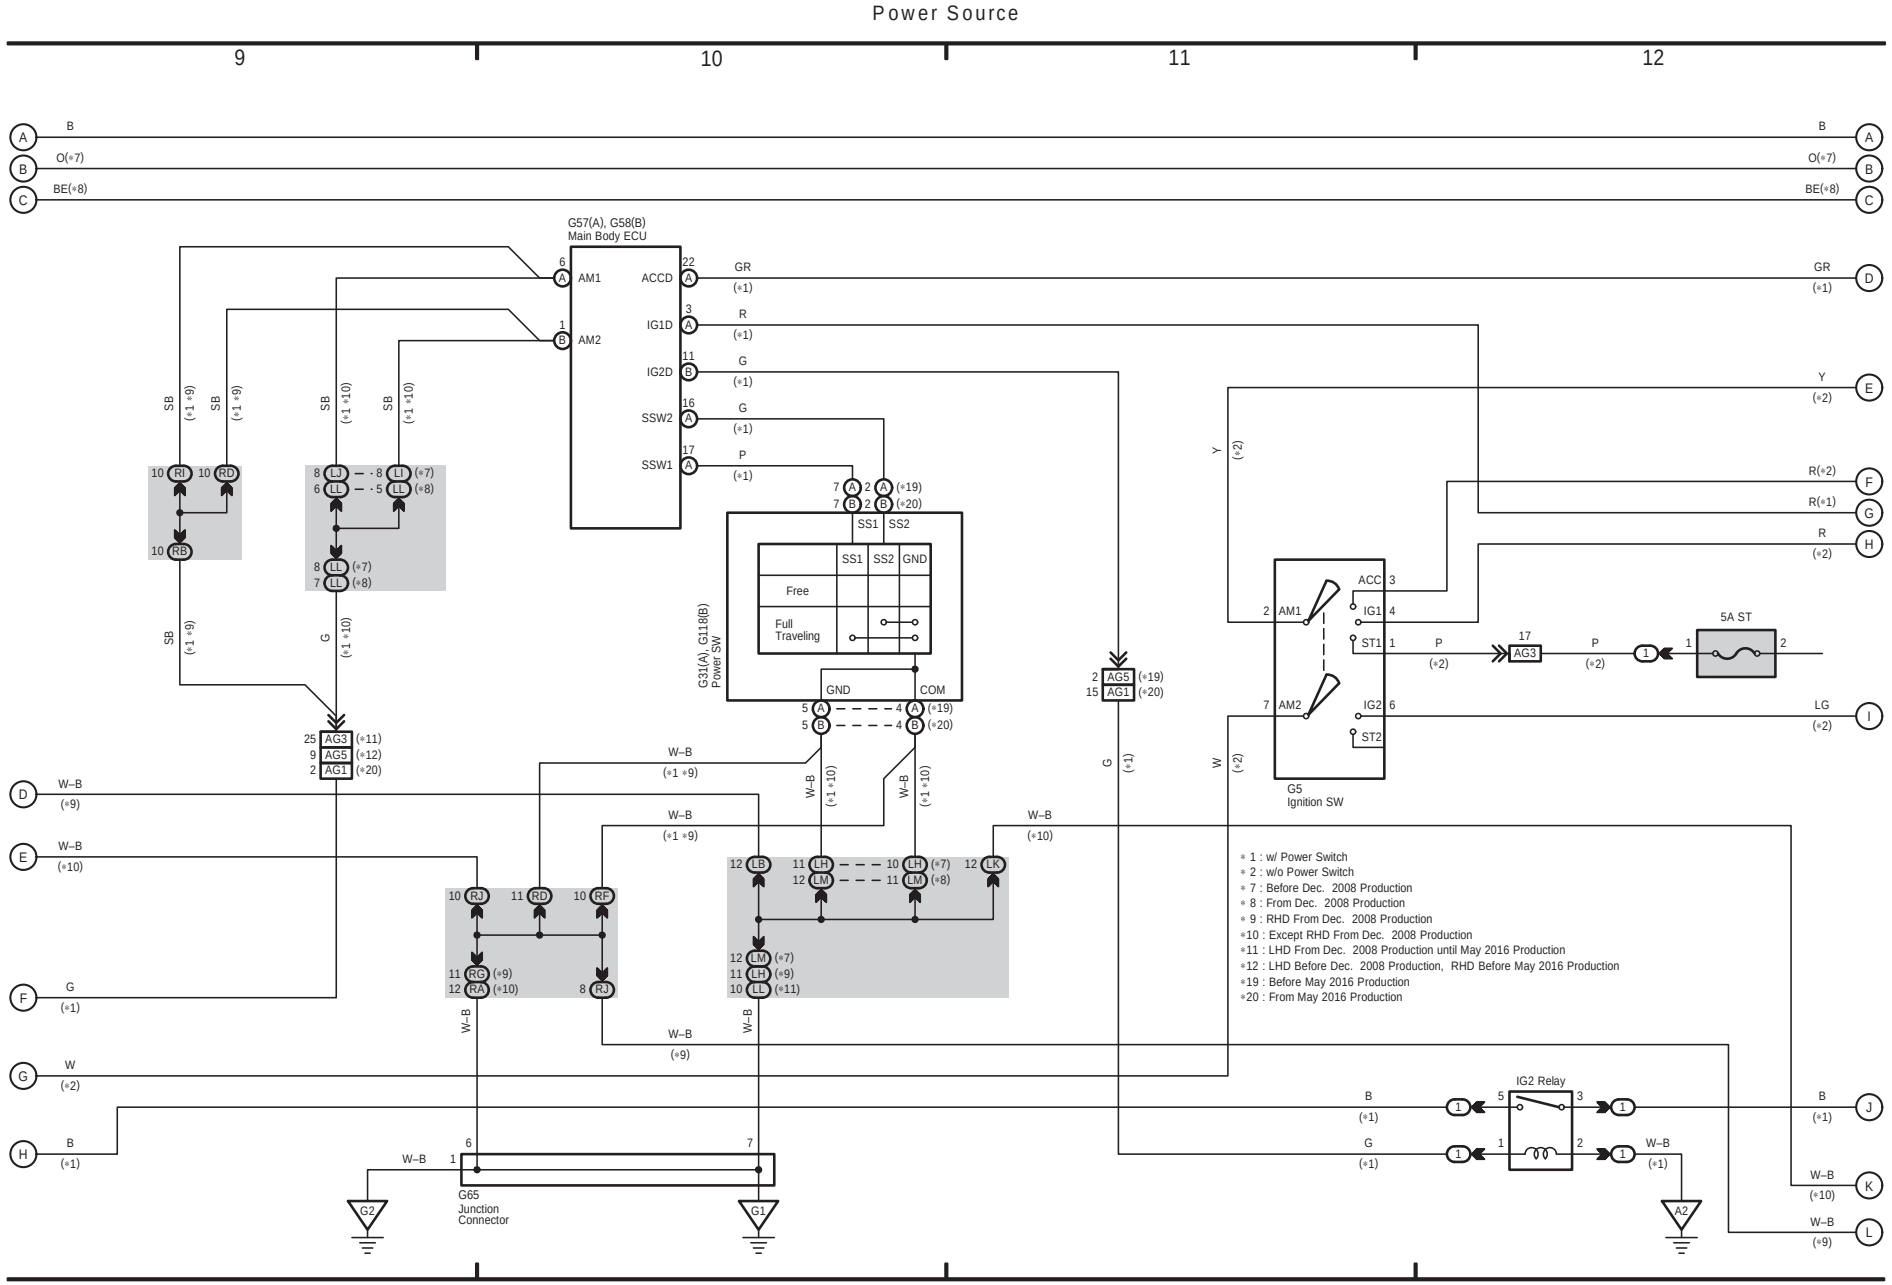

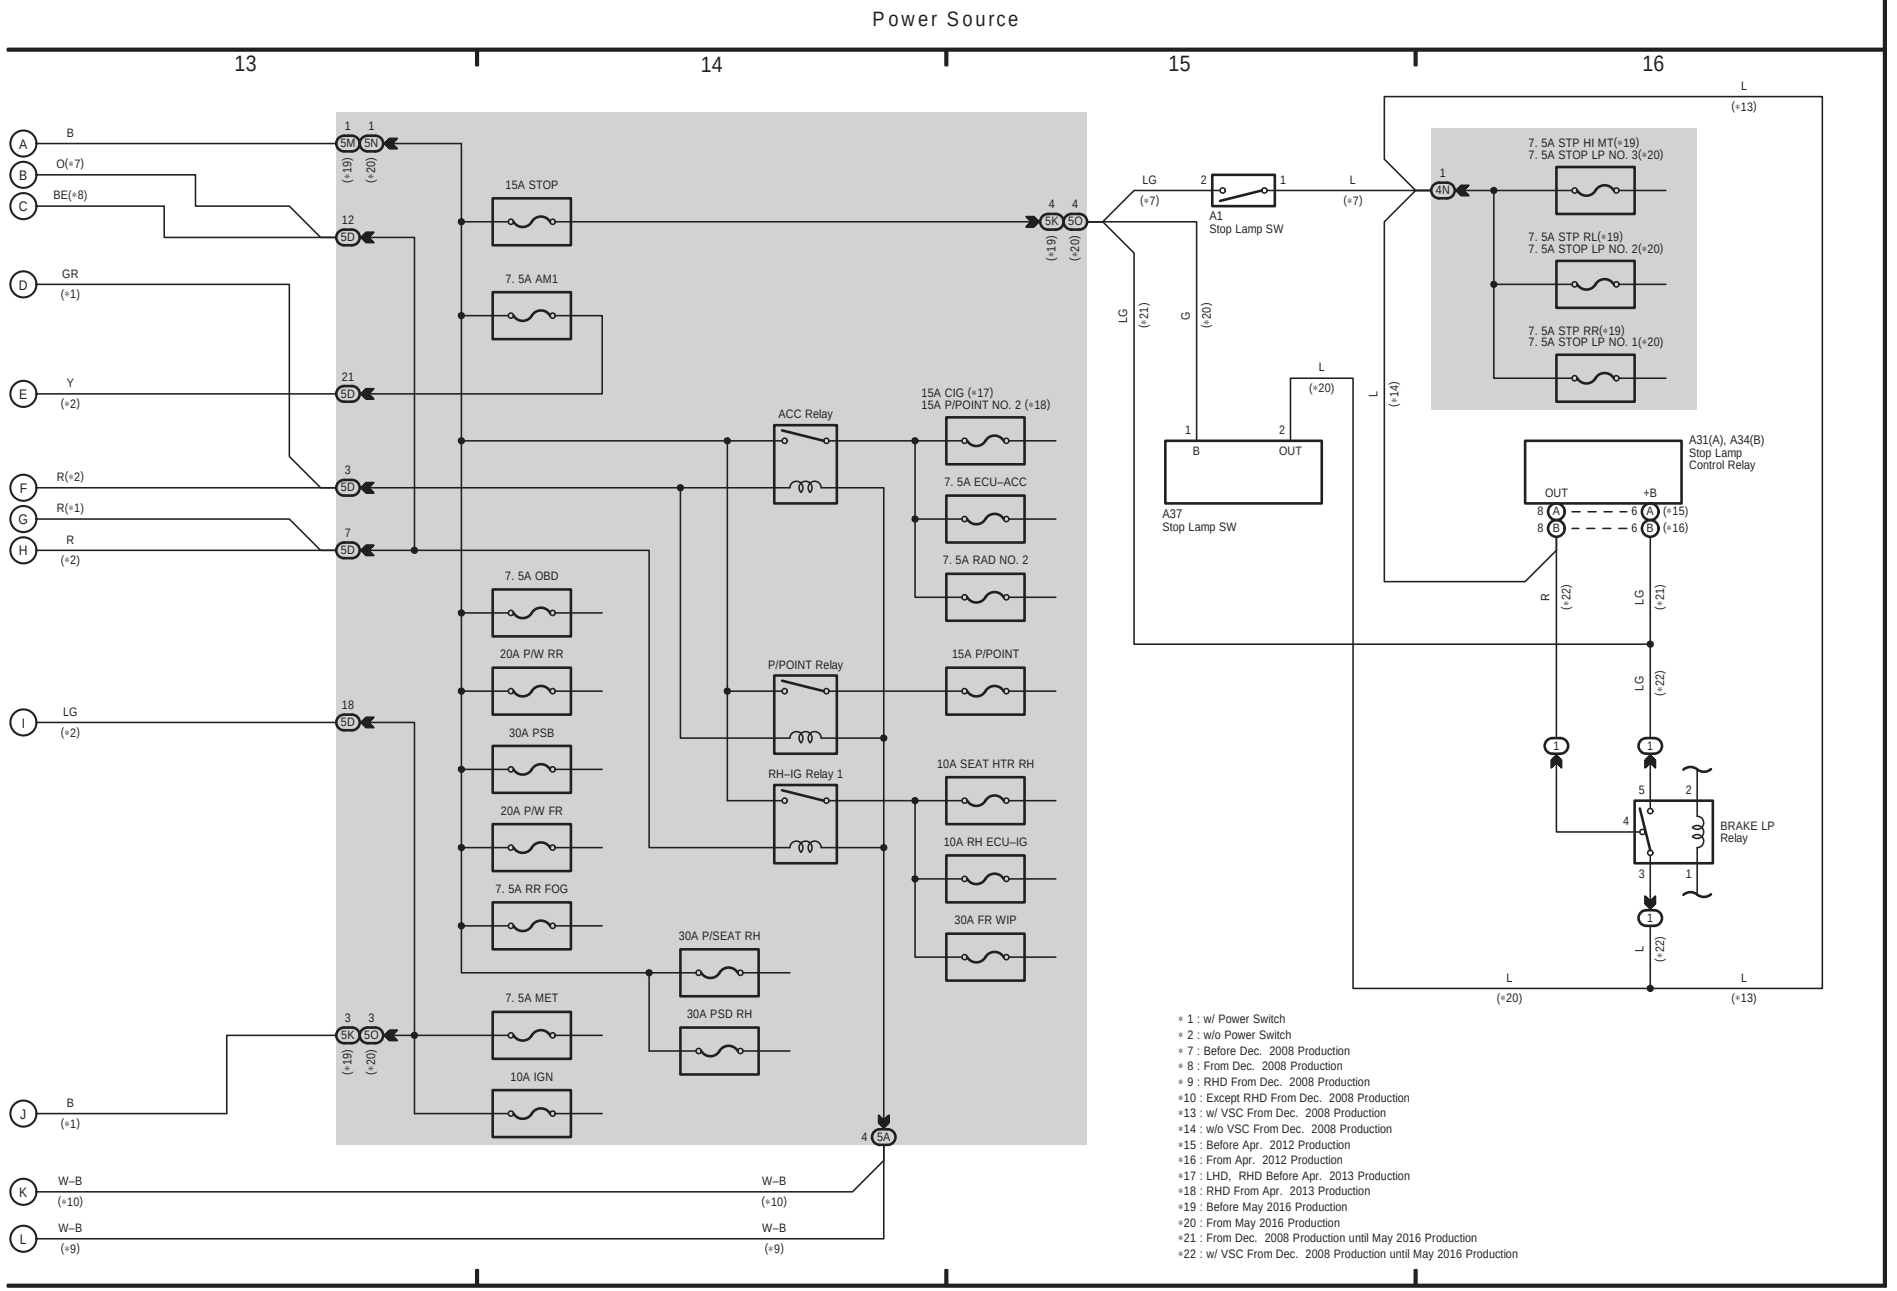
Power Source
13
14
15
16
15A STOP
7. 5A AM1
ACC Relay
15A CIG (*17)
15A P/POINT NO. 2 (*18)
7. 5A ECU–ACC
7. 5A RAD NO. 2
7. 5A OBD
20A P/W RR
P/POINT Relay
15A P/POINT
30A PSB
RH–IG Relay 1
10A SEAT HTR RH
20A P/W FR
10A RH ECU–IG
7. 5A RR FOG
30A FR WIP
30A P/SEAT RH
7. 5A MET
30A PSD RH
10A IGN
A1
Stop Lamp SW
A37
Stop Lamp SW
7. 5A STP HI MT(*19)
7. 5A STOP LP NO. 3(*20)
7. 5A STP RL(*19)
7. 5A STOP LP NO. 2(*20)
7. 5A STP RR(*19)
7. 5A STOP LP NO. 1(*20)
A31(A), A34(B)
Stop Lamp
Control Relay
BRAKE LP
Relay
* 1 : w/ Power Switch
* 2 : w/o Power Switch
* 7 : Before Dec. 2008 Production
* 8 : From Dec. 2008 Production
* 9 : RHD From Dec. 2008 Production
*10 : Except RHD From Dec. 2008 Production
*13 : w/ VSC From Dec. 2008 Production
*14 : w/o VSC From Dec. 2008 Production
*15 : Before Apr. 2012 Production
*16 : From Apr. 2012 Production
*17 : LHD, RHD Before Apr. 2013 Production
*18 : RHD From Apr. 2013 Production
*19 : Before May 2016 Production
*20 : From May 2016 Production
*21 : From Dec. 2008 Production until May 2016 Production
*22 : w/ VSC From Dec. 2008 Production until May 2016 Production