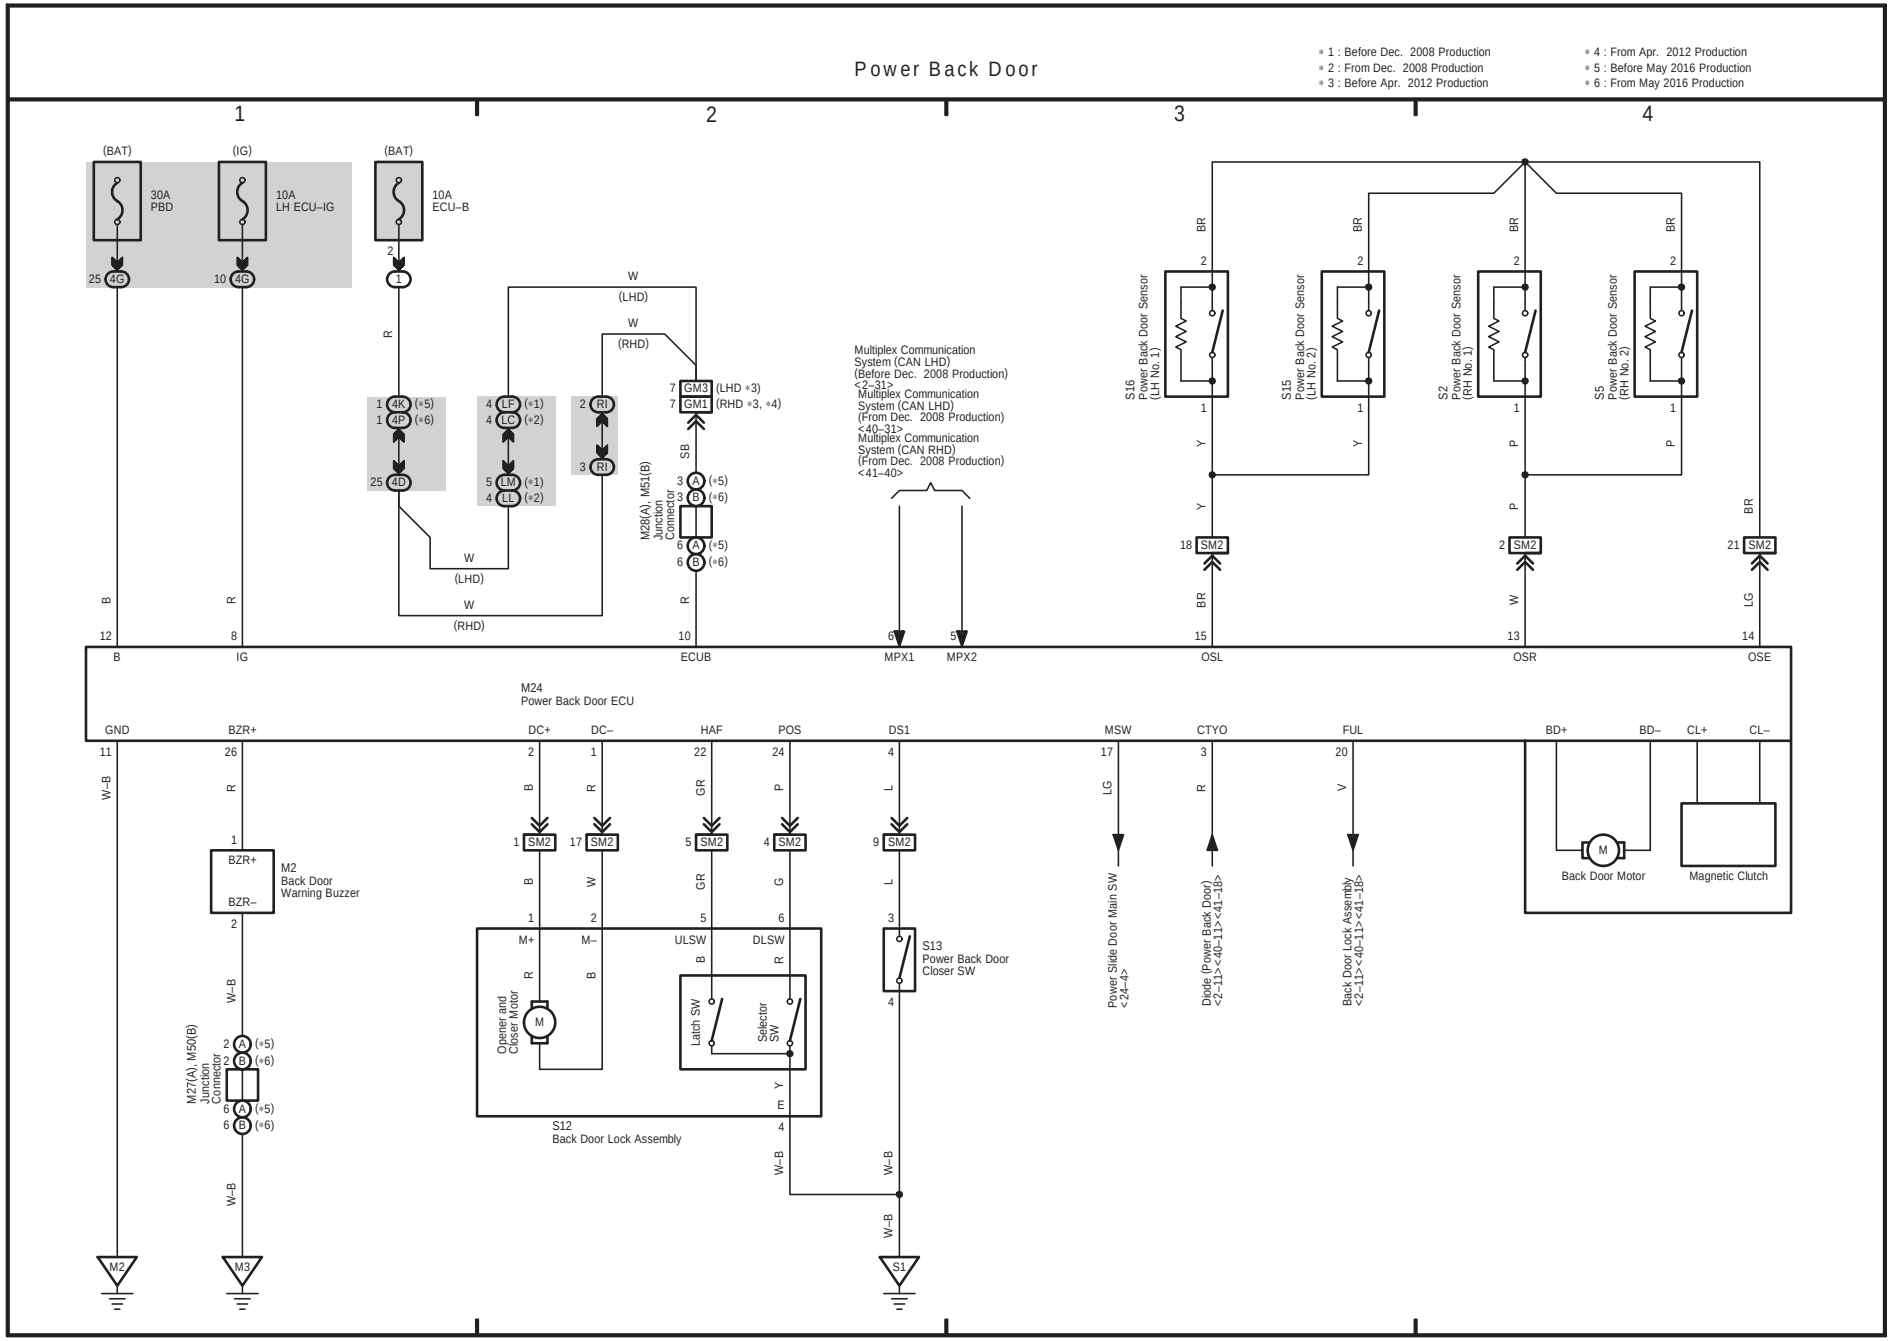

Power Back Door
∗1 : Before Dec. 2008 Production
∗2 : From Dec. 2008 Production
∗3 : Before Apr. 2012 Production
∗4 : From Apr. 2012 Production
∗5 : Before May 2016 Production
∗6 : From May 2016 Production
1
2
3
4
(BAT)
(IG)
30A PBD
10A LH ECU–IG
10A ECU–B
W (LHD)
W (RHD)
Multiplex Communication System (CAN LHD) (Before Dec. 2008 Production) <2–31>
Multiplex Communication System (CAN LHD) (From Dec. 2008 Production) <40–31>
Multiplex Communication System (CAN RHD) (From Dec. 2008 Production) <41–40>
M28(A), M51(B) Junction Connector
S16 Power Back Door Sensor (LH No. 1)
S15 Power Back Door Sensor (LH No. 2)
S2 Power Back Door Sensor (RH No. 1)
S5 Power Back Door Sensor (RH No. 2)
B
IG
ECUB
MPX1
MPX2
OSL
OSR
OSE
M24
Power Back Door ECU
GND
BZR+
DC+
DC–
HAF
POS
DS1
MSW
CTYO
FUL
BD+
BD–
CL+
CL–
M2
Back Door Warning Buzzer
M27(A), M50(B) Junction Connector
Opener and Closer Motor
Latch SW
Selector SW
S12
Back Door Lock Assembly
S13
Power Back Door Closer SW
Power Slide Door Main SW <24–4>
Diode (Power Back Door) <2–11><40–11><41–18>
Back Door Lock Assembly <2–11><40–11><41–18>
Back Door Motor
Magnetic Clutch
M2
M3
S1