

(Cont. next page)

Power Rear No. 2 Seat with Stowing Function

* 1 : Before Dec. 2008 Production
* 2 : From Dec. 2008 Production
* 3 : Before Apr. 2012 Production
* 4 : From Apr. 2012 Production
* 5 : From Apr. 2012 Production until May 2016 Production
* 6 : Before May 2016 Production
* 7 : From May 2016 Production

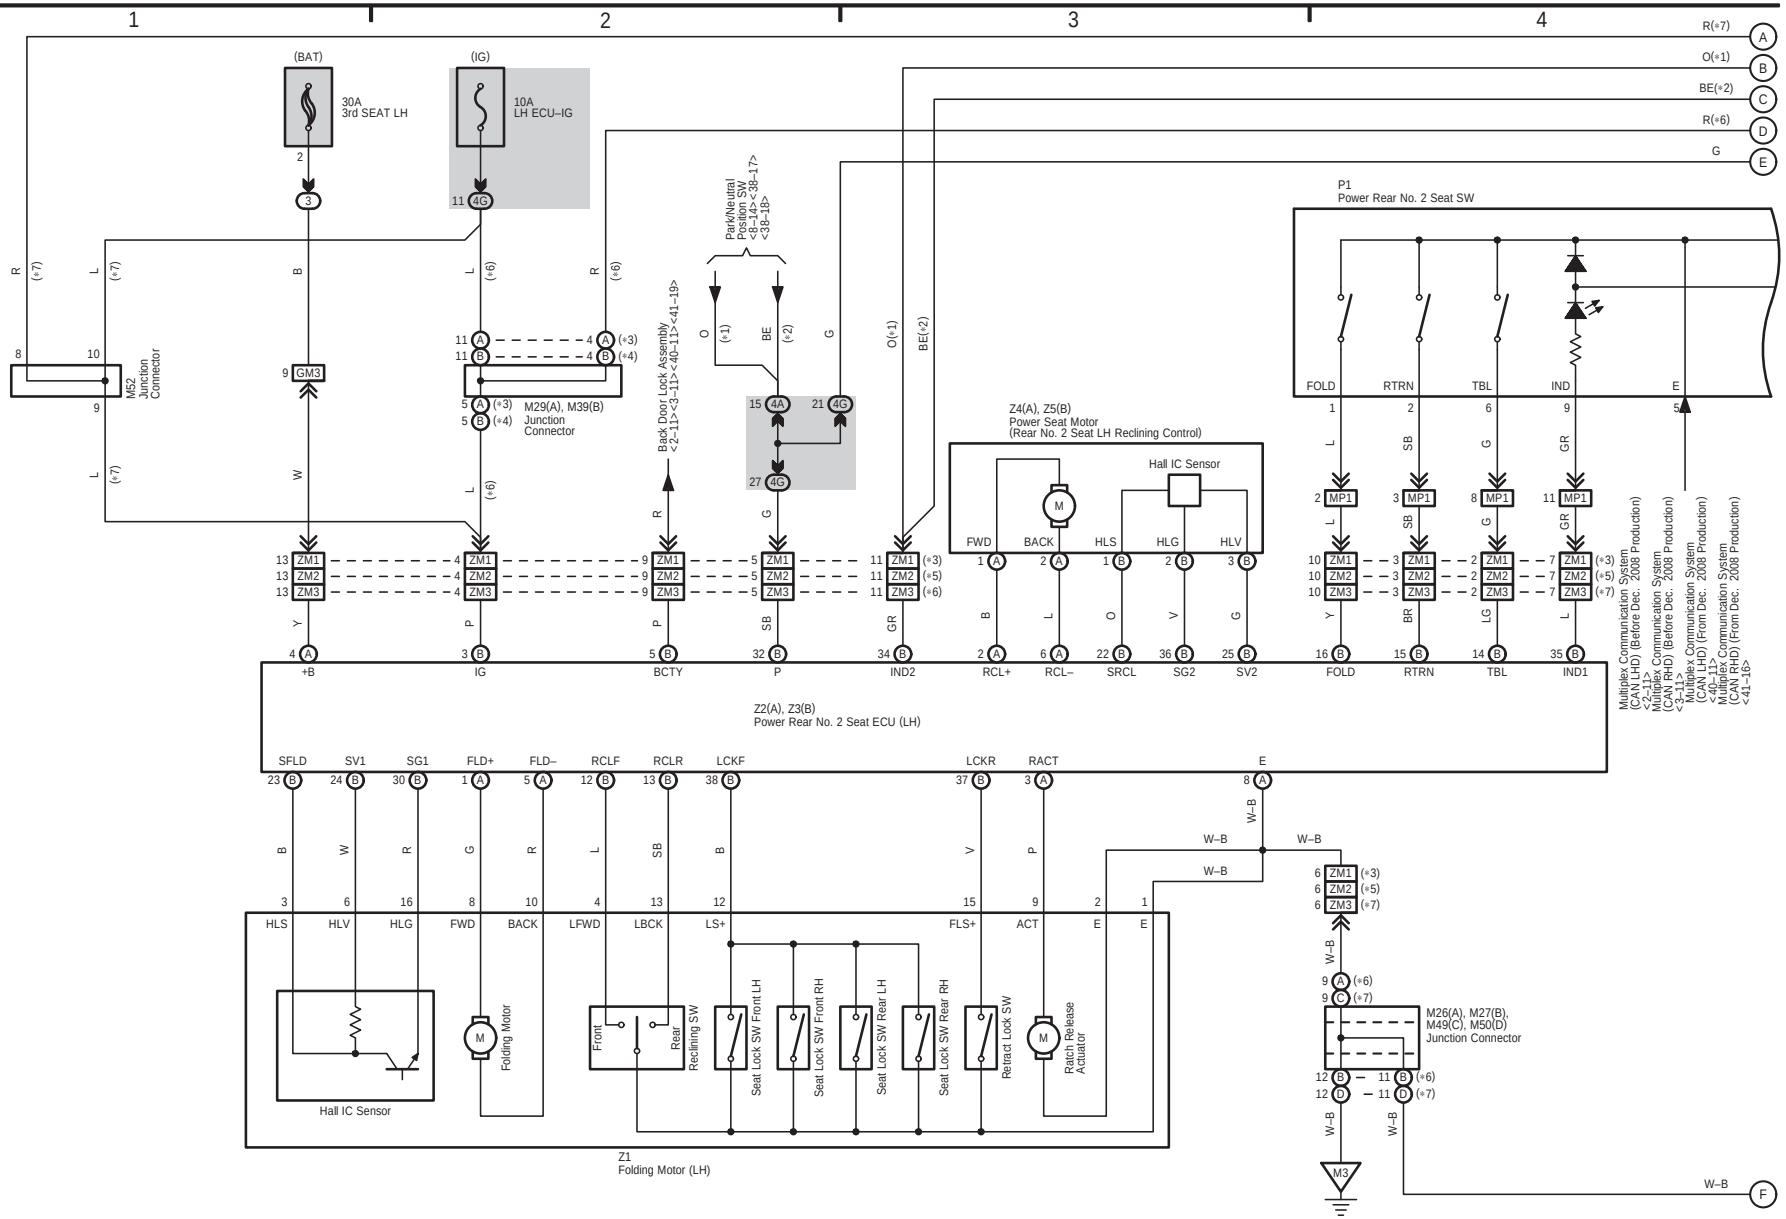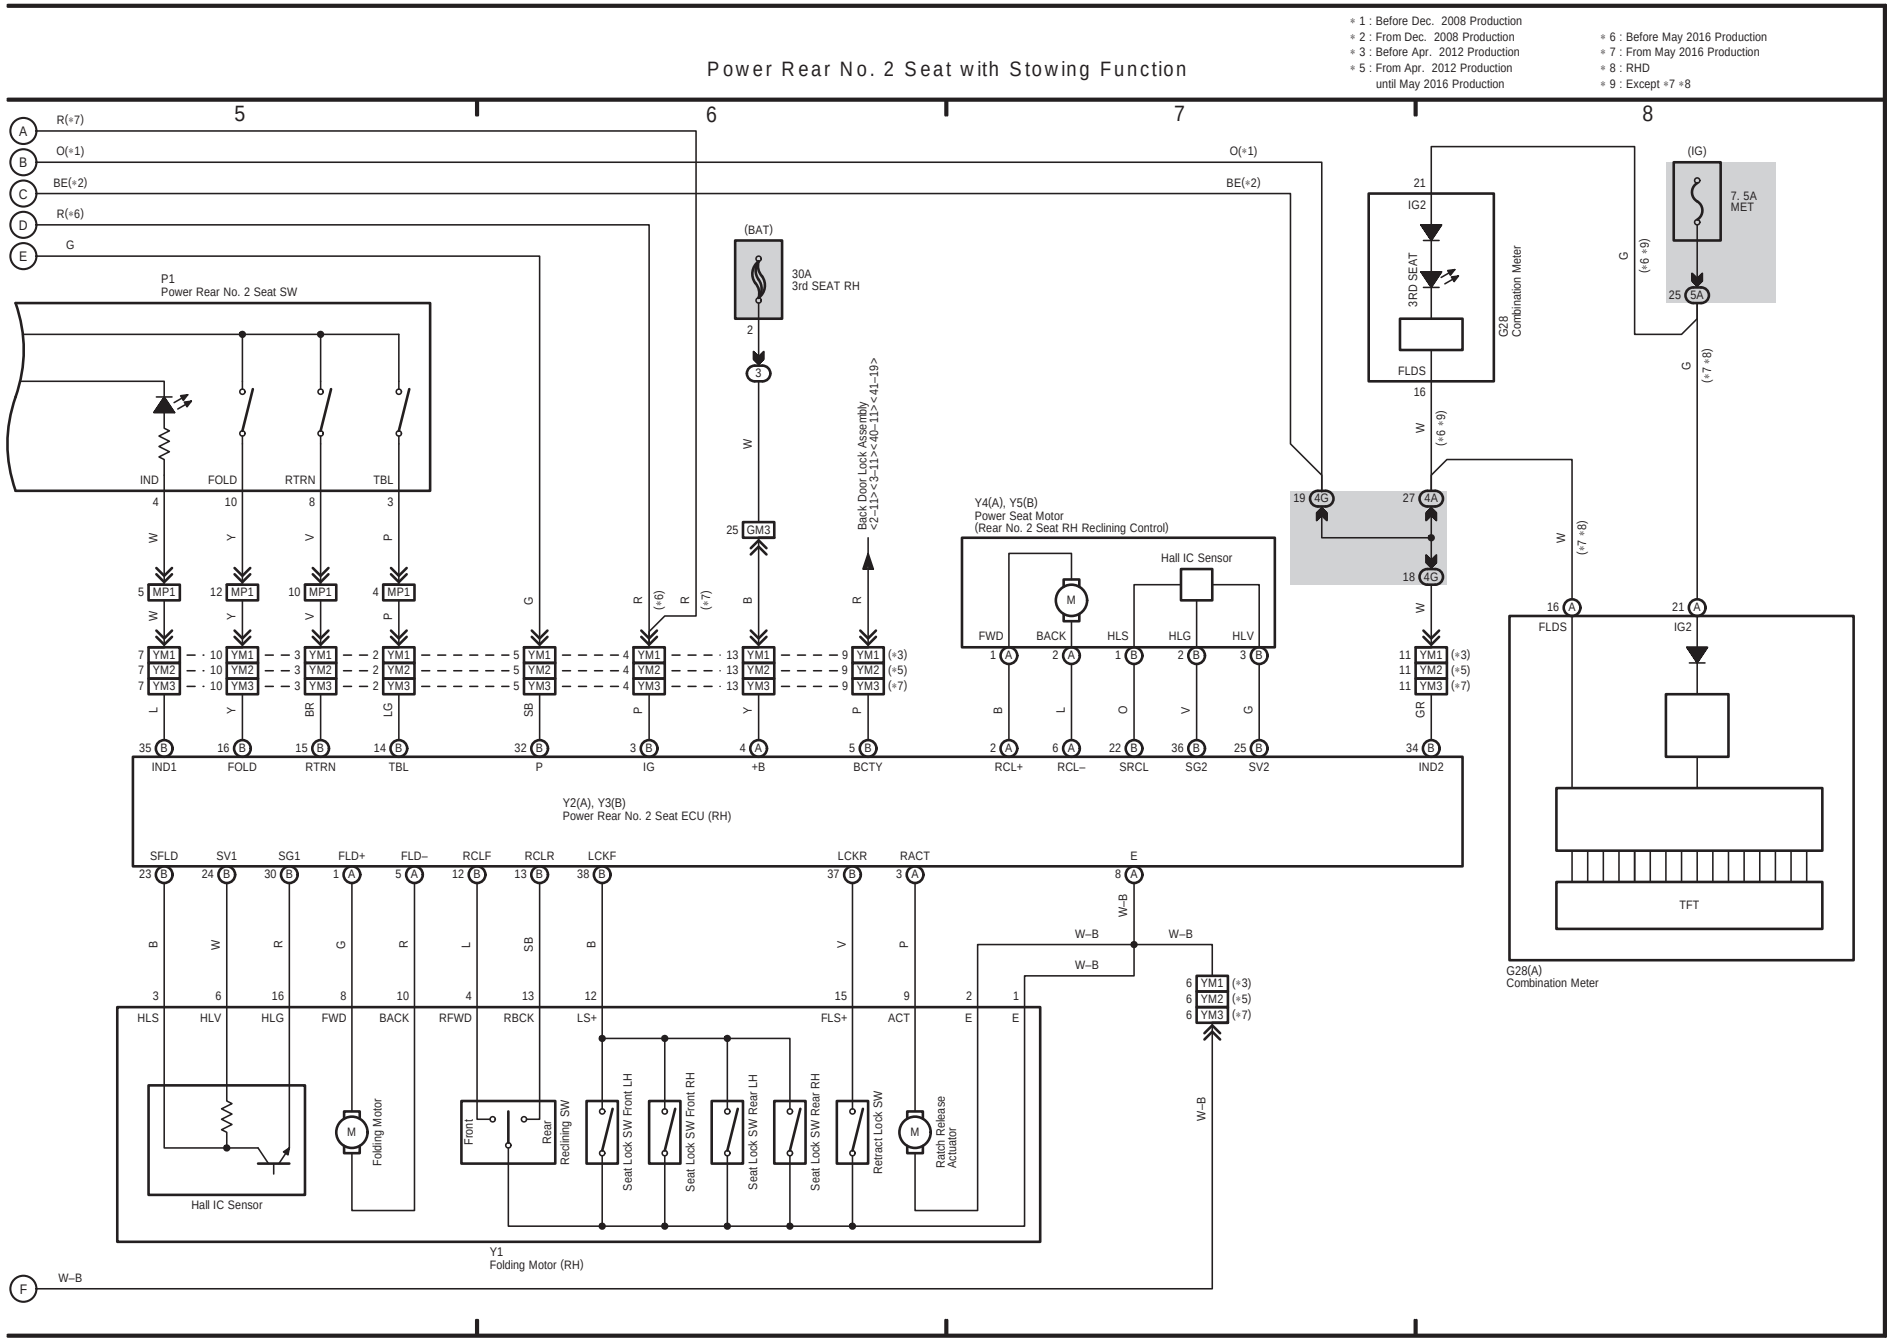


Power Rear No. 2 Seat with Stowing Function
∗1 : Before Dec. 2008 Production
∗2 : From Dec. 2008 Production
∗3 : Before Apr. 2012 Production
∗5 : From Apr. 2012 Production until May 2016 Production
∗6 : Before May 2016 Production
∗7 : From May 2016 Production
∗8 : RHD
∗9 : Except ∗7 ∗8
P1 Power Rear No. 2 Seat SW
IND FOLD RTRN TBL
(BAT)
30A 3rd SEAT RH
Back Door Lock Assembly <2–12><3–11><40–13><41–19>
Y4(A), Y5(B) Power Seat Motor (Rear No. 2 Seat RH Reclining Control)
FWD BACK HLS HLG HLV
Hall IC Sensor
(IG)
7. 5A MET
5A
3RD SEAT
G28 Combination Meter
IG2
FLDS
Y2(A), Y3(B) Power Rear No. 2 Seat ECU (RH)
IND1 FOLD RTRN TBL P IG +B BCTY RCL+ RCL– SRCL SG2 SV2 IND2
SFLD SV1 SG1 FLD+ FLD– RCLF RCLR LCKF LCKR RACT E
HLS HLV HLG FWD BACK RFWD RBCK LS+ FLS+ ACT E E
Hall IC Sensor
Folding Motor
Front Rear Reclining SW
Seat Lock SW Front LH
Seat Lock SW Front RH
Seat Lock SW Rear LH
Seat Lock SW Rear RH
Retract Lock SW
Ratch Release Actuator
Y1 Folding Motor (RH)
G28(A) Combination Meter
TFT
W–B