




∗ 1 : Shielded
∗ 2 : w/ Rear Display
∗ 3 : w/ Steering Pad SW
∗ 4 : w/ Television Tuner
∗ 5 : w/o Television Tuner
(BAT)
15A RAD NO. 1
(ACC)
7. 5A RAD NO. 2
J1 Speaker (Front Door LH)
I1 Speaker (Front Door RH)
G4 Antenna Amplifier
G63 Junction Connector
GR (∗2)
SB (RHD ∗2)
SB (LHD ∗2)
FL+
FL–
FR+
FR–
ANT
B
ACC
GND
RL+
RL–
RR+
RR–
F10(D), G1(A), G2(B), G3(C) Radio Receiver Assembly
G62 Junction Connector
M7 Speaker (Rear LH)
N4 Speaker (Rear RH)


Q18
Television Display
ACC
+B
TX+
TX–
L+
L–
R+
R–
SLD9
MUTE
GND
GR(*5)
Y(*5)
P(*5)
V(*5)
R(*5)
G(*5)
B(*5)
W(*5)
(*1)(*5)
O(*5)
W–B(*5)
TXM+
TXM–
CDL+
CDL–
CDR+
CDR–
CSLD
MUTE
F10(D), G1(A), G2(B), G3(C)
Radio Receiver Assembly
SW1
SWG
SW2
AU1
EAU
AU2
G10(A), j1(B)
Spiral Cable
Seek+
MODE
Seek–
Volume+
Volume–
Steering Pad SW LH
j1(B)
Steering Pad SW
G50
Speaker Condenser
Q9
Speaker
(Roof Front LH)
Q15
Speaker
(Roof Front RH)
G65
Junction
Connector
G1

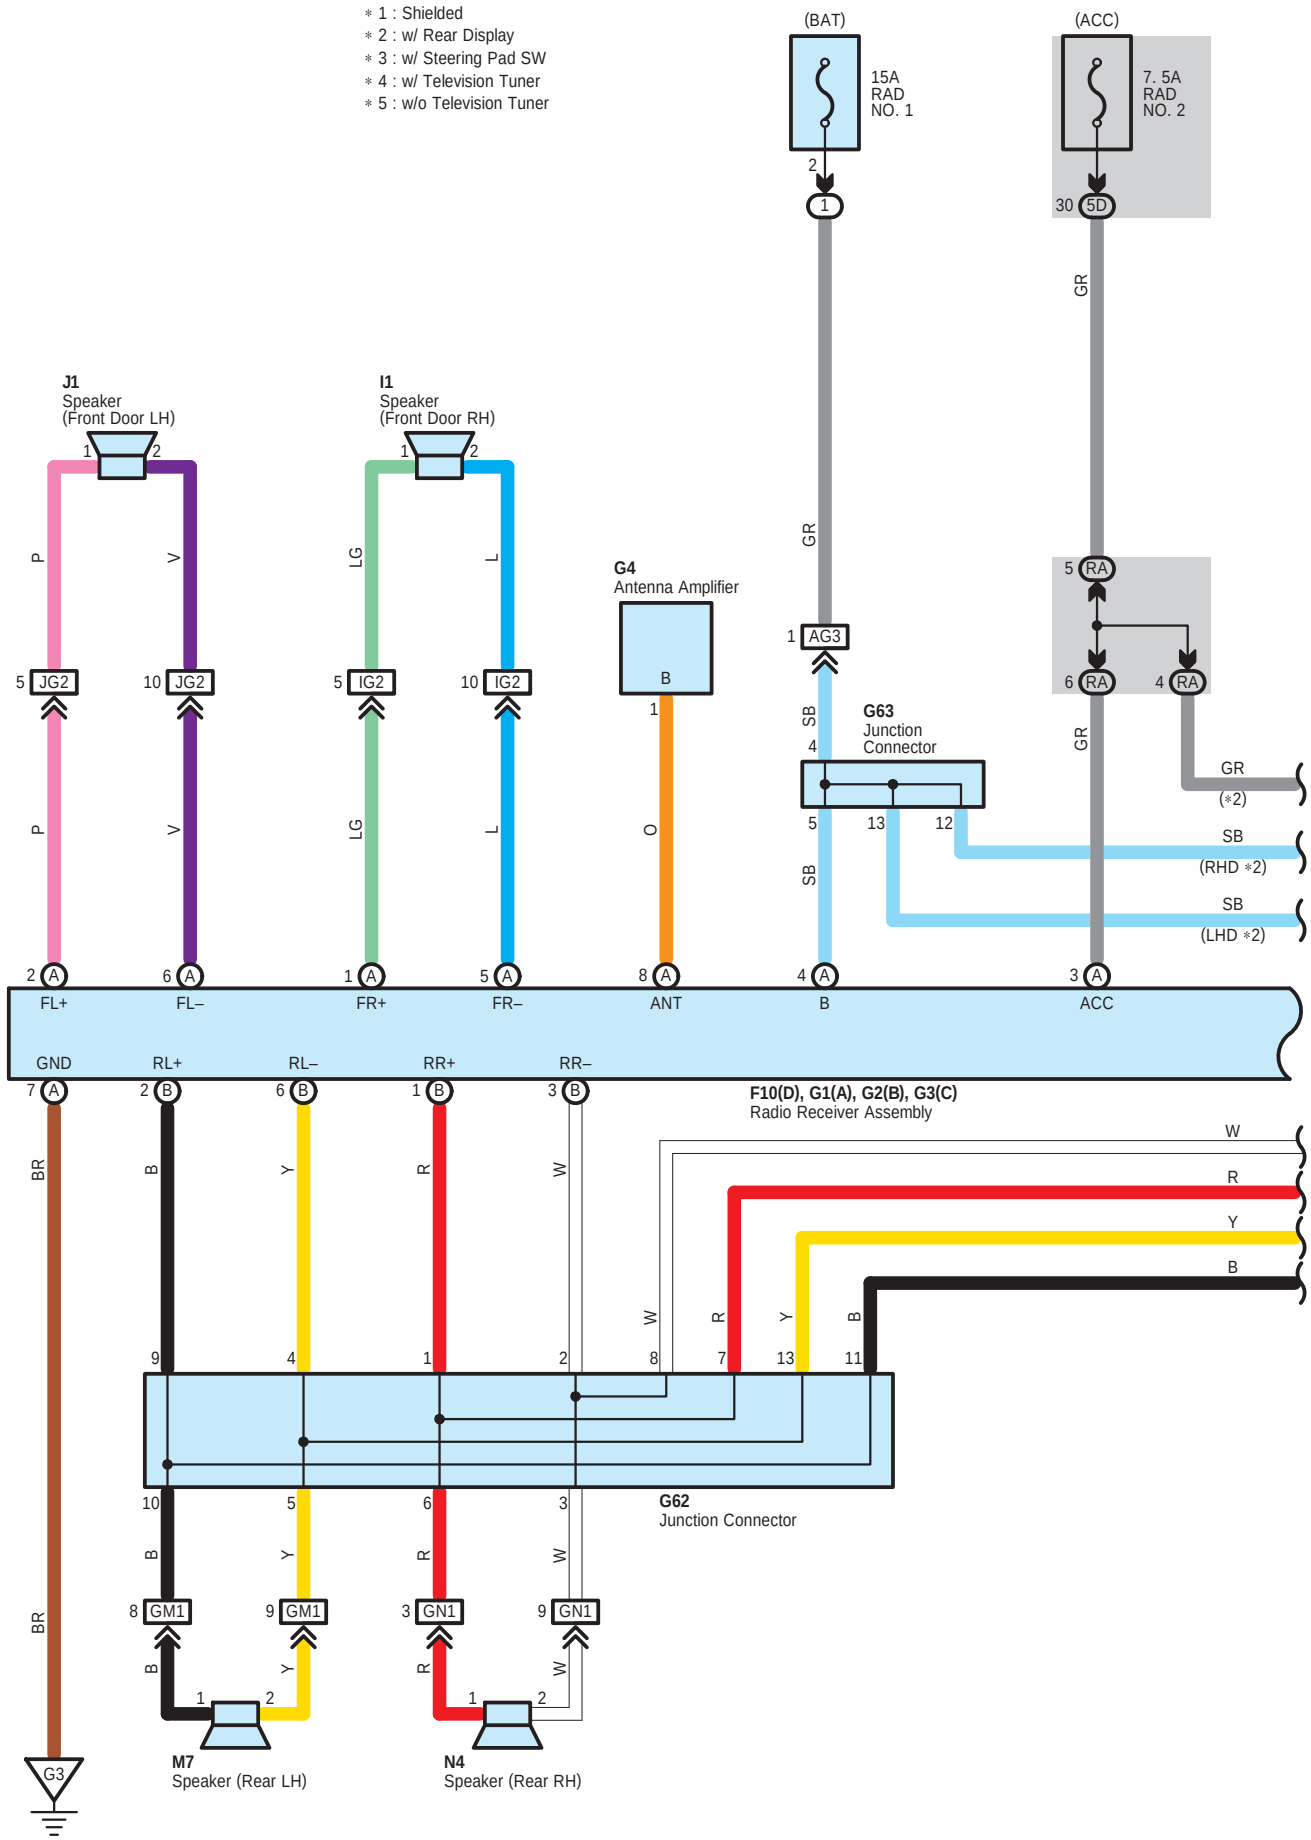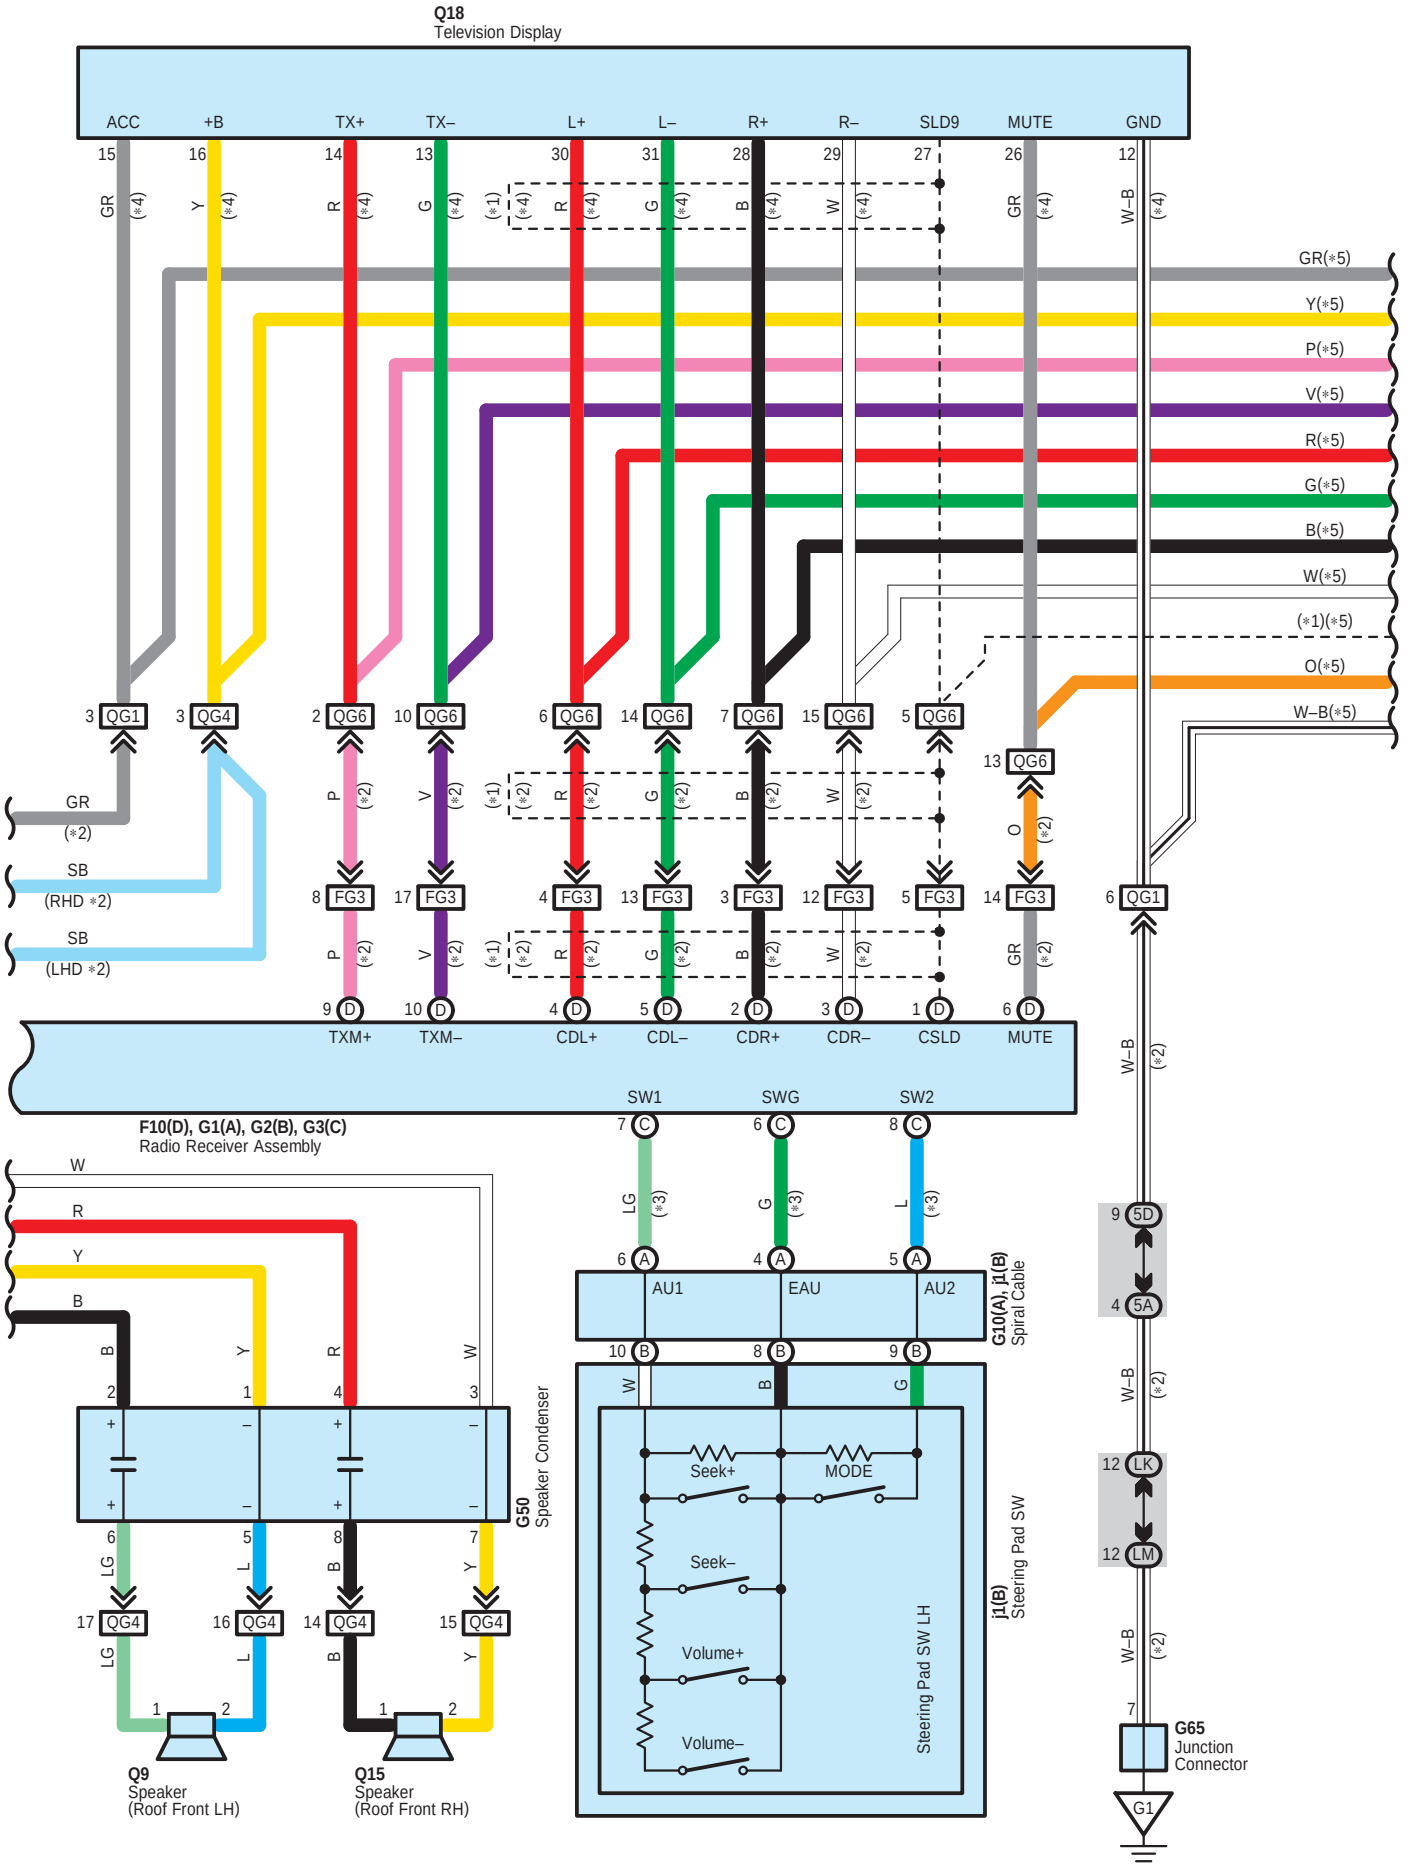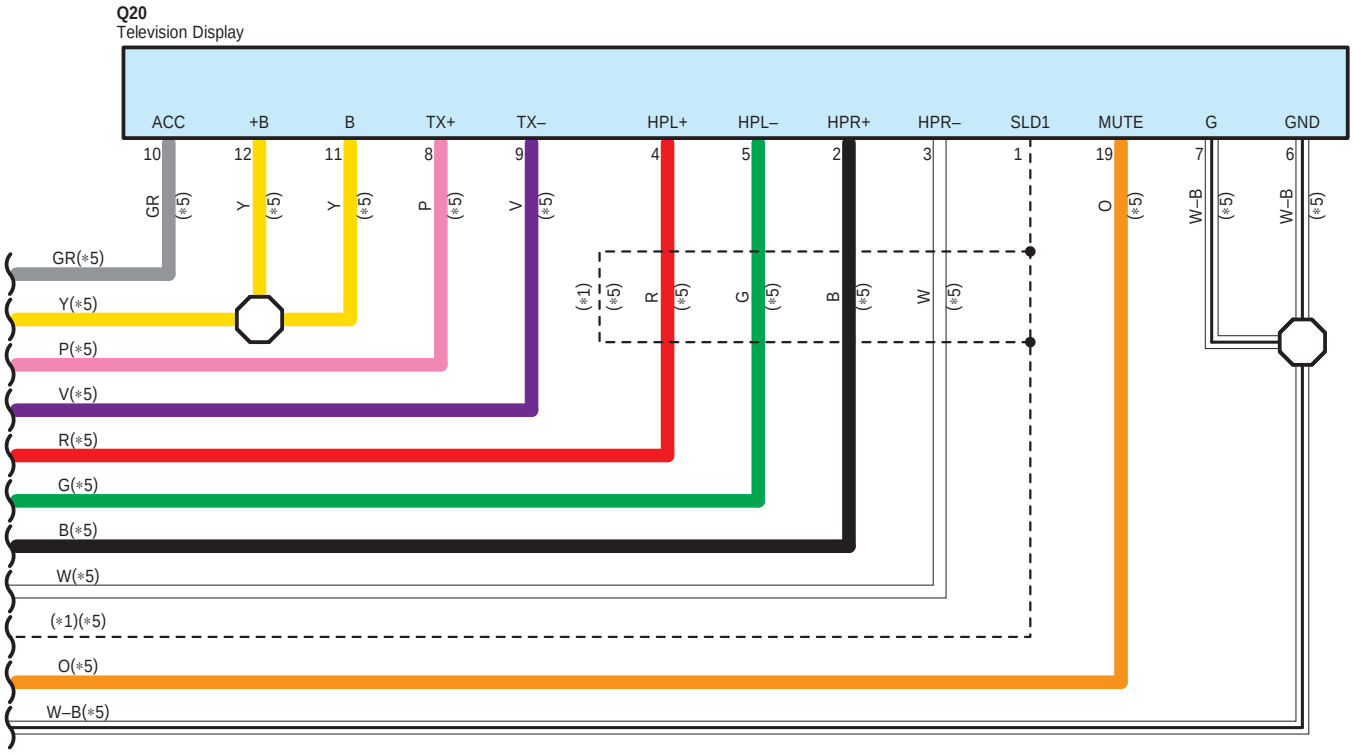


∗ 1 : Shielded
∗ 5 : w/o Television Tuner

F 10
Black

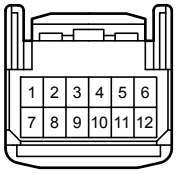


G 1
Blue

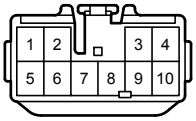

G 2
Blue




G 3
White

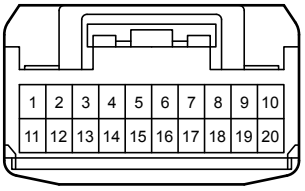


G 4
White




G 10
Black

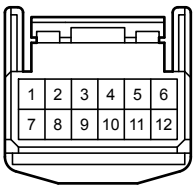


G 50
White

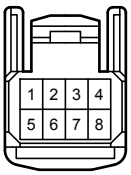


G 62
Blue

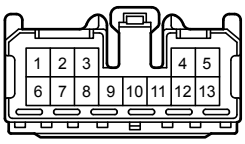


G 63
Blue

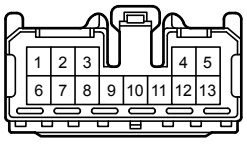


G 65
Black

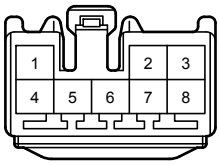


I 1
White




J 1
White




M 7
White




N 4
White




Q 9
White




Q 15
White




Q 18
White

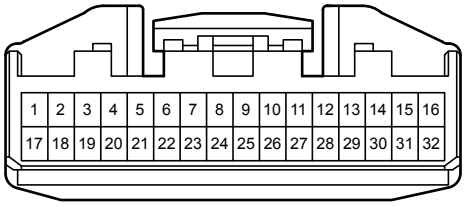


Q 20
White

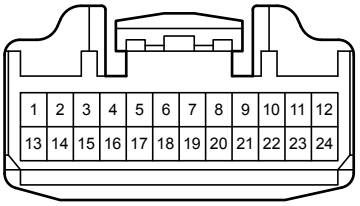


j 1
White

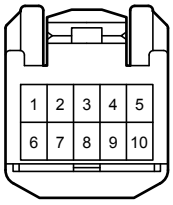


5A
White

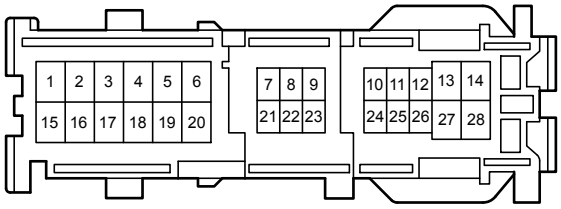


5D
White

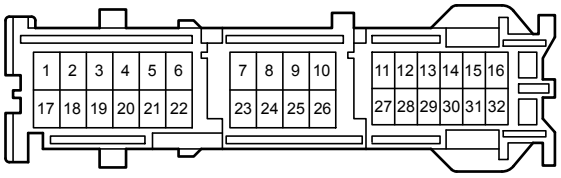


LK
White




LM
White




RA
White




AG3
Gray

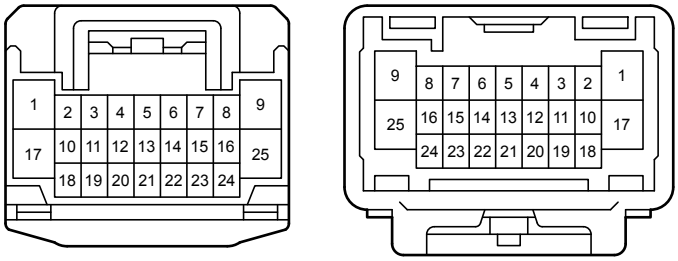


FG3
White

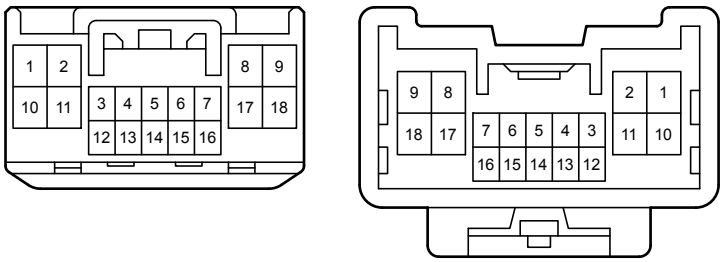


GM1
White

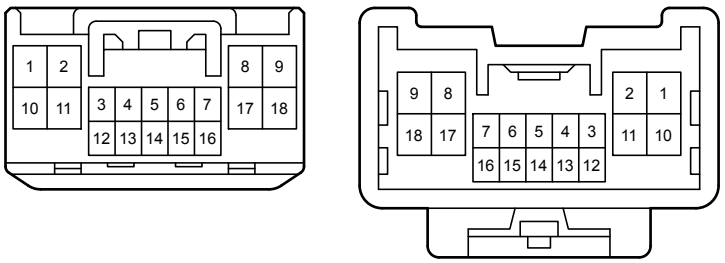


GN1
Black

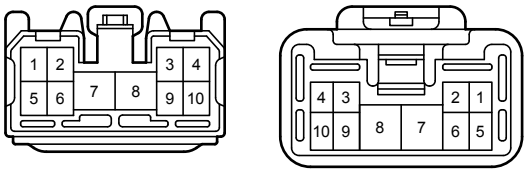


IG2
Dark Gray

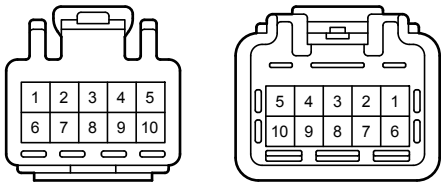


JG2
Dark Gray

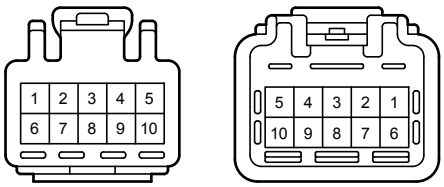

QG1
Black

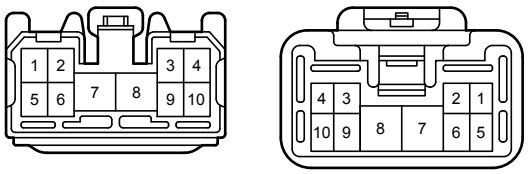

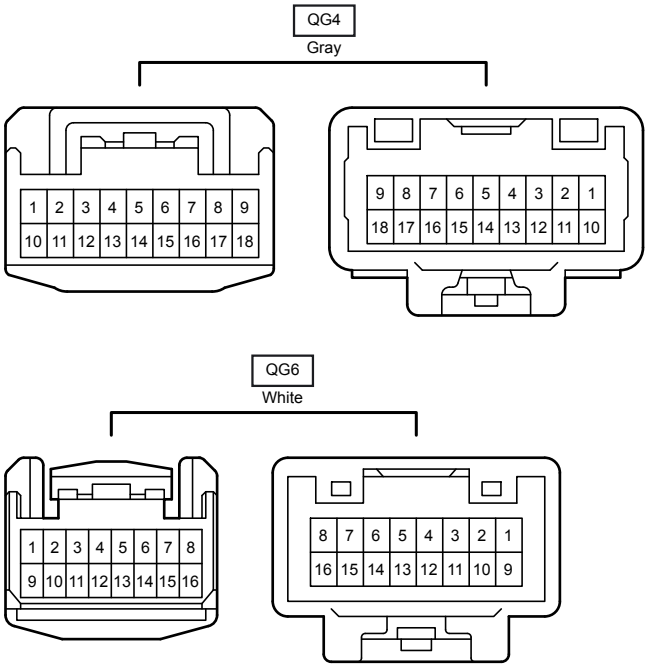
QG4
Gray
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
QG6
White
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
8 7 6 5 4 3 2 1
16 15 14 13 12 11 10 9