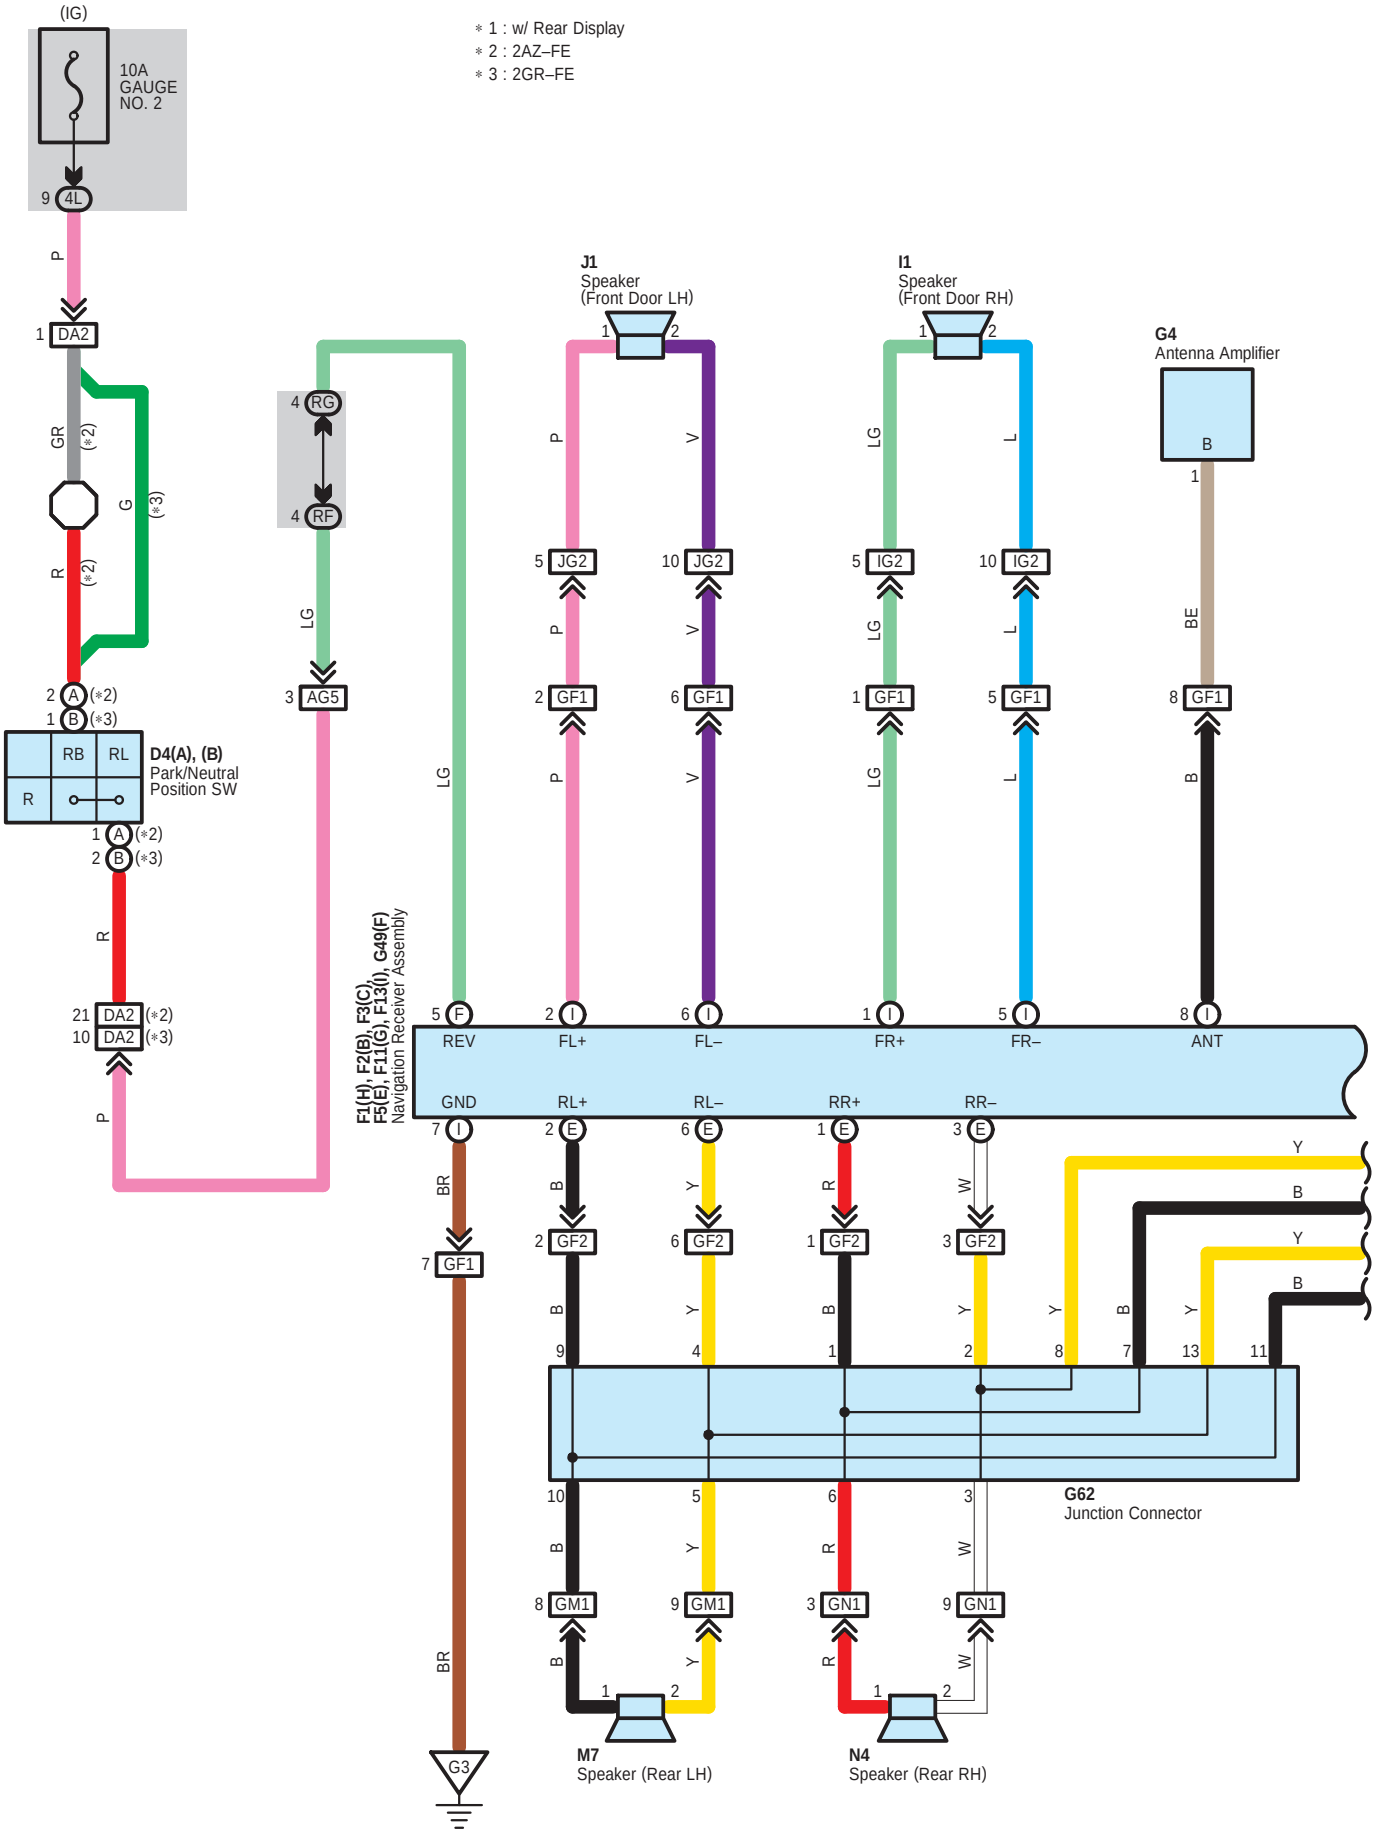
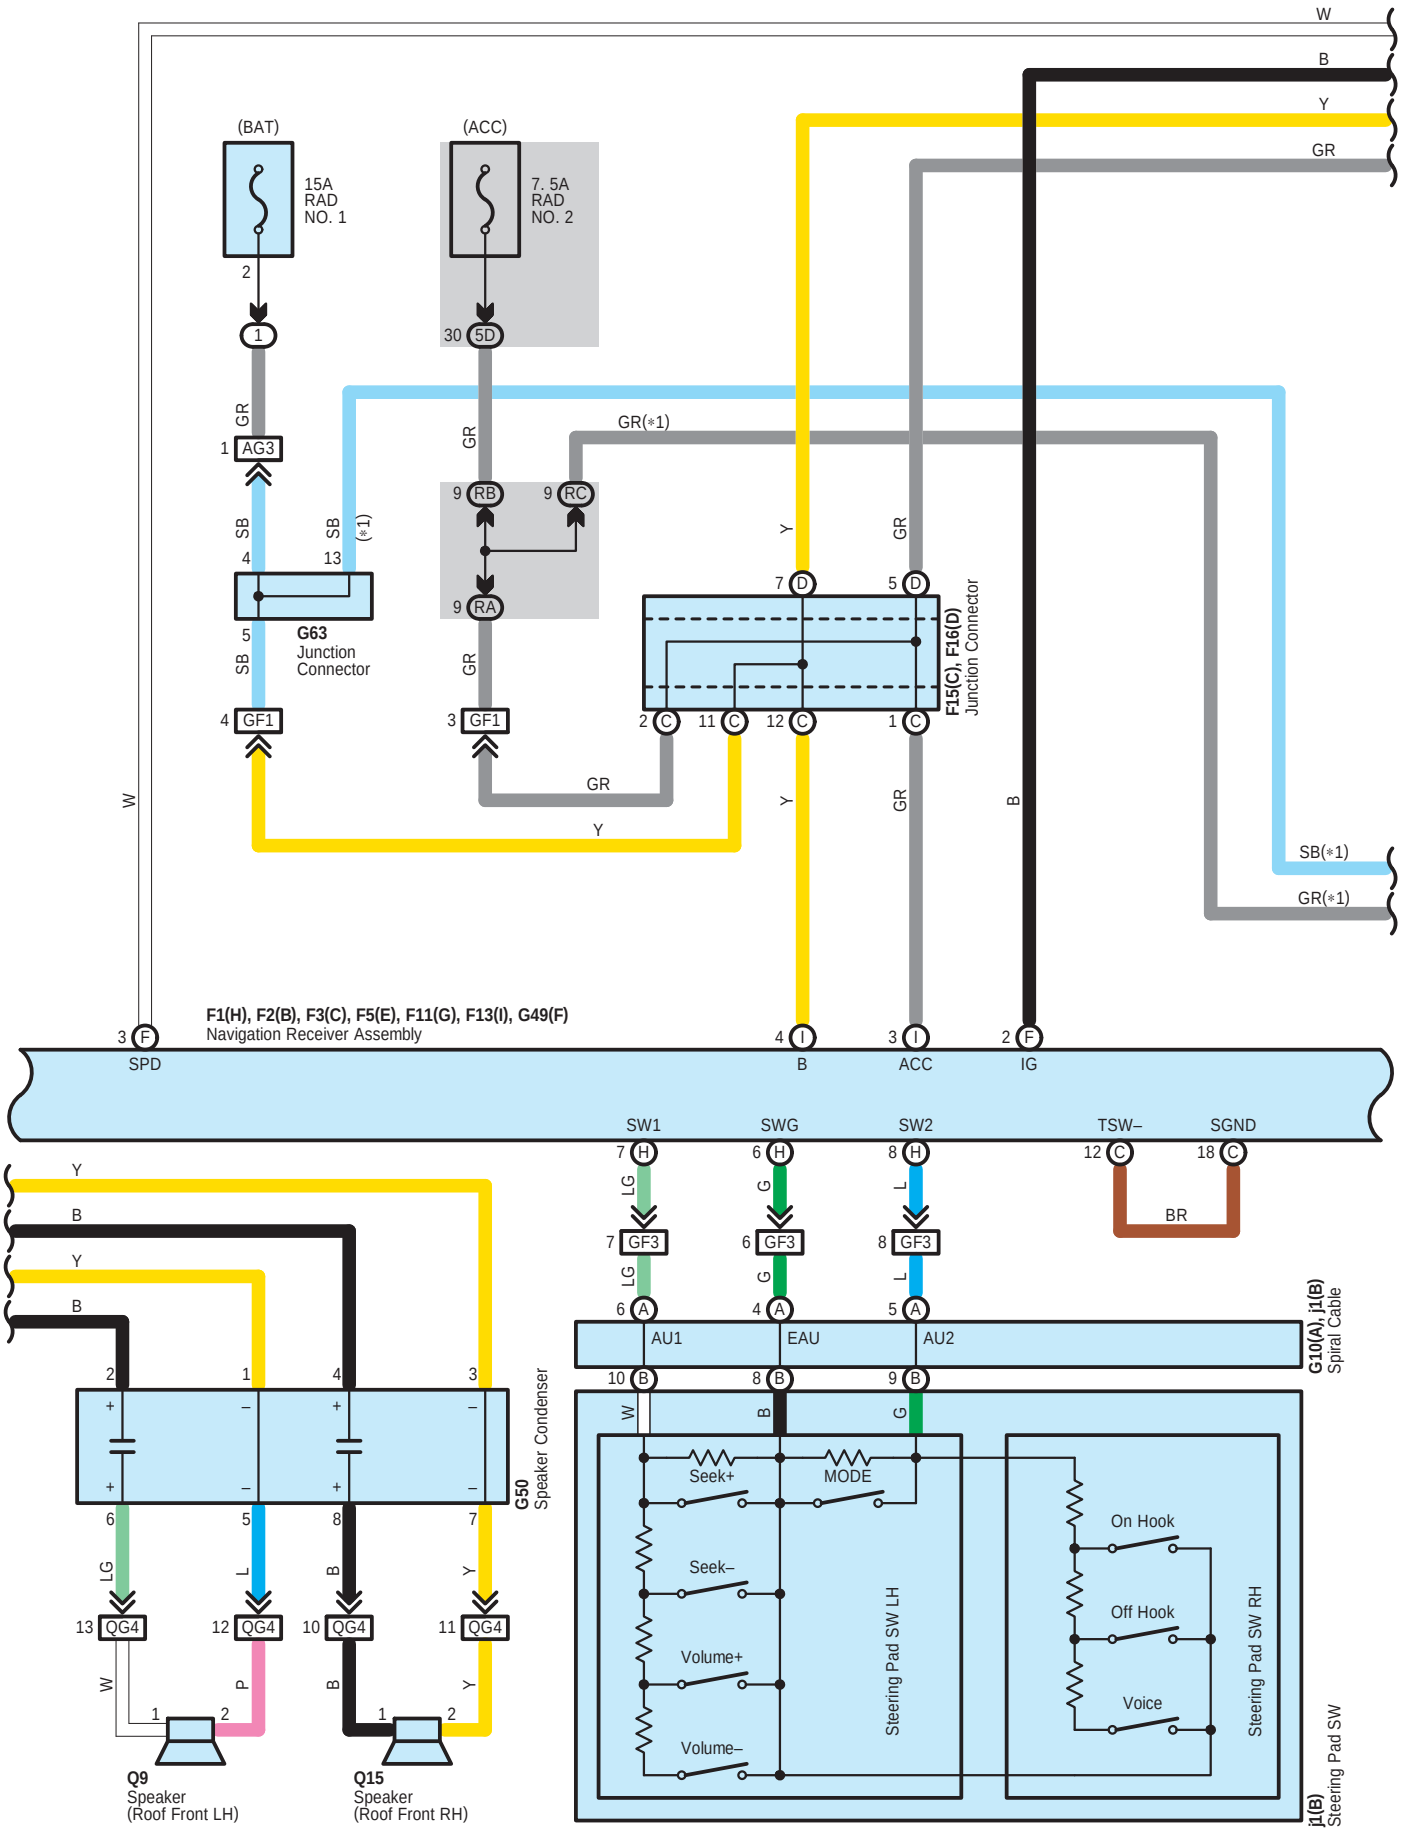
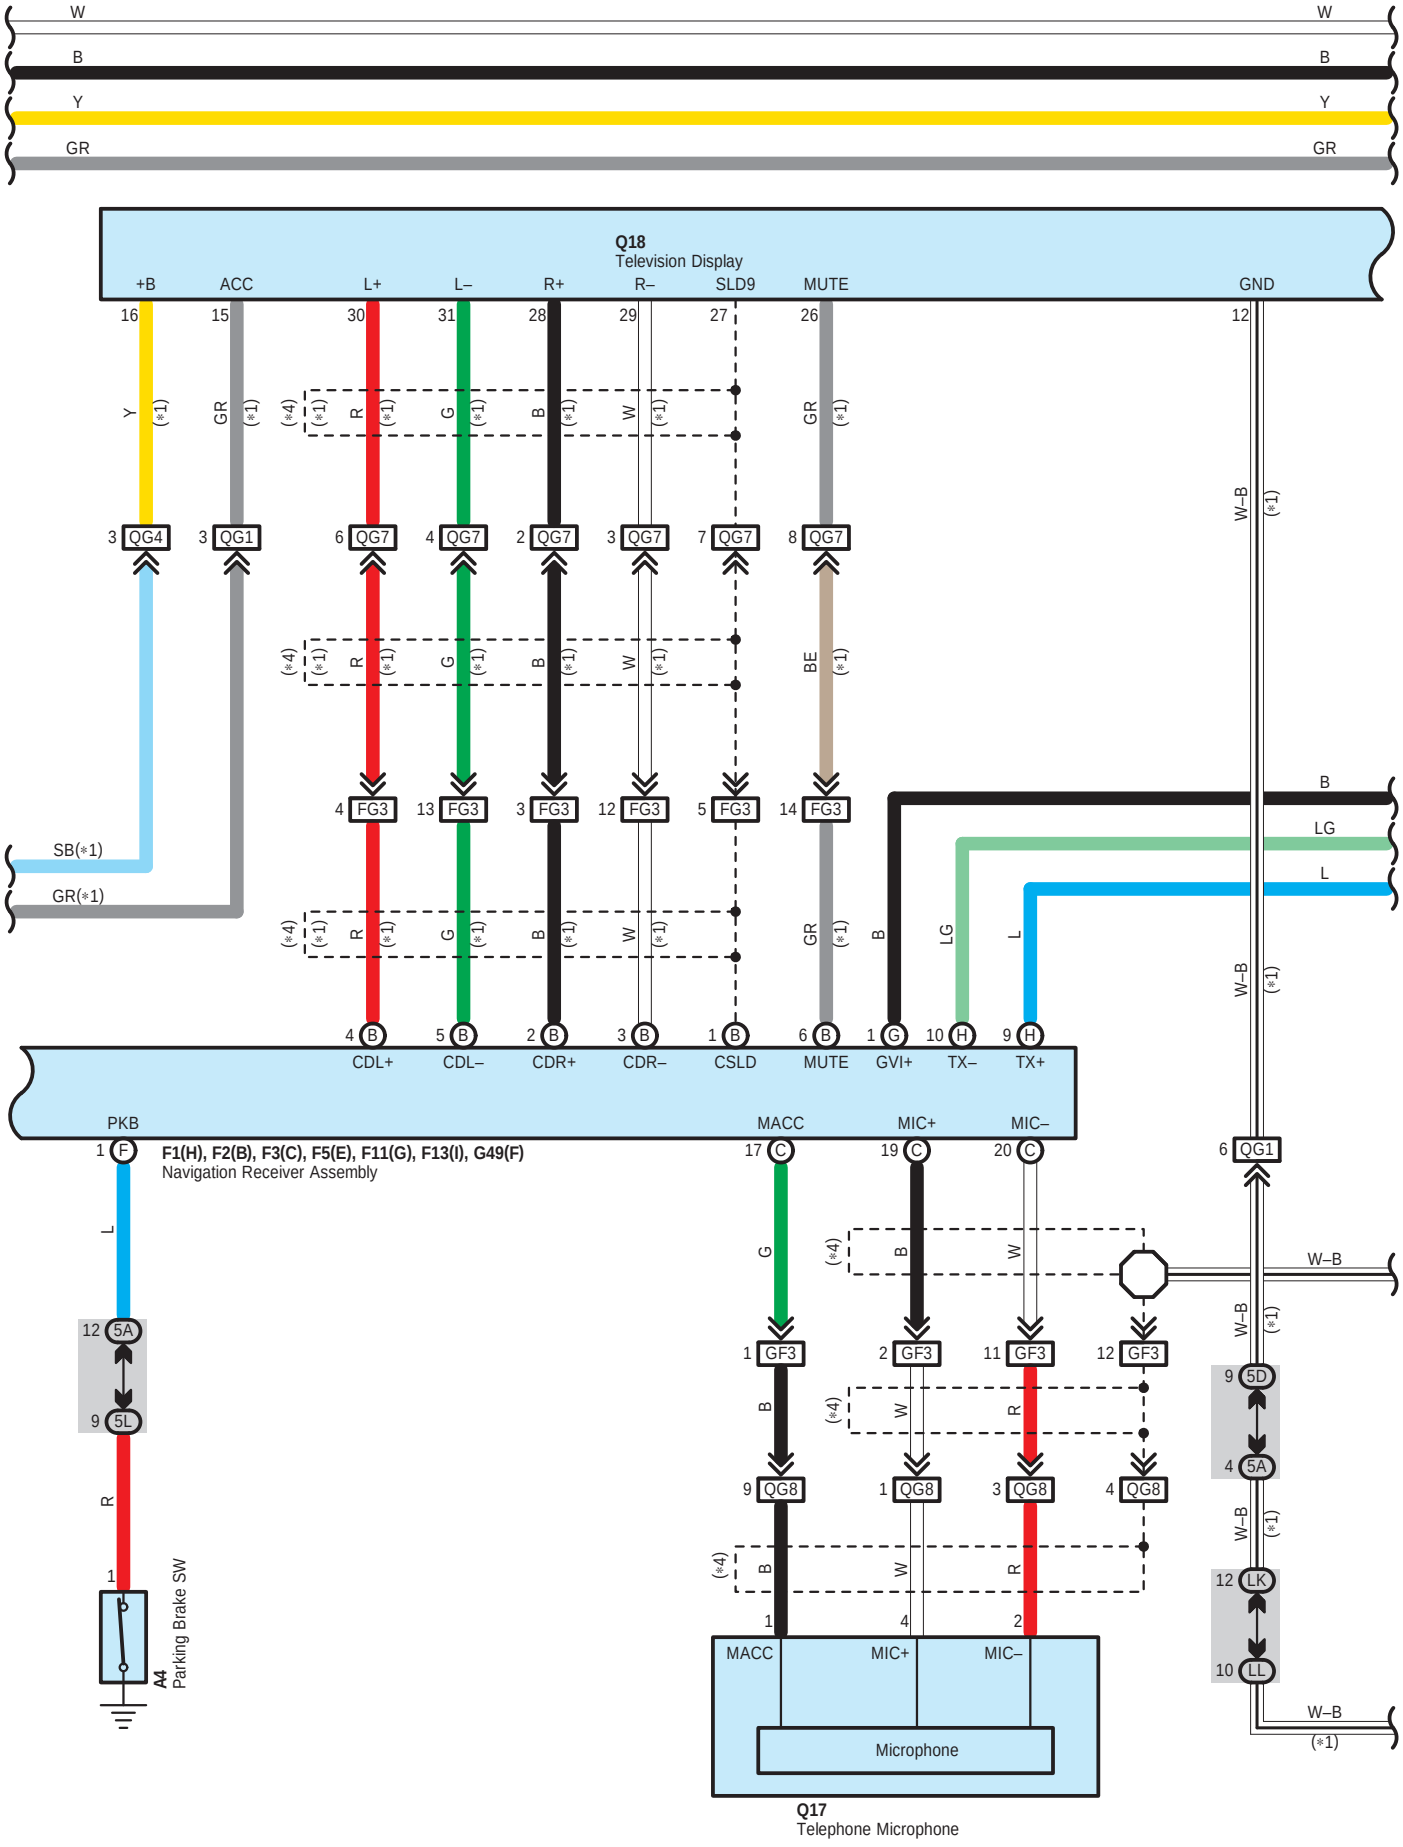
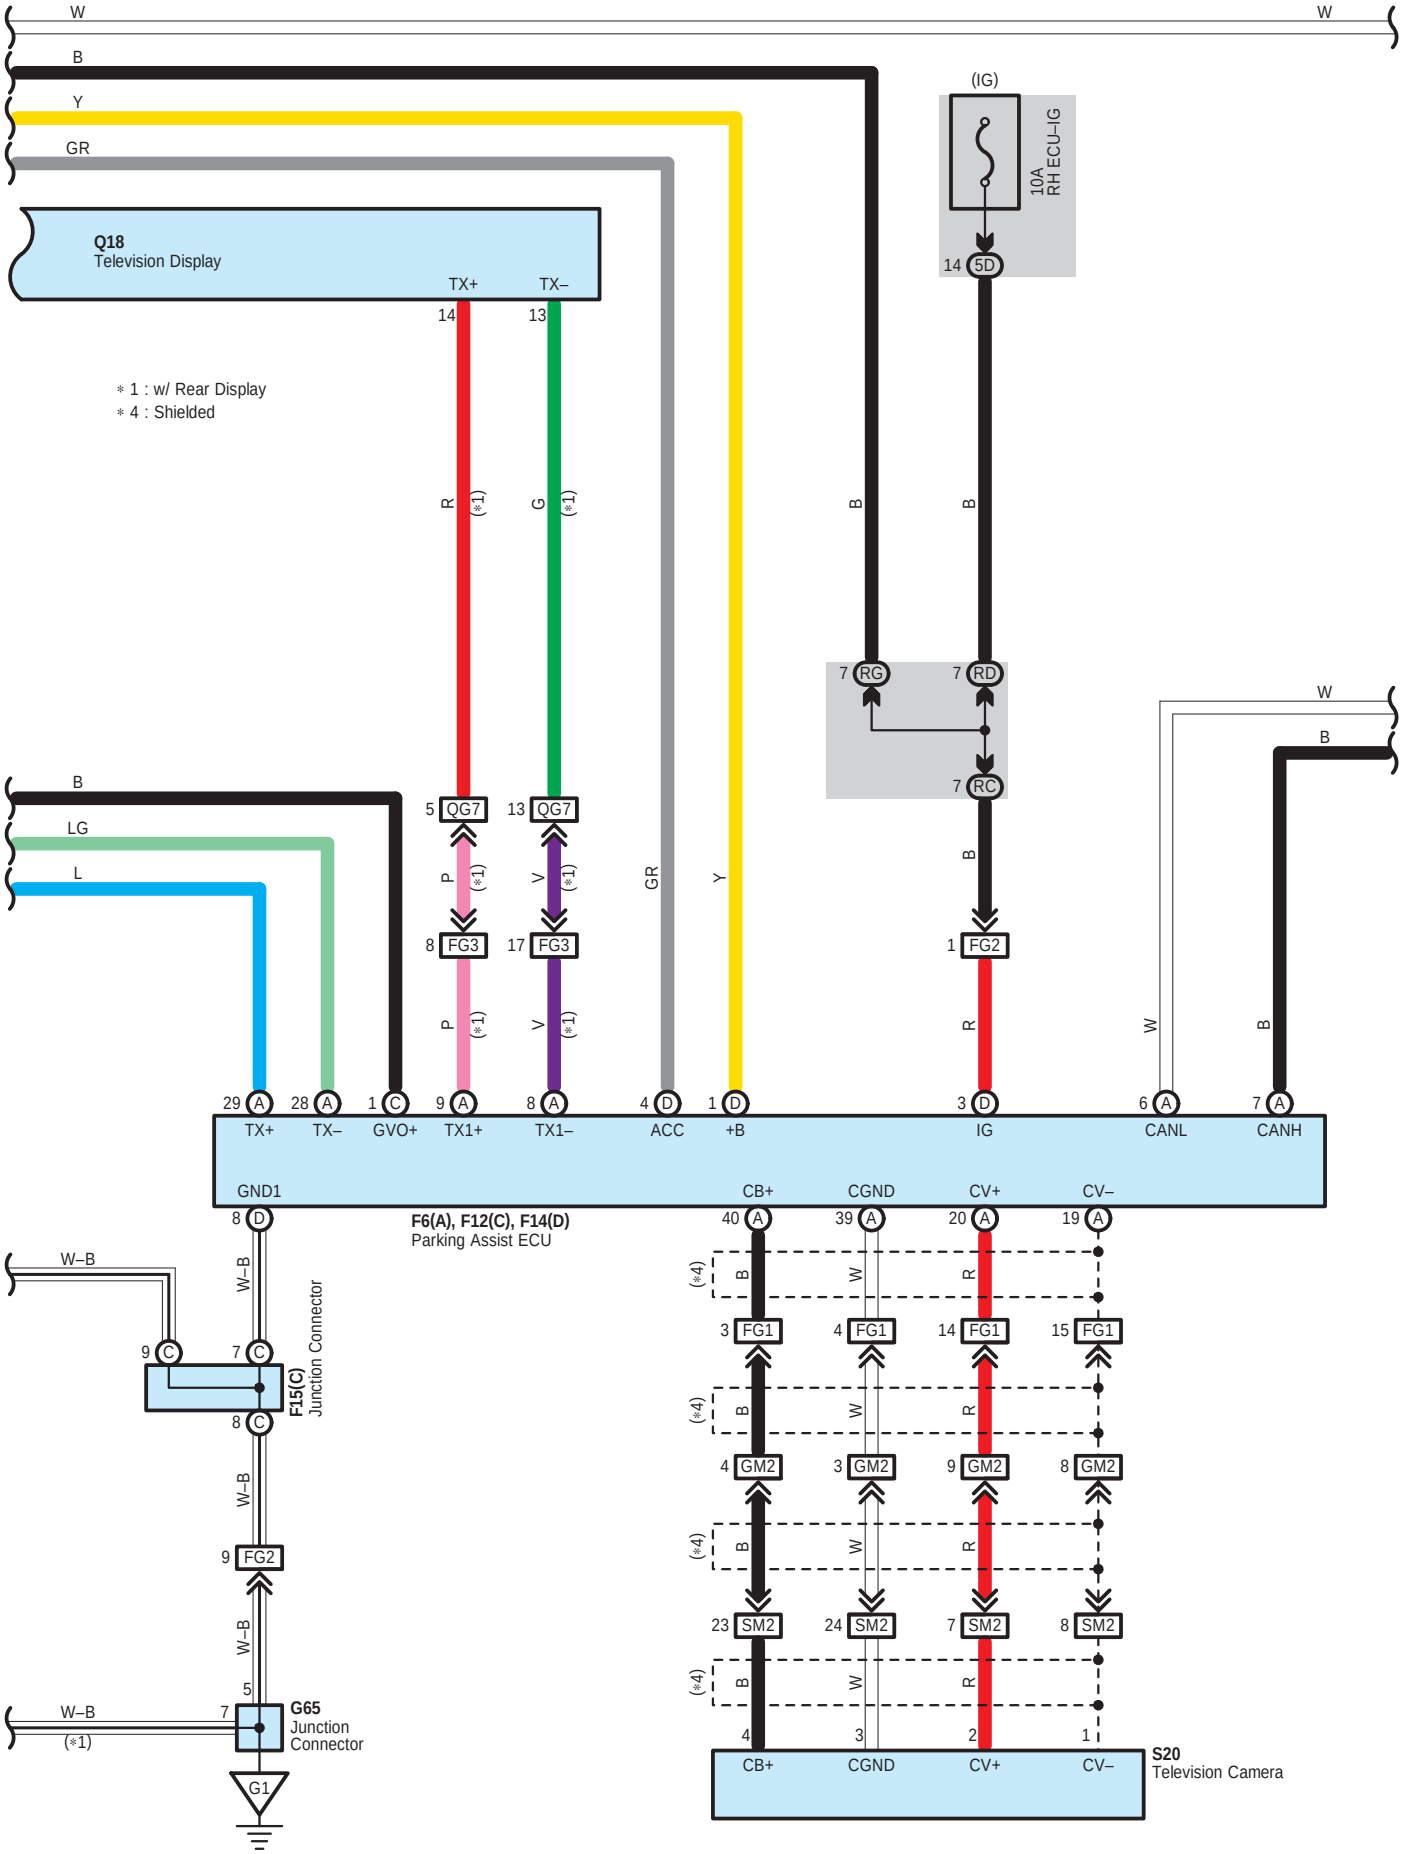
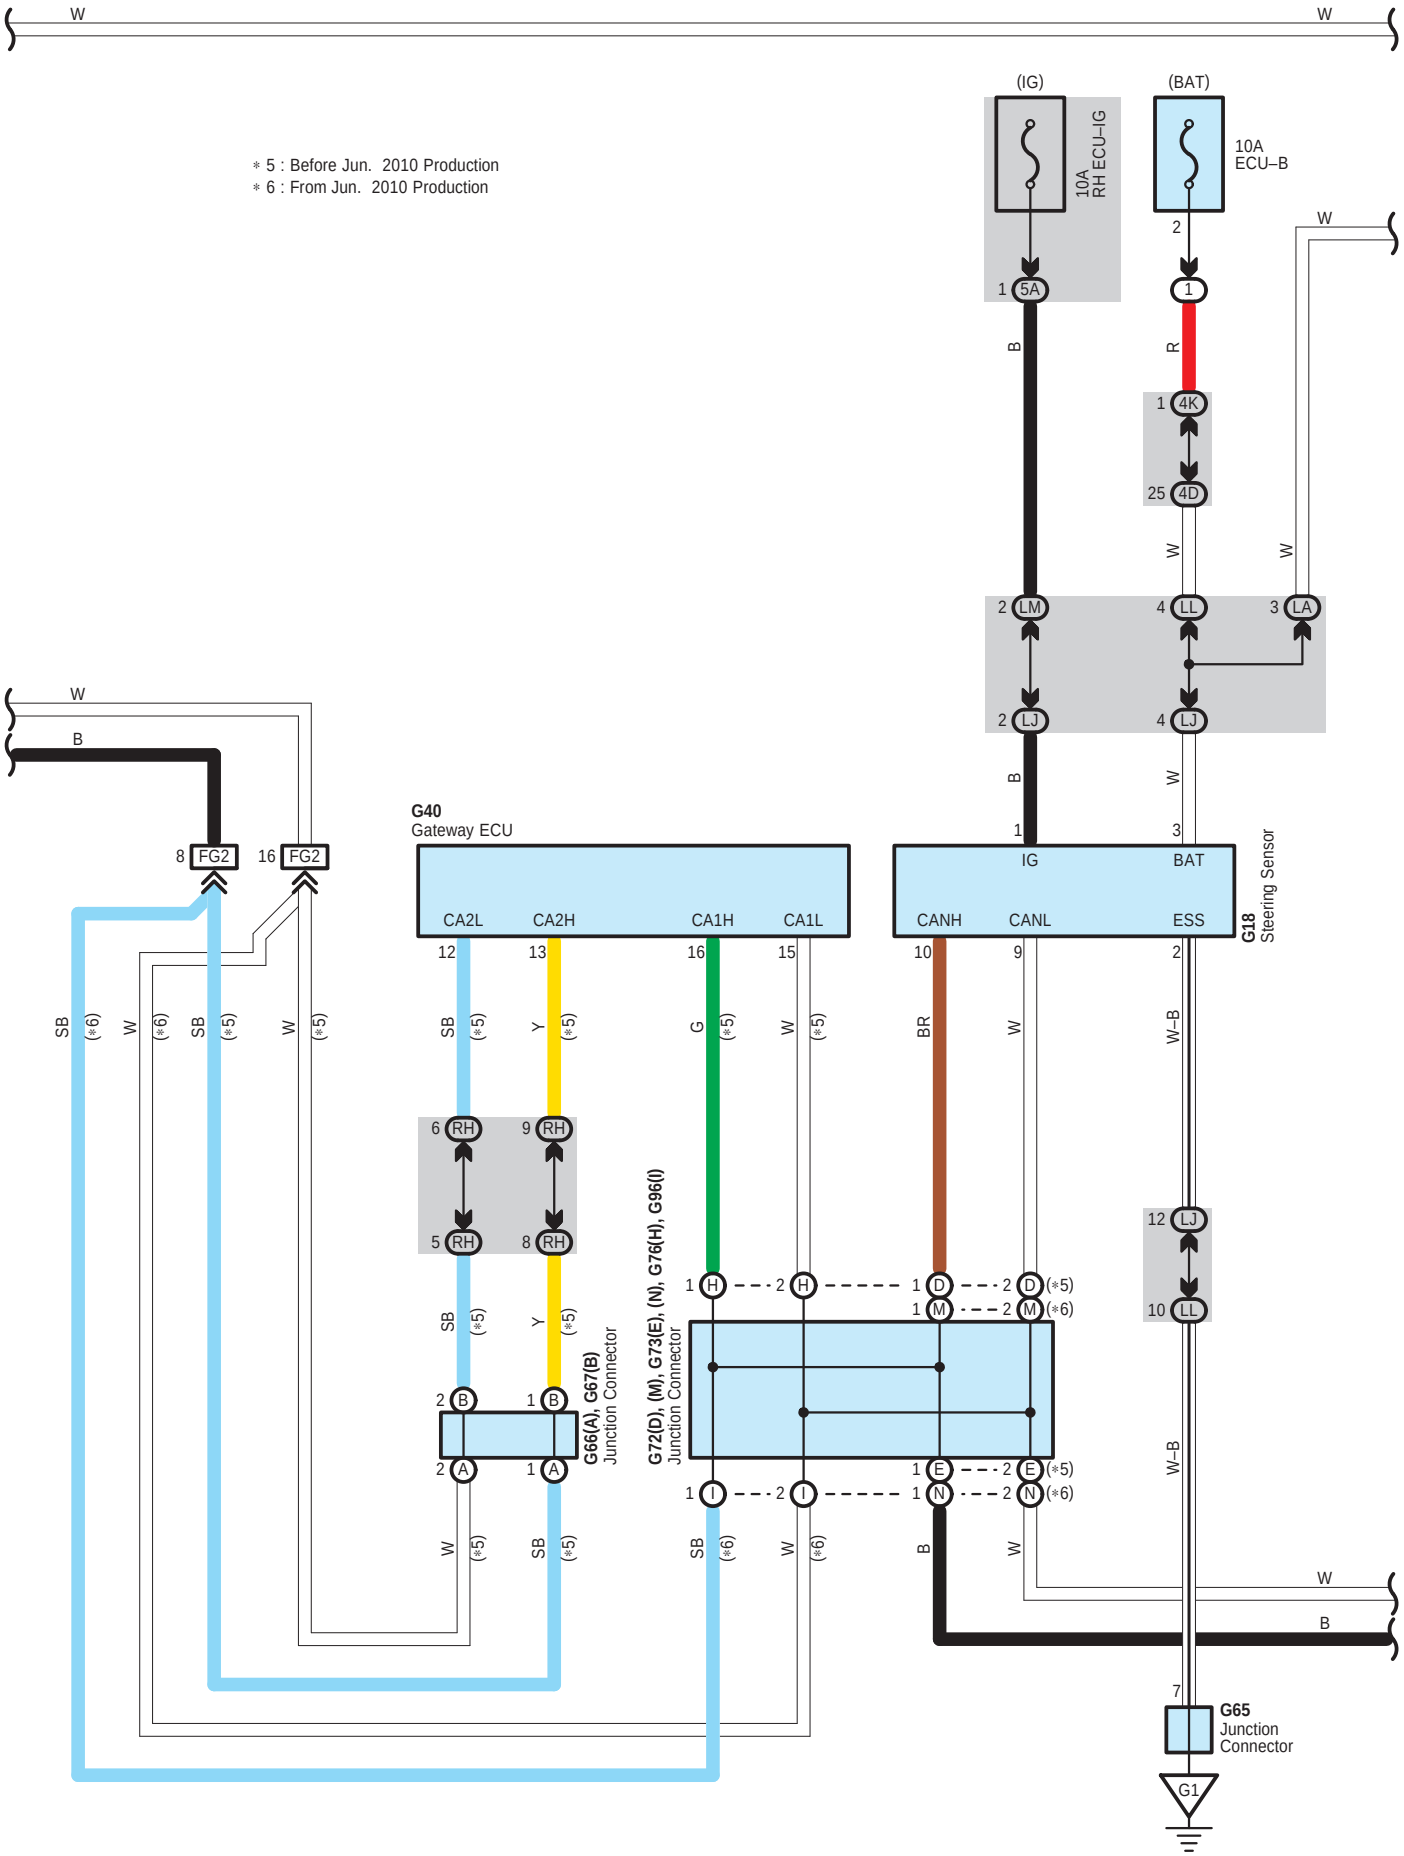



∗ 1 : w/ Rear Display
∗ 2 : 2AZ–FE
∗ 3 : 2GR–FE


(BAT)
15A
RAD
NO. 1
(ACC)
7. 5A
RAD
NO. 2
W
B
Y
GR
GR(*1)
SB(*1)
SB
(*1)
G63
Junction
Connector
F15(C), F16(D)
Junction Connector
F1(H), F2(B), F3(C), F5(E), F11(G), F13(I), G49(F)
Navigation Receiver Assembly
SPD
B
ACC
IG
SW1
SWG
SW2
TSW–
SGND
BR
G10(A), J1(B)
Spiral Cable
AU1
EAU
AU2
G50
Speaker Condenser
Seek+
MODE
Seek–
Volume+
Volume–
On Hook
Off Hook
Voice
Steering Pad SW LH
Steering Pad SW RH
J1(B)
Steering Pad SW
Q9
Speaker
(Roof Front LH)
Q15
Speaker
(Roof Front RH)


W
B
Y
GR
Q18
Television Display
+B
ACC
L+
L–
R+
R–
SLD9
MUTE
GND
CDL+
CDL–
CDR+
CDR–
CSLD
MUTE
GVI+
TX–
TX+
SB(*1)
GR(*1)
PKB
F1(H), F2(B), F3(C), F5(E), F11(G), F13(I), G49(F)
Navigation Receiver Assembly
A4
Parking Brake SW
MACC
MIC+
MIC–
Q17
Telephone Microphone
Microphone
W–B
LG
L
BE


W
B
Y
GR
Q18
Television Display
TX+
TX–
14
13
∗1 : w/ Rear Display
∗4 : Shielded
(IG)
10A
RH ECU–IG
14 5D
7 RG
7 RD
7 RC
W
B
LG
L
5 QG7
13 QG7
8 FG3
17 FG3
1 FG2
29 A TX+
28 A TX–
1 C GVO+
9 A TX1+
8 A TX1–
4 D ACC
1 D +B
3 D IG
6 A CANL
7 A CANH
GND1
F6(A), F12(C), F14(D)
Parking Assist ECU
CB+
CGND
CV+
CV–
8 D
40 A
39 A
20 A
19 A
W–B
9 C
7 C
8 C
F15(C)
Junction Connector
9 FG2
5
7
G65
Junction
Connector
(∗1)
G1
3 FG1
4 FG1
14 FG1
15 FG1
4 GM2
3 GM2
9 GM2
8 GM2
23 SM2
24 SM2
7 SM2
8 SM2
4
3
2
1
S20
Television Camera



W
W
(IG)
(BAT)
10A
RH ECU–IG
10A
ECU–B
∗ 5 : Before Jun. 2010 Production
∗ 6 : From Jun. 2010 Production
5A
B
R
4K
4D
W
W
LM
LL
LA
LJ
LJ
B
W
1
3
IG
BAT
G18
Steering Sensor
W
B
8 FG2
16 FG2
G40
Gateway ECU
CA2L
CA2H
CA1H
CA1L
CANH
CANL
ESS
12
13
16
15
10
9
2
SB (*6)
W (*6)
SB (*5)
W (*5)
SB (*5)
Y (*5)
G (*5)
W (*5)
BR
W
W–B
6 RH
9 RH
5 RH
8 RH
12 LJ
10 LL
1 H
2 H
1 D
2 D (*5)
1 M
2 M (*6)
G72(D), (M), G73(E), (N), G76(H), G96(I)
Junction Connector
SB (*5)
Y (*5)
2 B
1 B
2 A
1 A
G66(A), G67(B)
Junction Connector
1 I
2 I
1 E
2 E (*5)
1 N
2 N (*6)
W (*5)
SB (*5)
SB (*6)
W (*6)
B
W
W–B
W
B
7
G65
Junction
Connector
G1

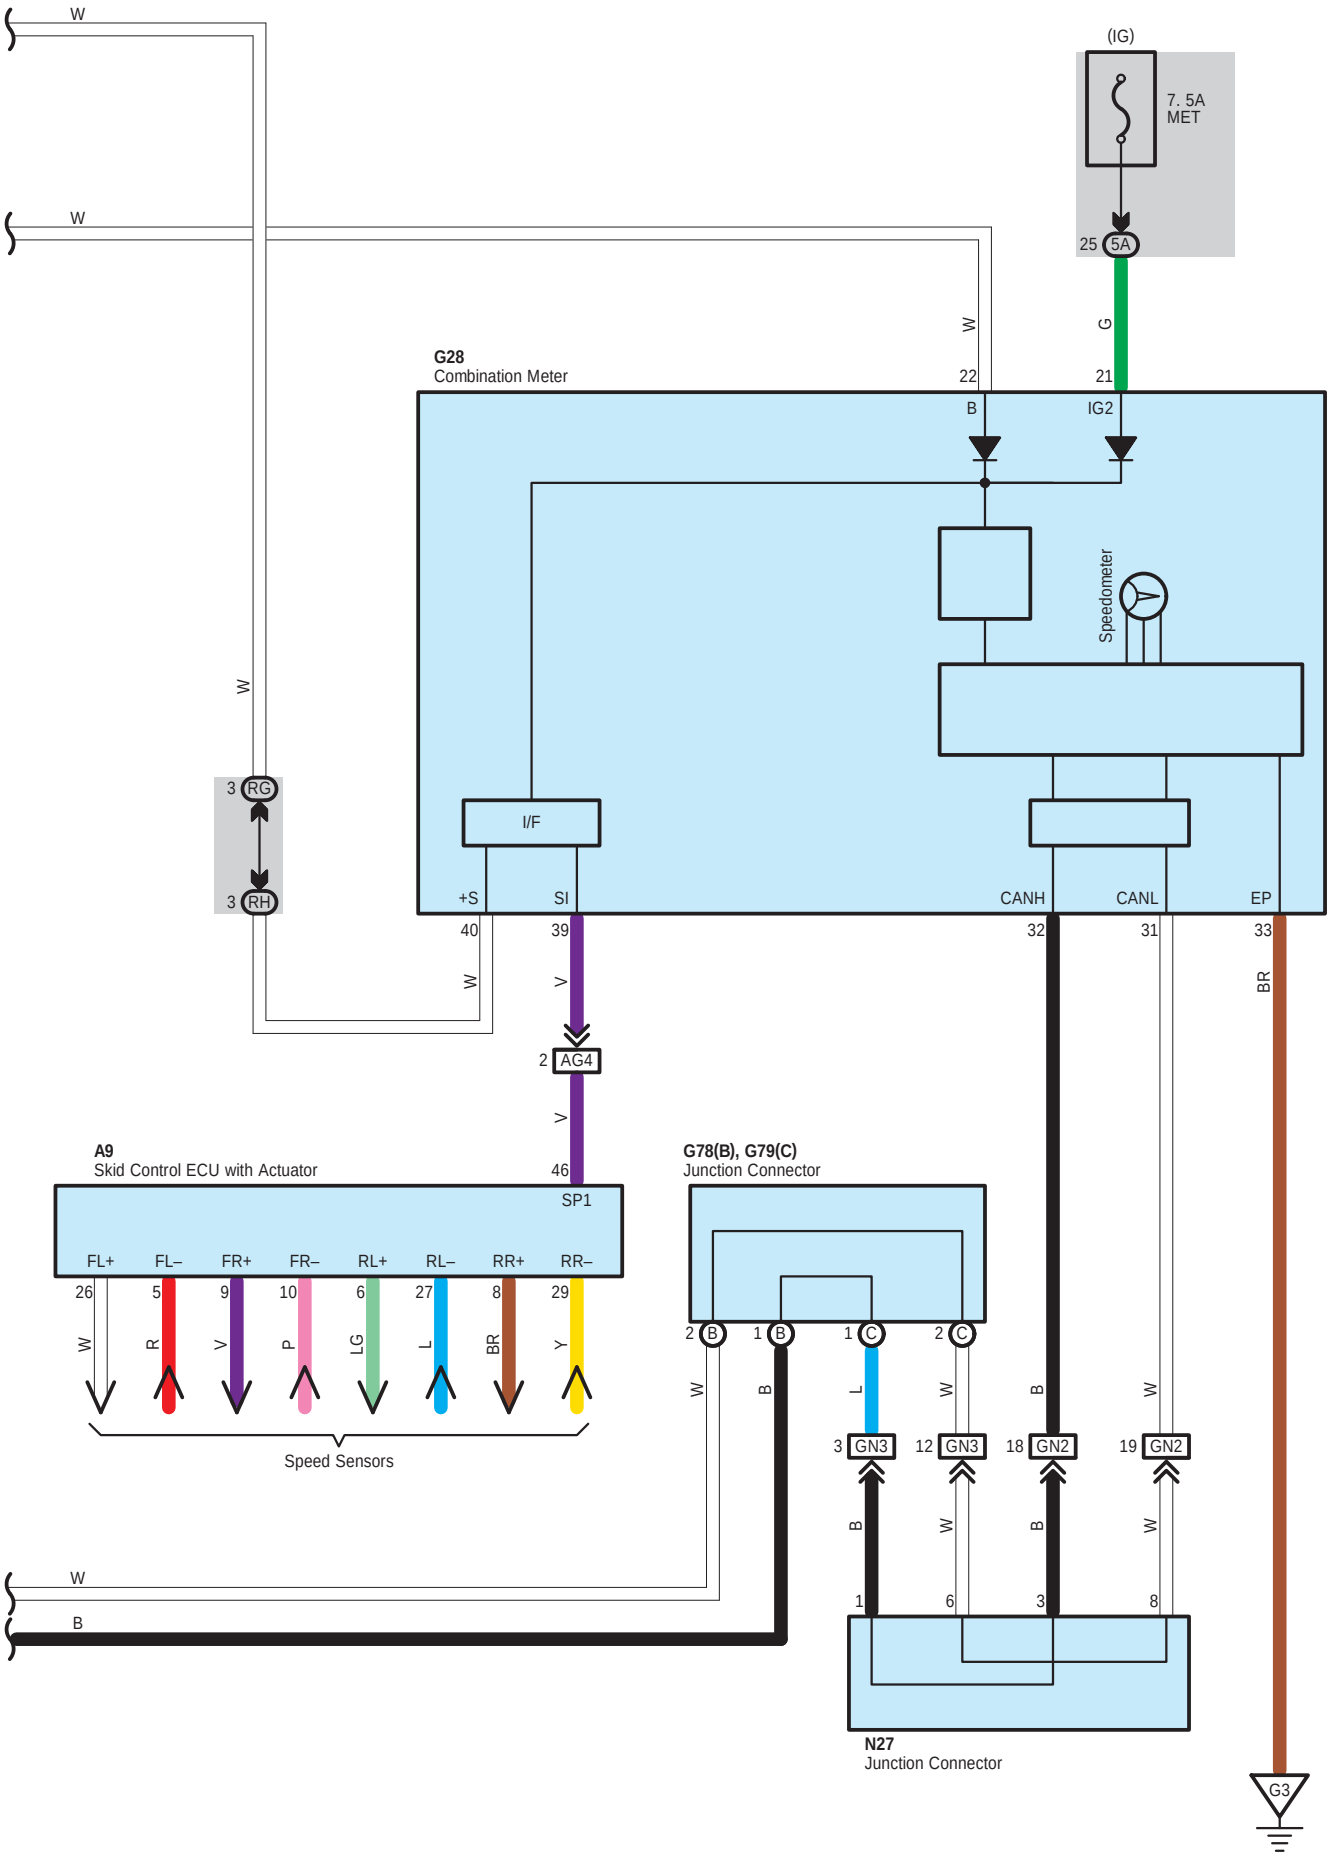
W
W
(IG)
7. 5A
MET
25 5A
G
W
G28
Combination Meter
22
21
B
IG2
Speedometer
W
3 RG
3 RH
I/F
+S
SI
CANH
CANL
EP
40
39
32
31
33
W
V
BR
2 AG4
V
A9
Skid Control ECU with Actuator
46
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
26
5
9
10
6
27
8
29
W
R
V
P
LG
L
BR
Y
Speed Sensors
G78(B), G79(C)
Junction Connector
2 B
1 B
1 C
2 C
W
B
L
W
B
W
3 GN3
12 GN3
18 GN2
19 GN2
B
W
B
W
1
6
3
8
N27
Junction Connector
W
B
G3


A 4
White




A 9
Black

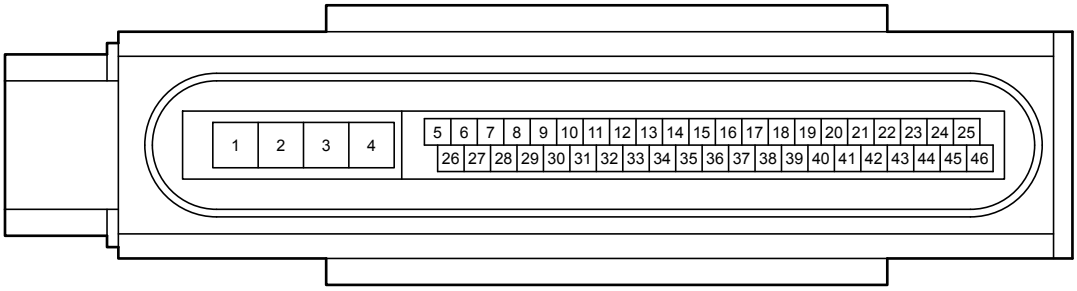

D 4
Gray

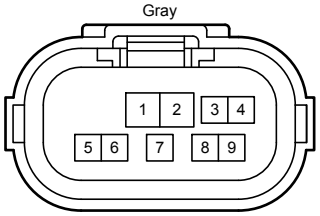


F 1
White

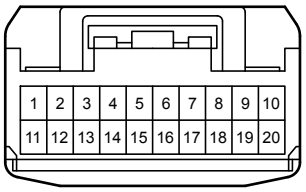

(From Nov. 2006 Production)

F 2
Black

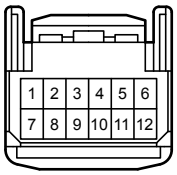


(Before Apr. 2012 Production)

F 2
White



(From Apr. 2012 Production)


F 3
White

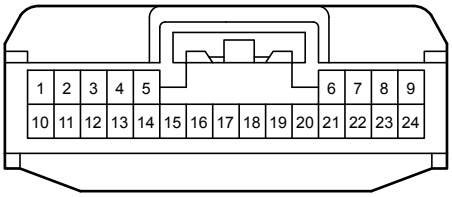

F 5
White



F 6
Black

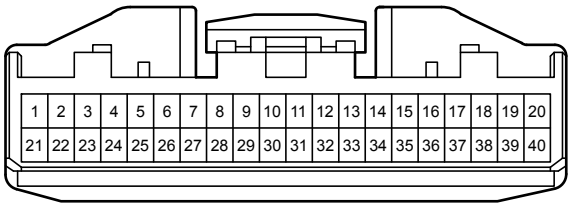


F 11
Blue




F 12
White




F 13
White

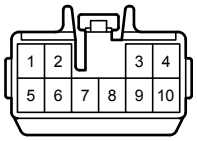


F 14
Black

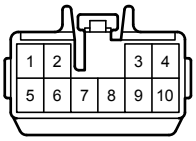

F 15
Black

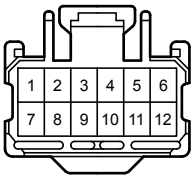


F 16
Black

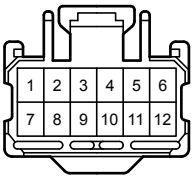


G 4
White




G 10
Black

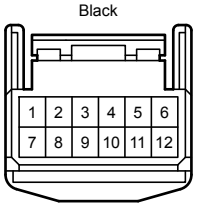


G 18
Gray

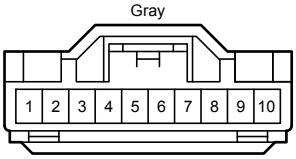


G 28
White

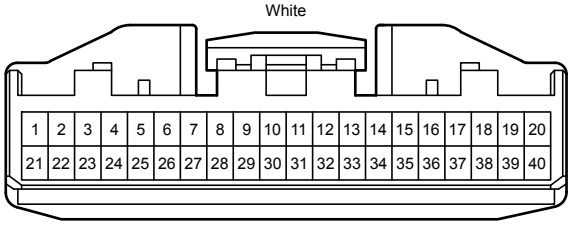


G 40
White

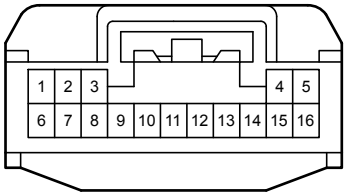


G 49
Gray

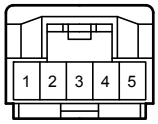


G 50
White

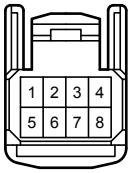


G 62
Blue

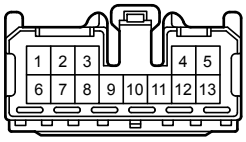


G 63
Blue

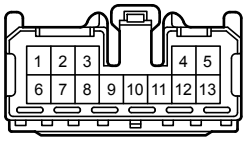


G 65
Black

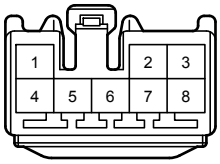


G 66
White




G 67
White




G 72
White




G 73
White




G 76
White




G 78
White




G 79
White



G 96
White




I 1
White




J 1
White




M 7
White




N 4
White




N 27
Black




Q 9
White




Q 15
White




Q 17
White

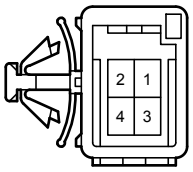


Q 18
White

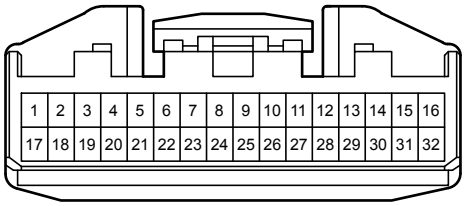


S 20
Black

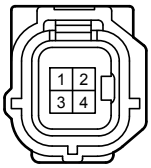


j 1
White

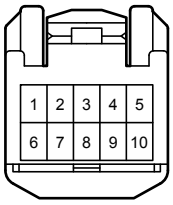

4D
White

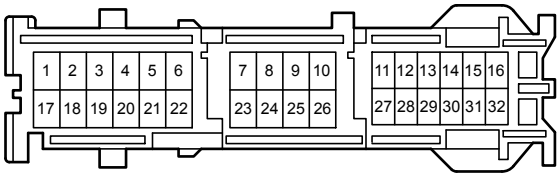


4K
Gray

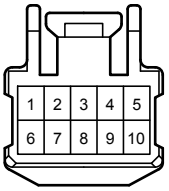


(Before Dec. 2008 Production)

4K
Blue

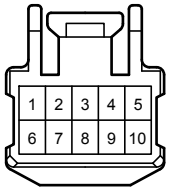


(From Dec. 2008 Production until May 2016 Production)

4L
Gray

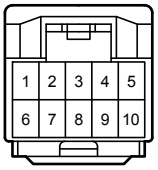


(Before Dec. 2008 Production)

4L
White

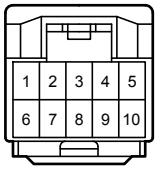


(From Dec. 2008 Production until May 2016 Production, From May 2016 Production)


5A
White

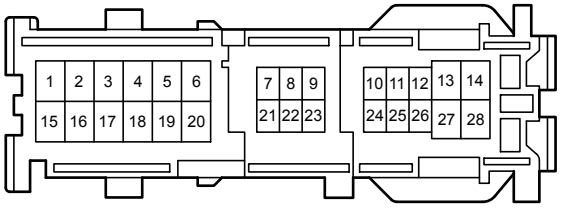

5D
White

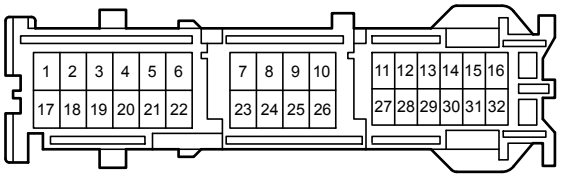


5L
Gray

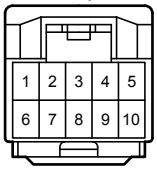


(Before Dec. 2008 Production)

5L
White

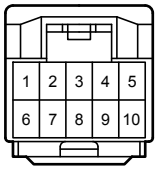


(From Dec. 2008 Production until May 2016 Production, From May 2016 Production)


LA
White




LJ
Gray




LK
White




LL
Gray




LM
White




RA
White




RB
Gray




RC
White




RD
Gray




RF
Gray




RG
White




RH
Gray




AG3
Gray

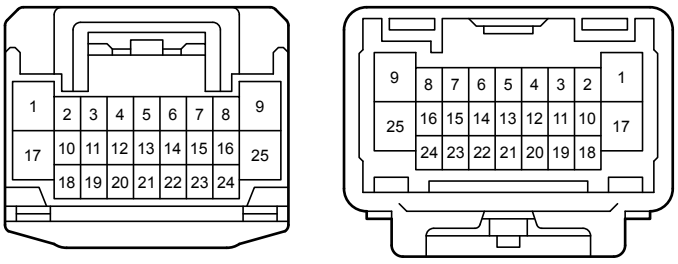


AG4
Blue

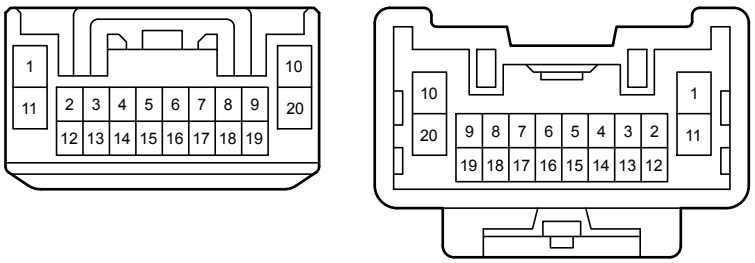


AG5
Blue

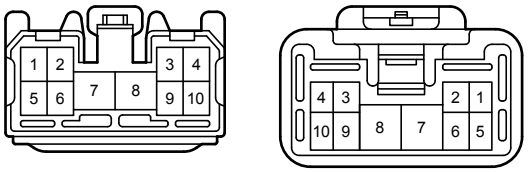


DA2
White

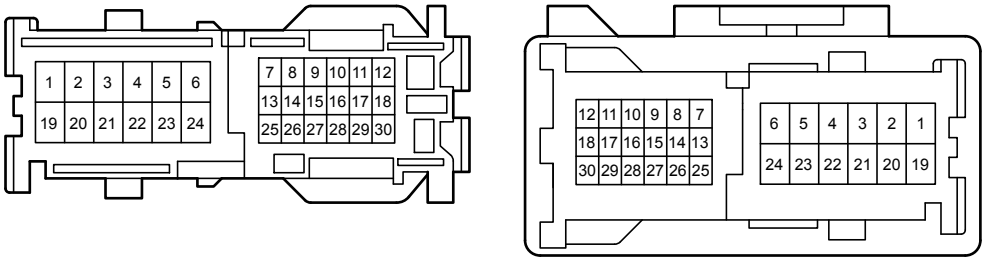


FG1
Blue

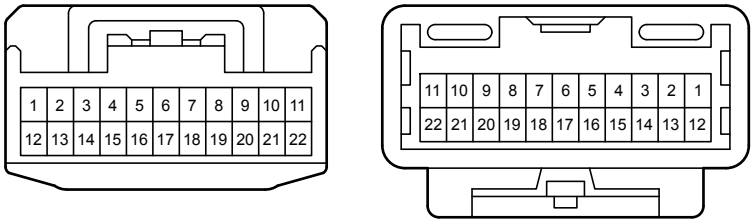


FG2
White

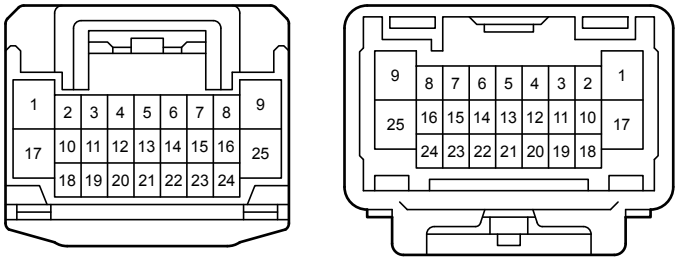


FG3
White

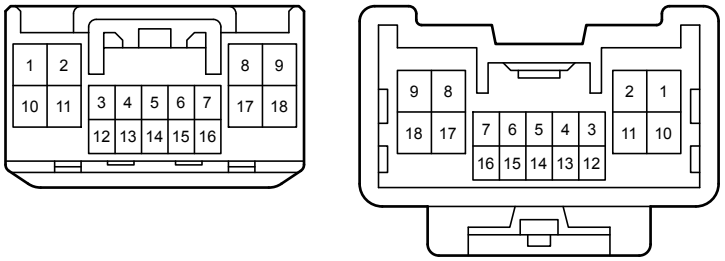


GF1
Blue

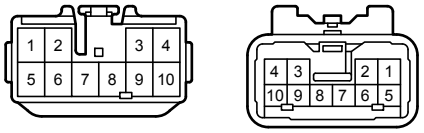


GF2
Blue

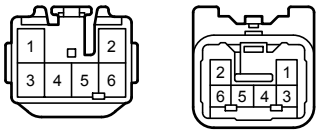


GF3
White

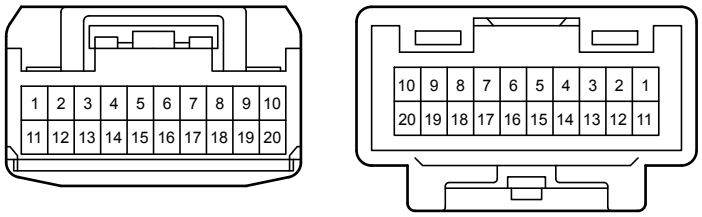


GM1
White

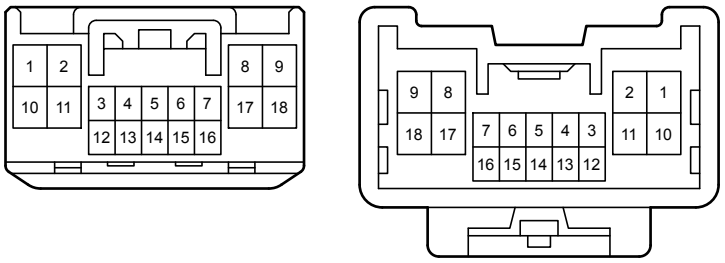


GM2
Blue

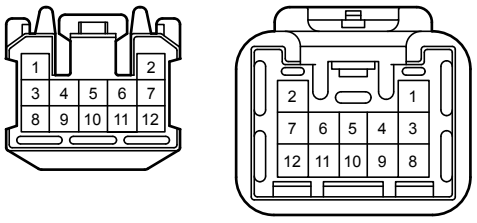


GN1
Black

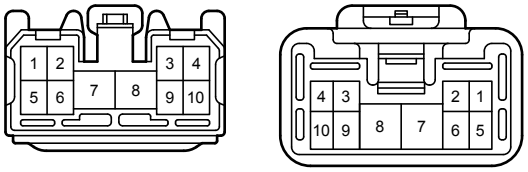


GN2
White

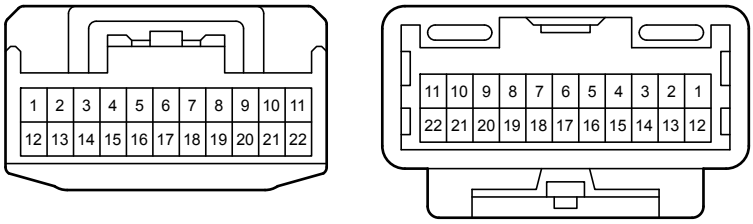


GN3
White

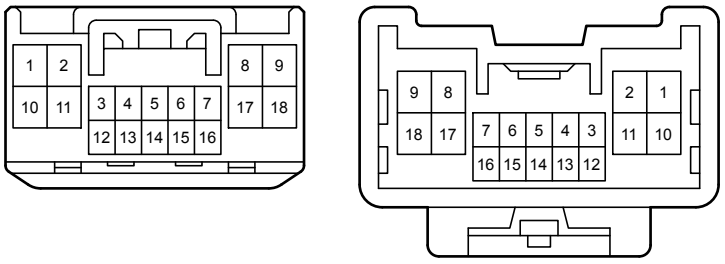


IG2
Dark Gray

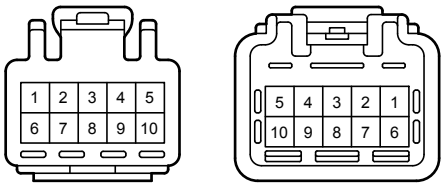


JG2
Dark Gray

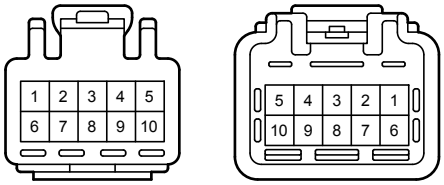


QG1
Black

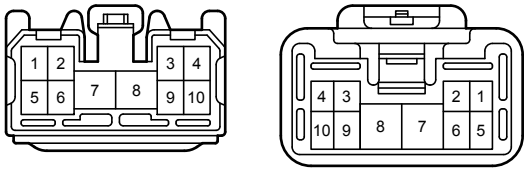


QG4
Gray

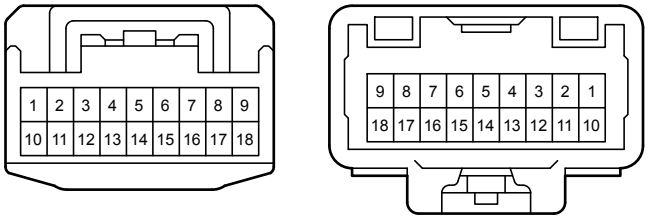

QG7
White

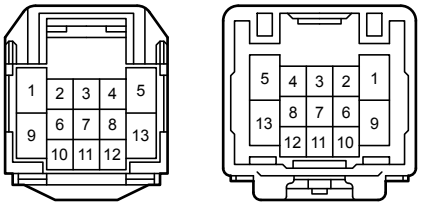

QG8
Gray

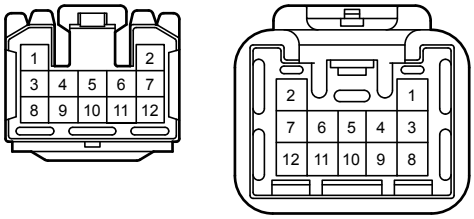

SM2
Gray

