




(BAT)
10A
ECU–B
2
1
R
25 4D
1 4K (*27)
1 4P (*28)
4 LL
3 LA
W
W
(IG)
7. 5A
MET
25 5A
G
Turn Signal Flasher
Y
Y
24
23
G28
Combination Meter
22
21
B
B
B
IG2
Security
Turn LH
Turn RH
High Beam
Door
Tail
Fuel
SRS
(*14)
(*14)
(*14)
(*13)
(*13)
(*13)
(*13)
(*14)
LP
EP
H
M
RSET
ODO
TC O
ES
4
33
10
9
8
34
35
20
V
BR
L
R
W
V
P
(*1)
W–B
(*30)
10 A
8 A
2 A
5 A
4 A
H
M
REST
+
TC
H
M
: 00
ODO
TRIP
Rheostat
E
6 A
G46(A)
Trip SW
11 LJ
11 LG
10 LL
W–B
W–B
7
G65
Junction
Connector
Certification ECU (*2)
Transponder Key ECU
(w/o Power Switch)
G3
G1


∗ 1 : w/ Rheostat
∗ 2 : w/ Power Switch
∗ 3 : w/ Navigation System
∗ 4 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
∗ 5 : w/o Parking Assist (TOYOTA Parking Assist–Sensor)
∗ 6 : Middle East
∗ 7 : 2GR–FE
∗11 : Before Apr. 2012 Production
∗12 : From Apr. 2012 Production
∗13 : ∗11, ∗12 A/T
∗14 : ∗12 CVT
∗15 : CVT
∗16 : A/T
∗18 : From Apr. 2013 Production
∗23 : Before Oct. 2015 Production
∗24 : From Oct. 2015 Production
∗25 : Taiwan
∗26 : Except Taiwan
∗27 : Before May 2016 Production
∗28 : From May 2016 Production
∗30 : w/ Tire Presure Warning System

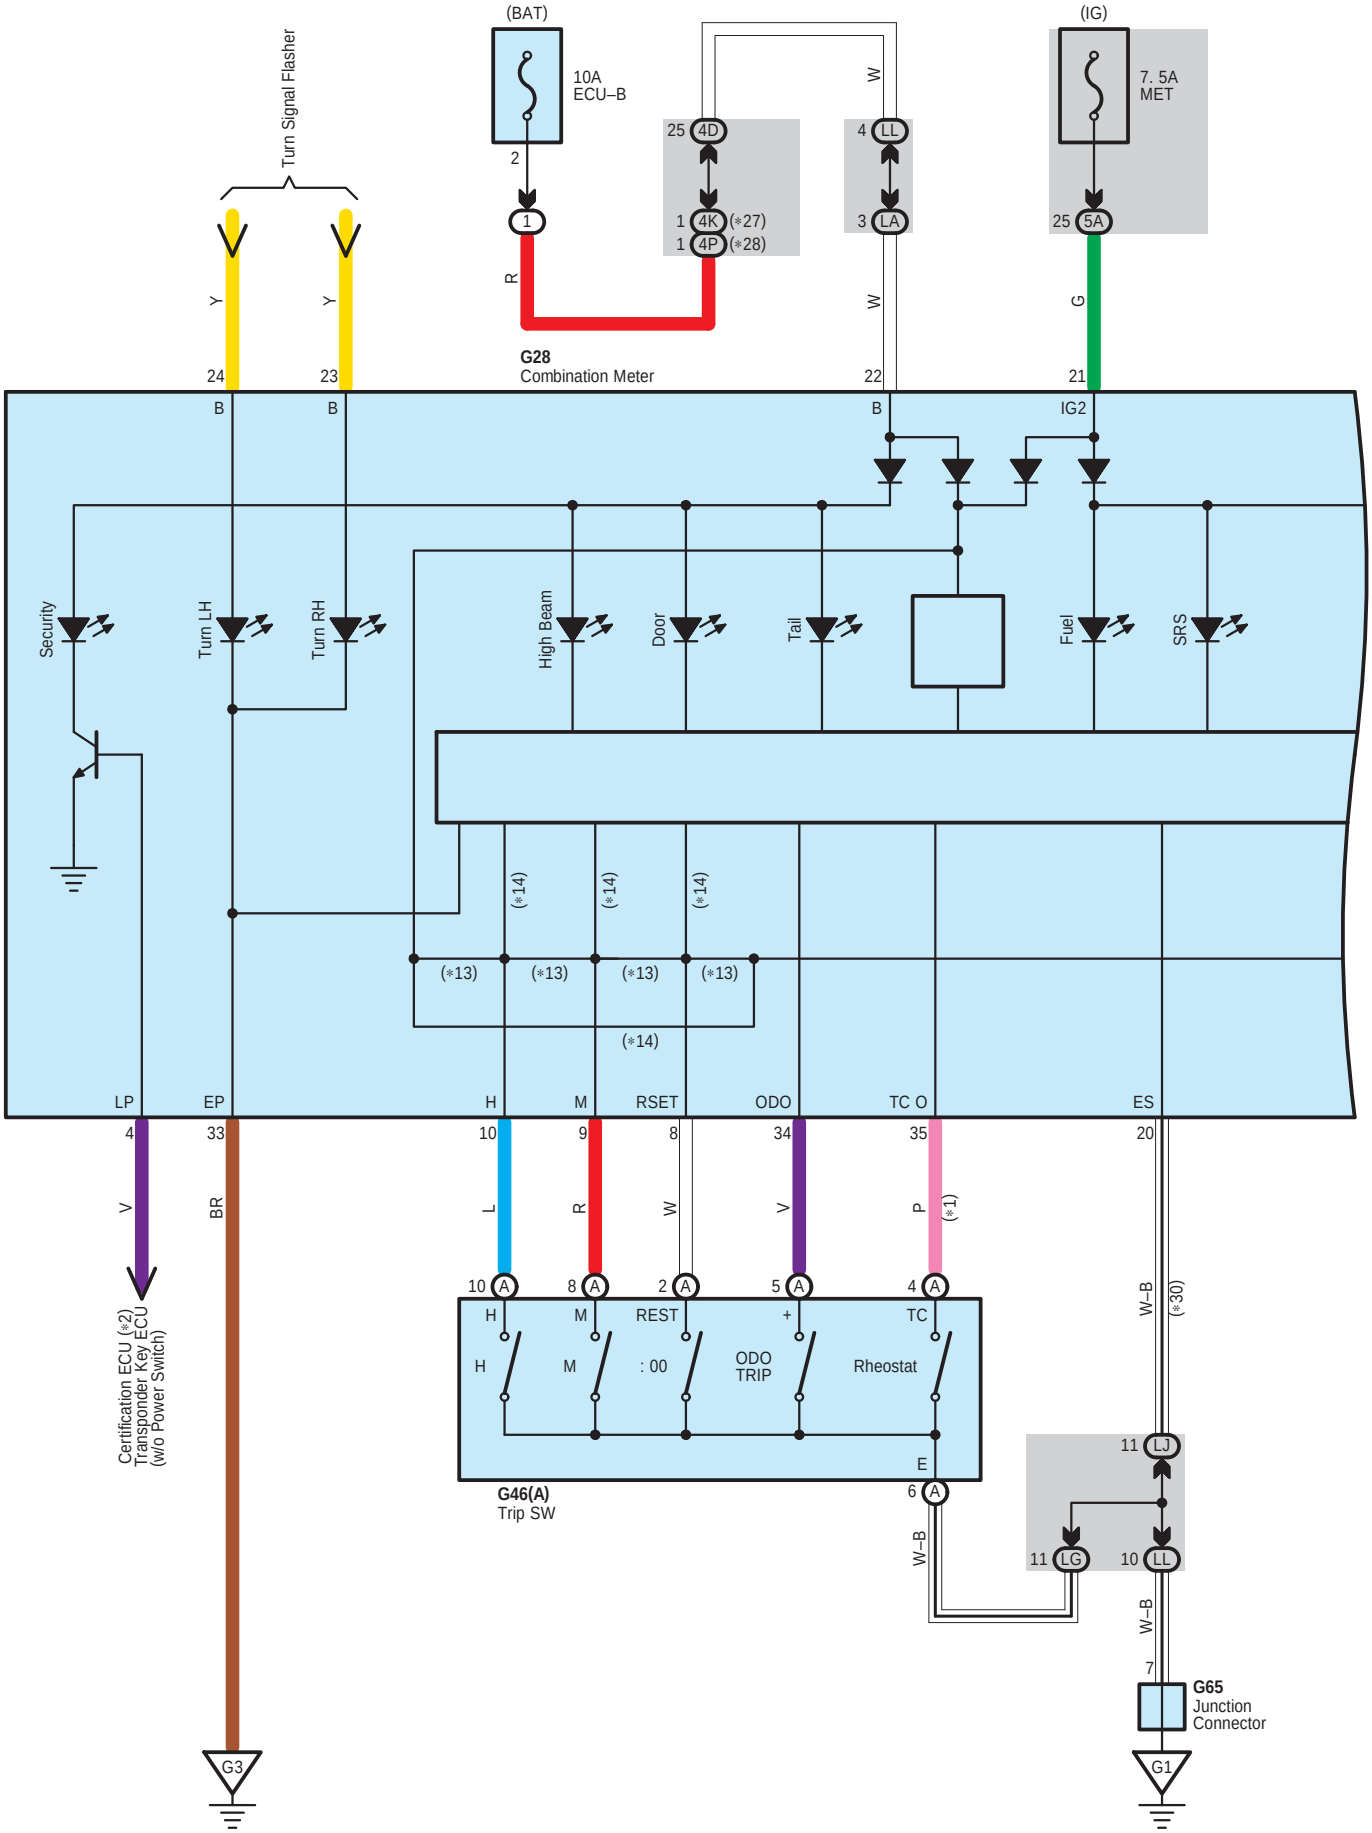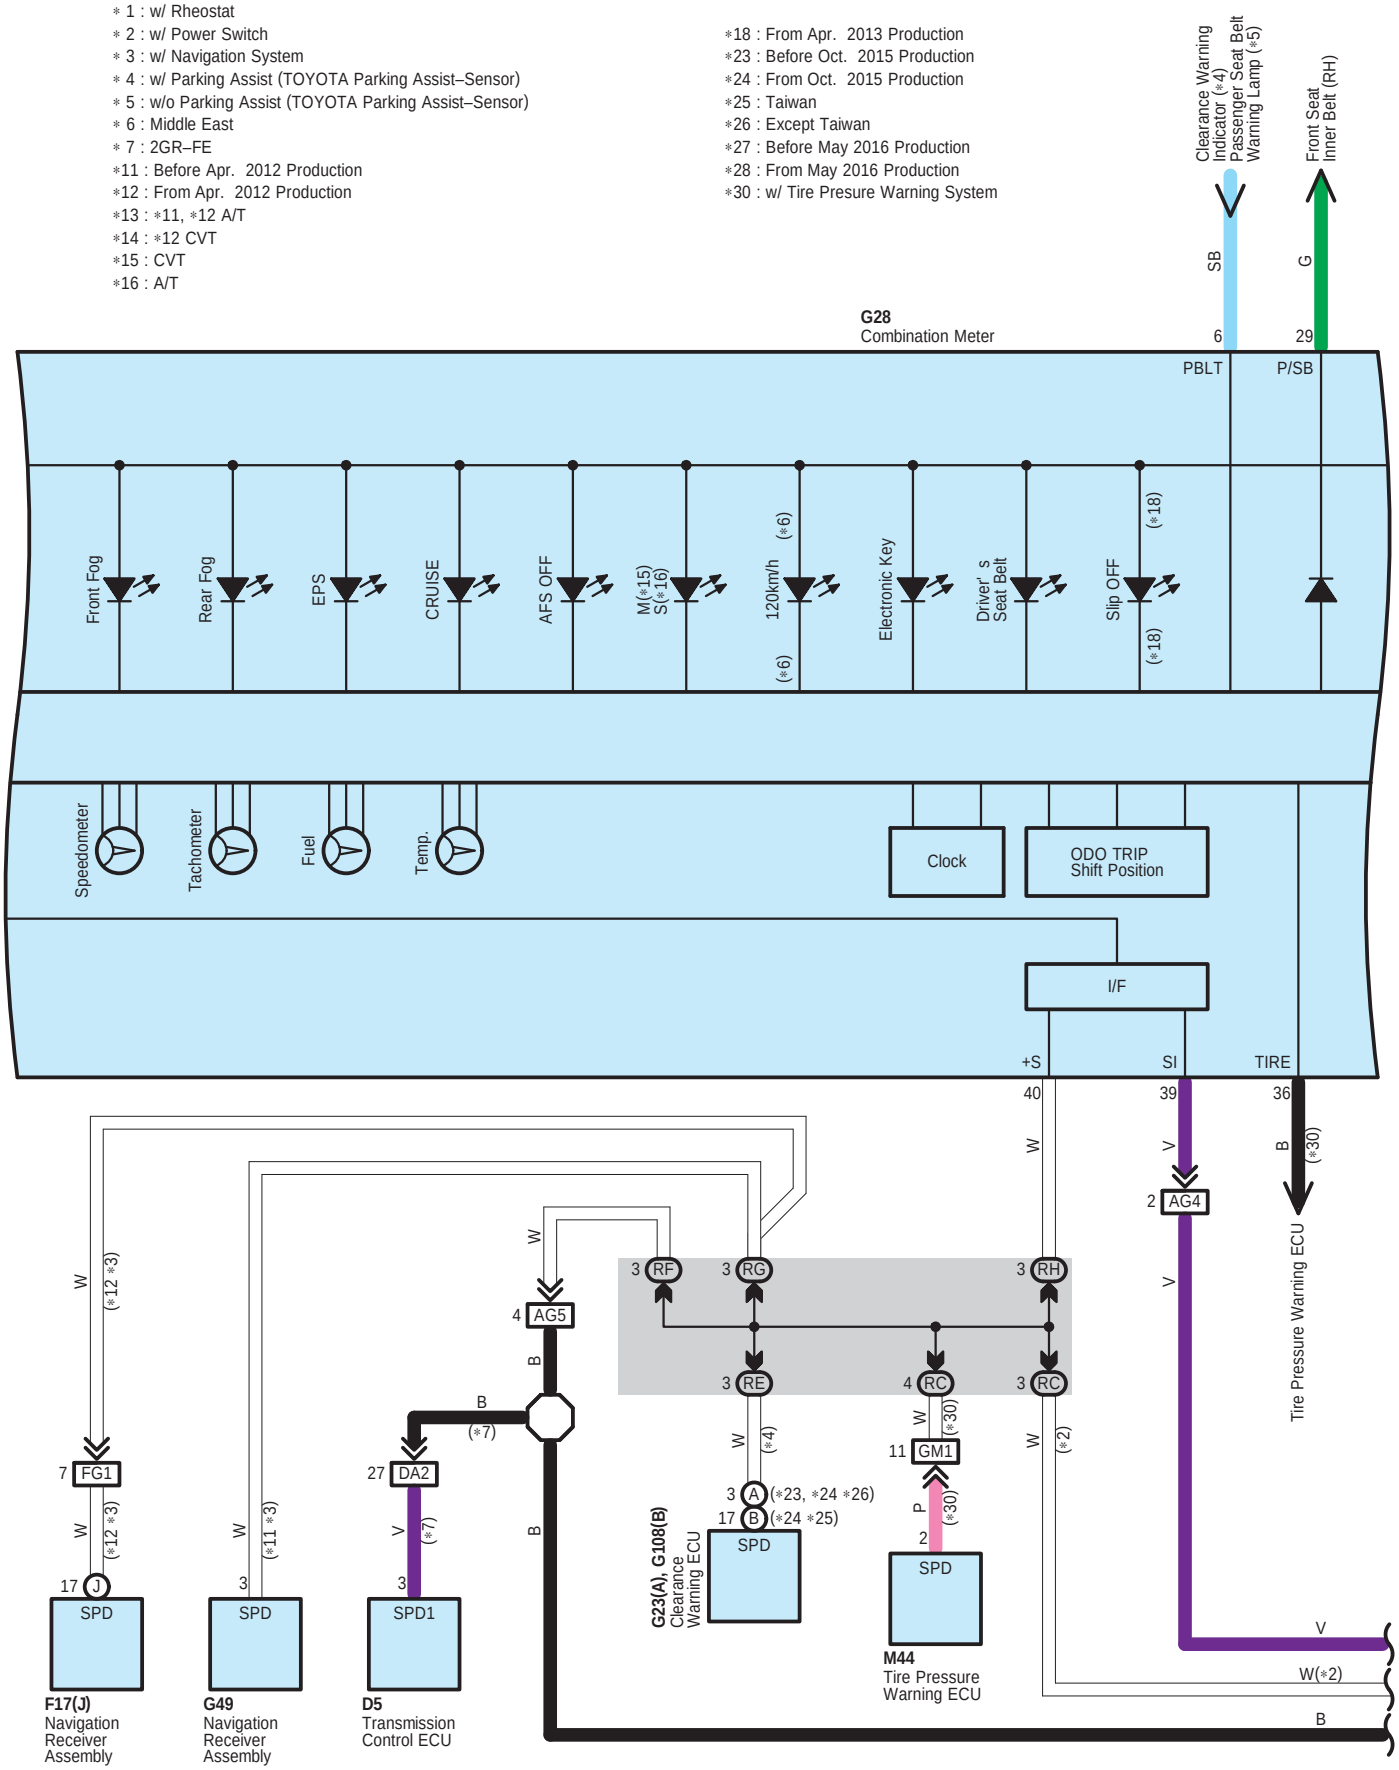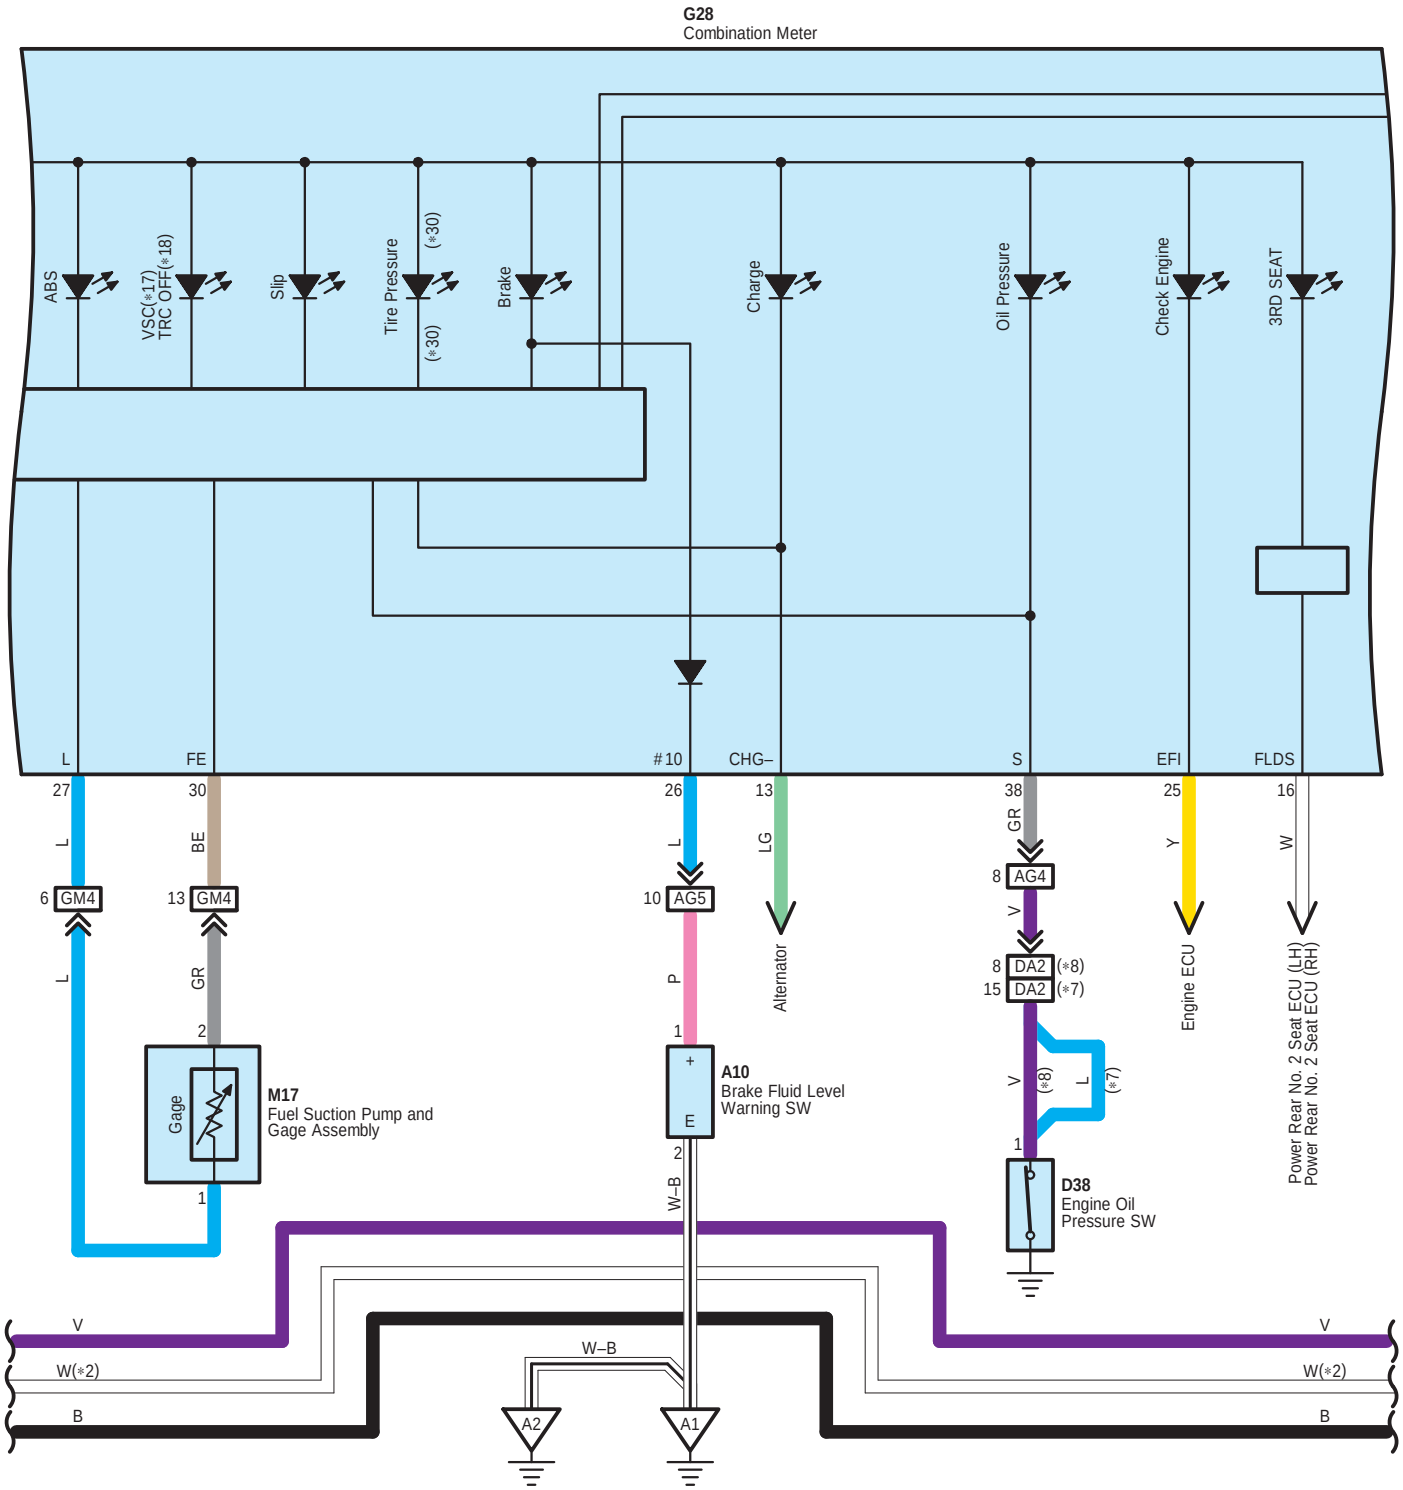

∗ 2 : w/ Power Switch
∗ 7 : 2GR–FE
∗ 8 : 2AZ–FE
∗ 9 : Before Jun. 2010 Production
∗10 : From Jun. 2010 Production
∗11 : Before Apr. 2012 Production
∗12 : From Apr. 2012 Production
∗17 : Before Apr. 2013 Production
∗18 : From Apr. 2013 Production
∗27 : Before May 2016 Production
∗28 : From May 2016 Production
∗29 : From Apr. 2012 Production until May 2016 Production
∗30 : w/ Tire Presure Warning System

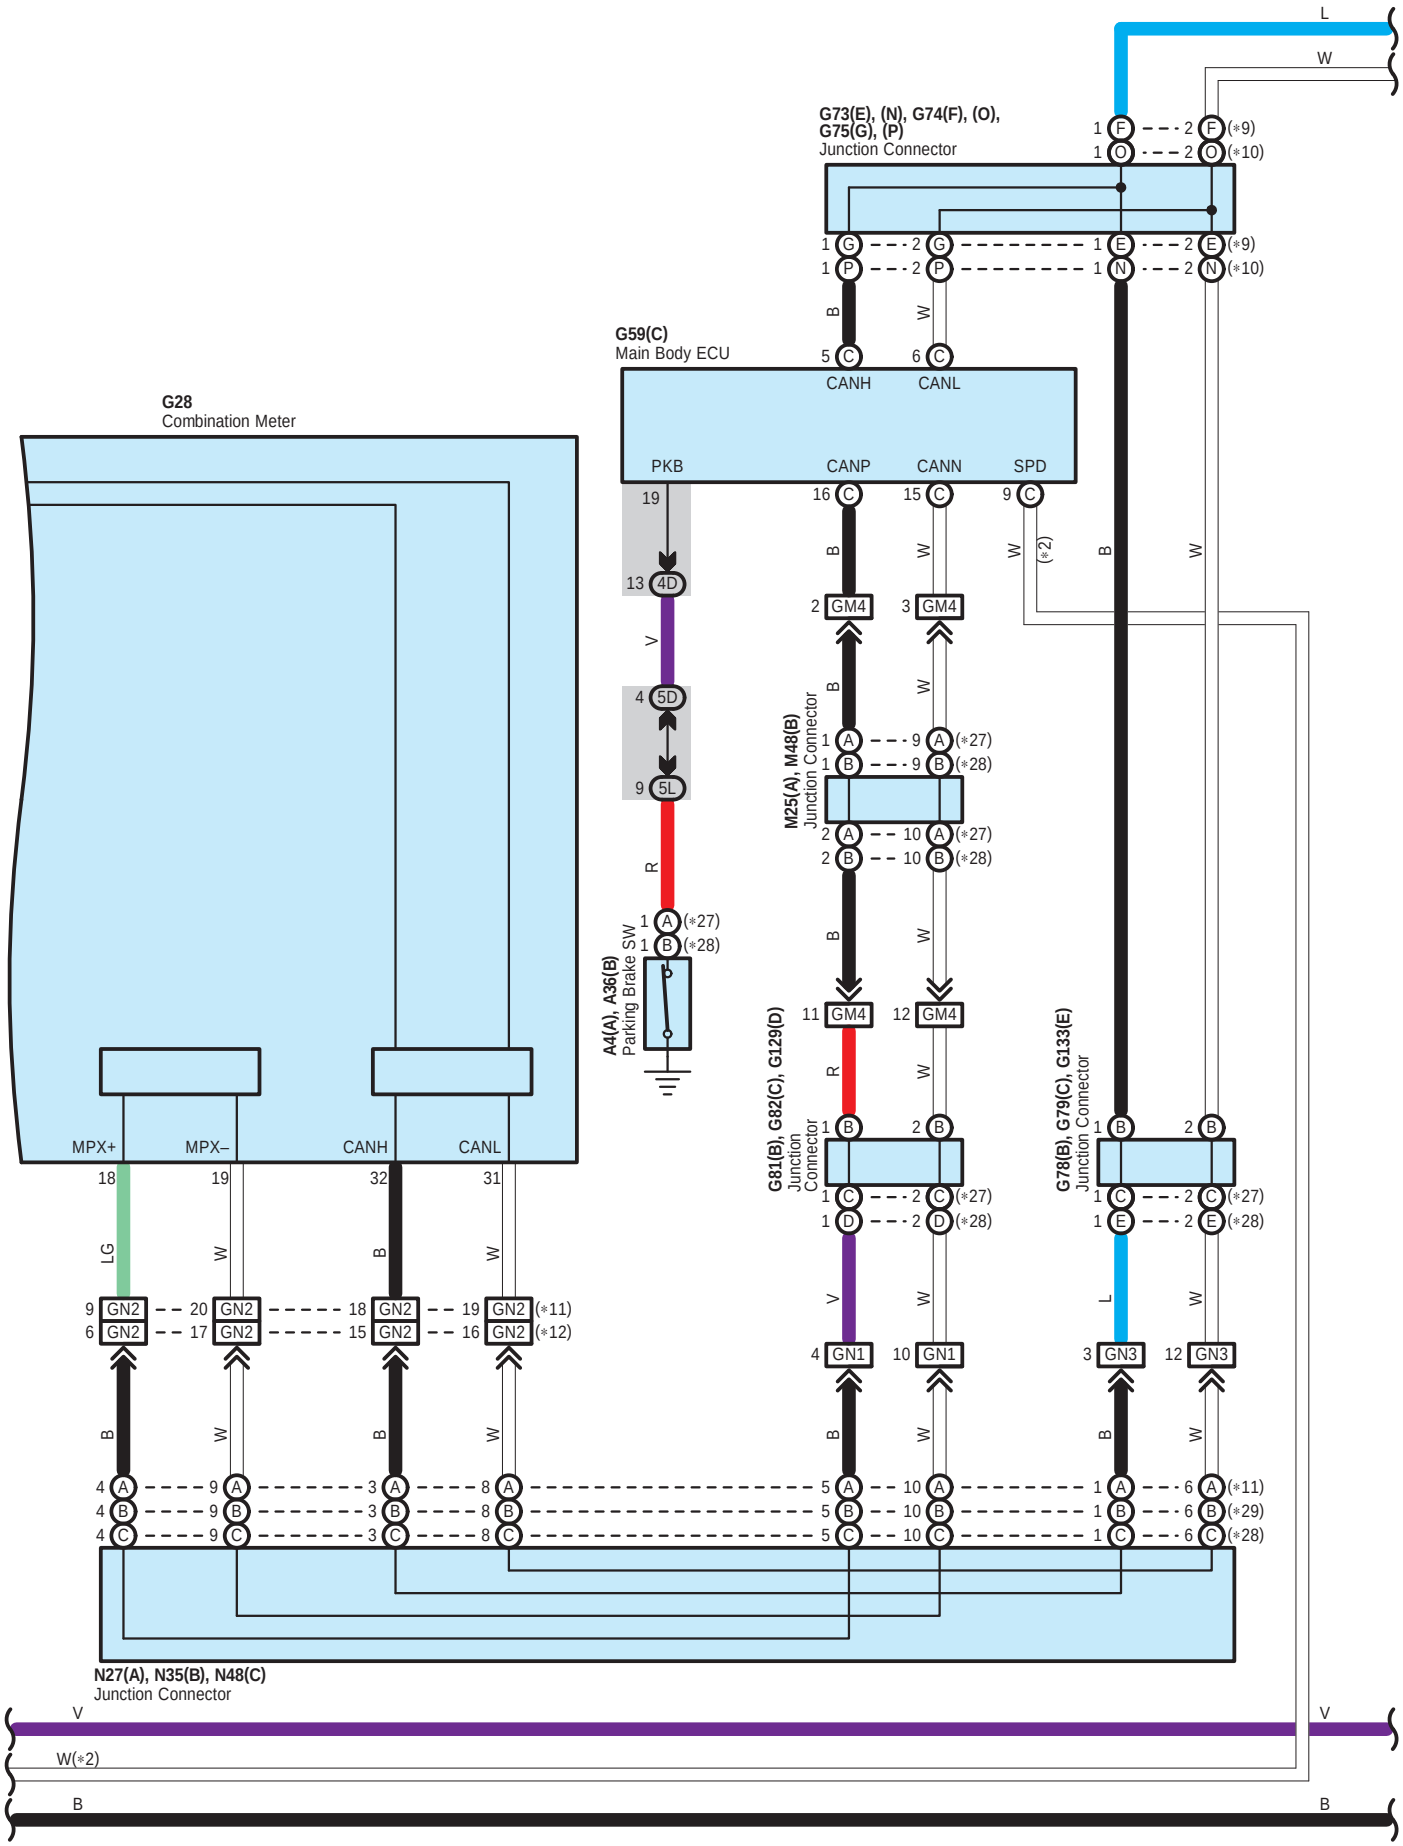



G28
Combination Meter
MPX+
MPX–
CANH
CANL
G59(C)
Main Body ECU
PKB
CANP
CANN
SPD
CANH
CANL
G73(E), (N), G74(F), (O), G75(G), (P)
Junction Connector
A4(A), A36(B)
Parking Brake SW
M25(A), M48(B)
Junction Connector
G81(B), G82(C), G129(D)
Junction Connector
G78(B), G79(C), G133(E)
Junction Connector
N27(A), N35(B), N48(C)
Junction Connector
L
W
V
W(*2)
B

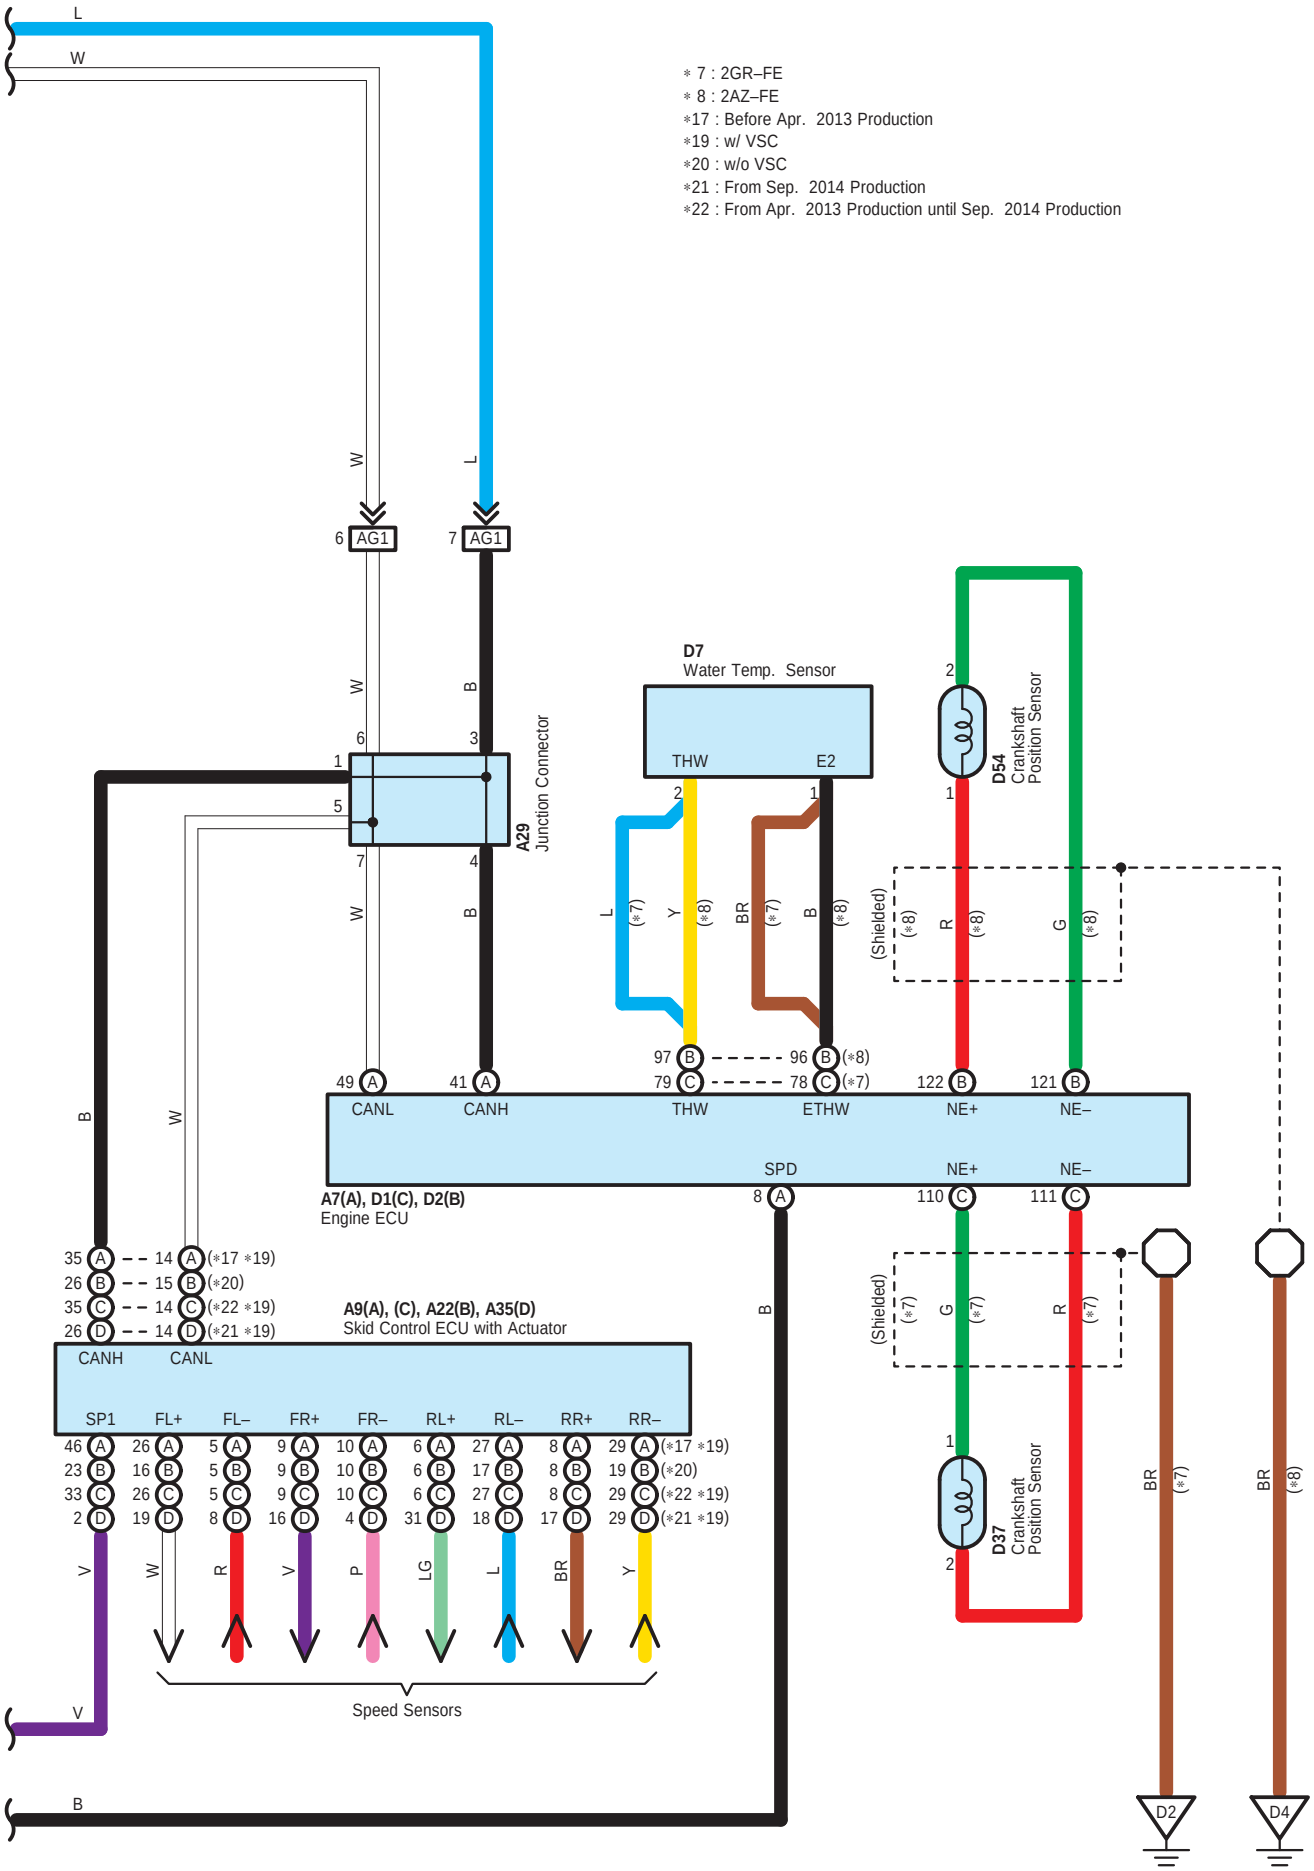
∗ 7 : 2GR–FE
∗ 8 : 2AZ–FE
∗17 : Before Apr. 2013 Production
∗19 : w/ VSC
∗20 : w/o VSC
∗21 : From Sep. 2014 Production
∗22 : From Apr. 2013 Production until Sep. 2014 Production
D7
Water Temp. Sensor
THW
E2
D54
Crankshaft Position Sensor
D37
Crankshaft Position Sensor
A29
Junction Connector
(Shielded)
CANL
CANH
THW
ETHW
NE+
NE–
SPD
A7(A), D1(C), D2(B)
Engine ECU
A9(A), (C), A22(B), A35(D)
Skid Control ECU with Actuator
SP1
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Speed Sensors
D2
D4


A 4
White



A 7
Black

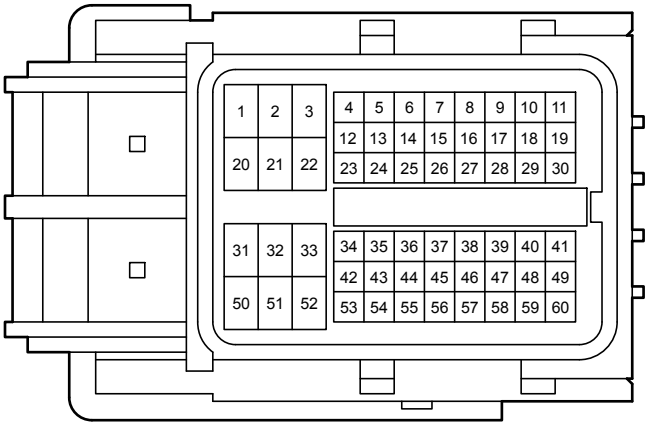


A 9
Black

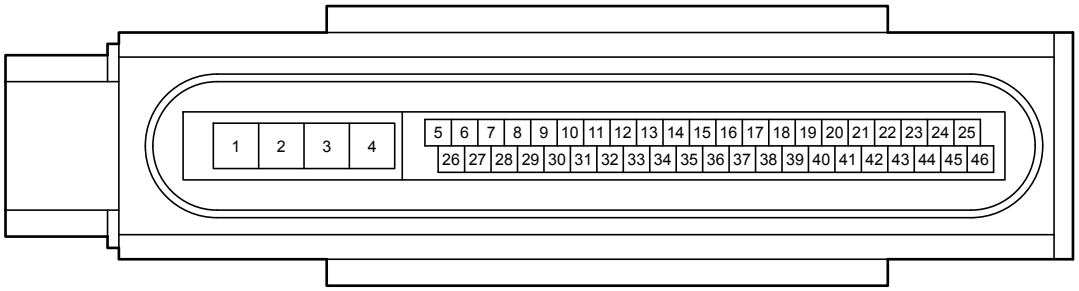


A 10
Gray




A 22
Black

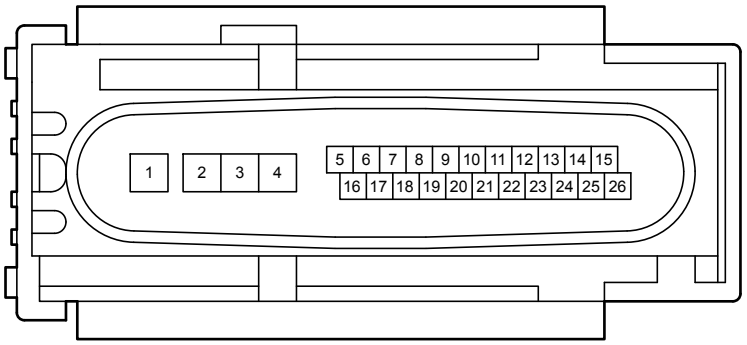

A 29
White

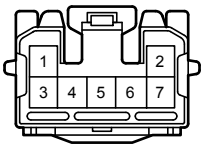


A 35
Black

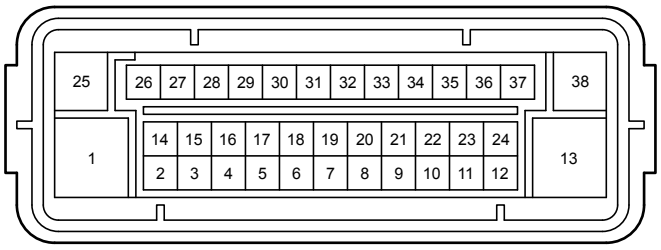


A 36
White




D 1
Black

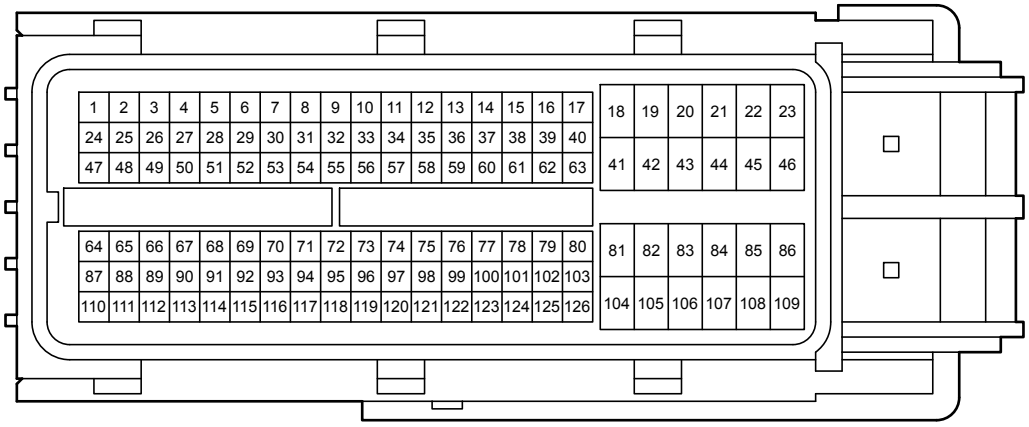

D 2
Black

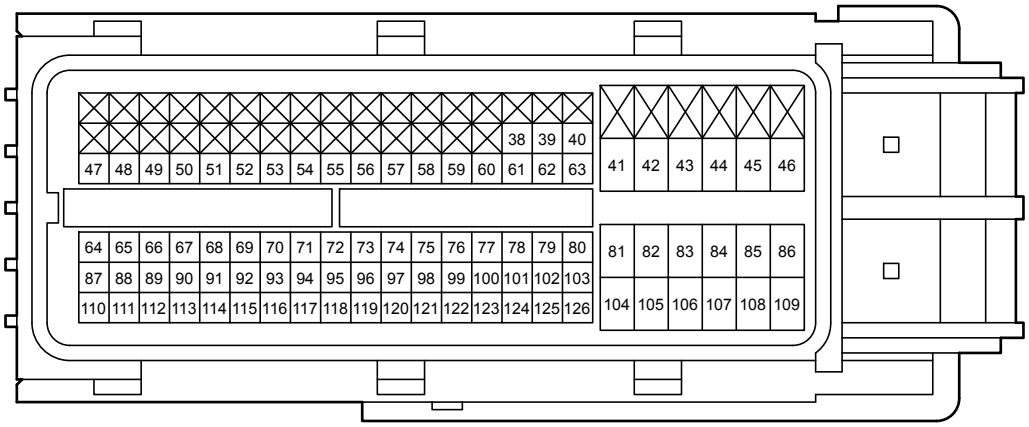


D 5
Black

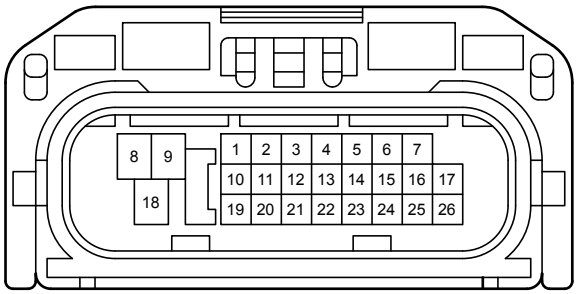

D 7
Black



D 37
Black

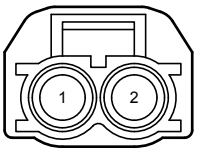


D 38
Gray




D 54
Gray




F 17
White

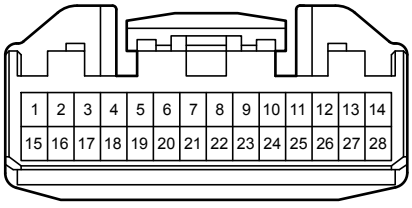


G 23
White

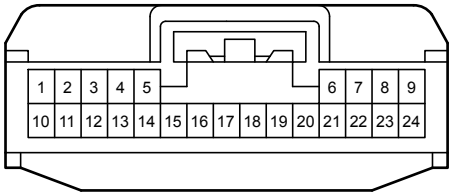


G 28
White

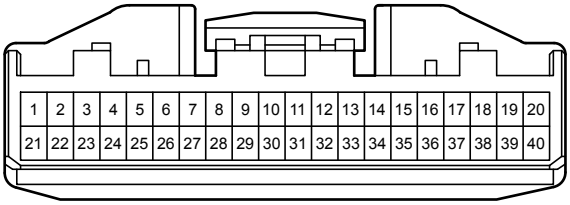


G 46
White

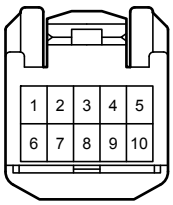


G 49
Gray

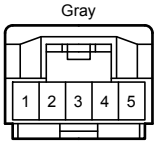


G 59
White

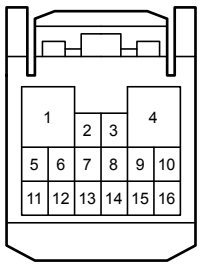


G 65
Black

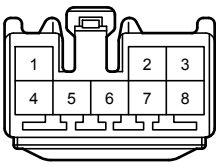


G 73
White




G 74
White




G 75
White




G 78
White




G 79
White




G 81
White




G 82
White




G108
Black

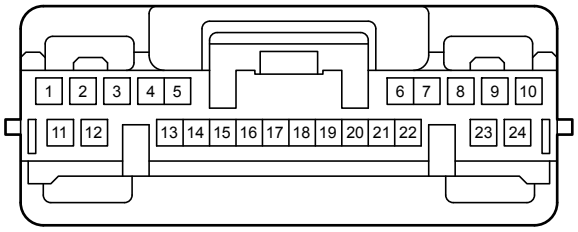

G129
Black




G133
Black




M 17
White




M 25
White

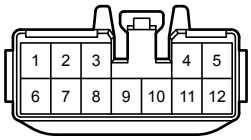


M 44
Black

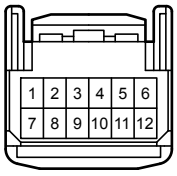


M 48
White




N 27
Black




N 35
Black

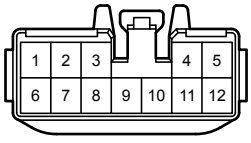


N 48
Black



4D
White

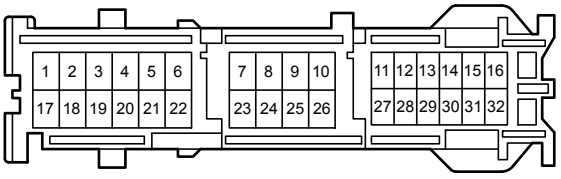


4K
Gray

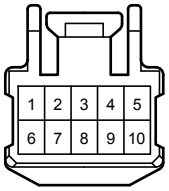


(Before Dec. 2008 Production)

4K
Blue

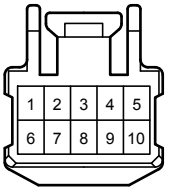


(From Dec. 2008 Production until May 2016 Production)

4P
Blue

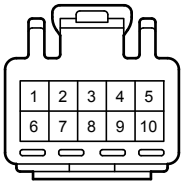


(From May 2016 Production)


5A
White

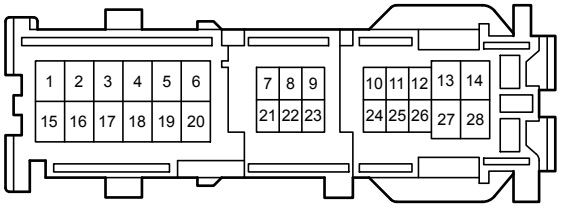

5D
White

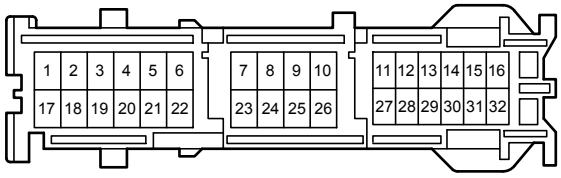


5L
Gray

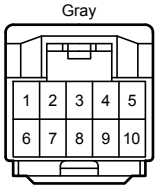


(Before Dec. 2008 Production)

5L
White

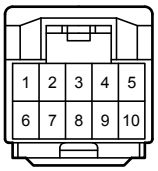


(From Dec. 2008 Production until May 2016 Production, From May 2016 Production)


LA
White




LG
White




LJ
Gray




LL
Gray




RC
White




RE
White




RF
Gray




RG
White




RH
Gray




AG1
White

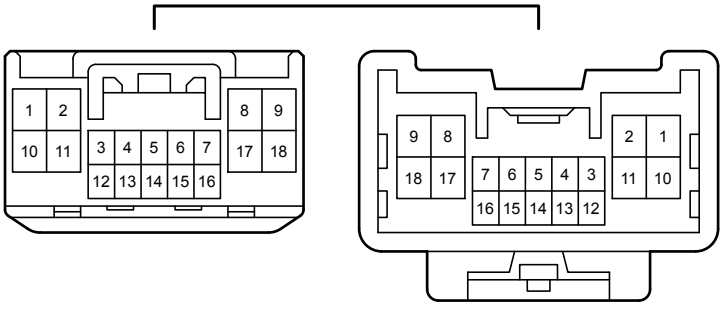


AG4
Blue

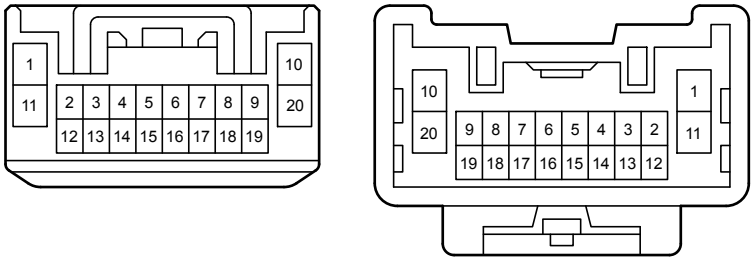


AG5
Blue

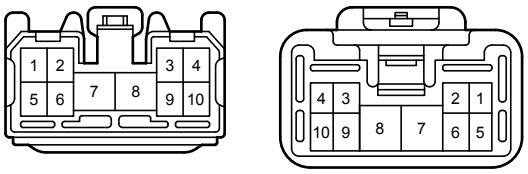


DA2
White

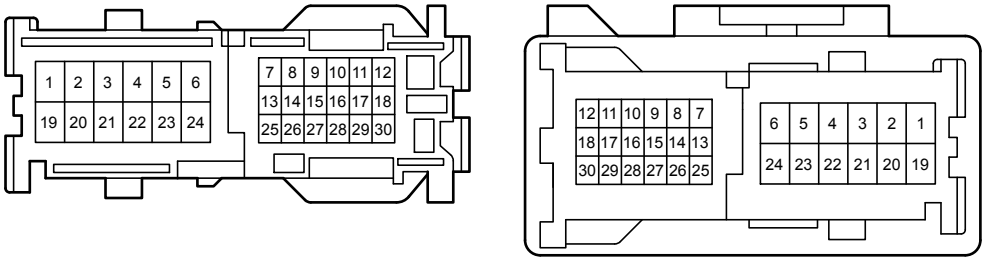


FG1
Blue

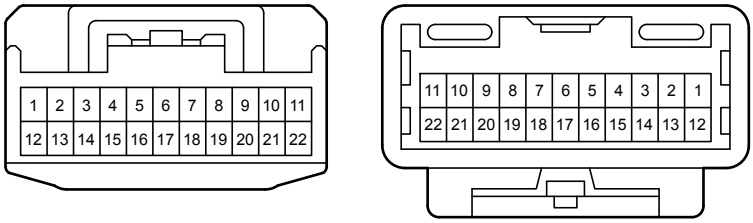


GM1
White

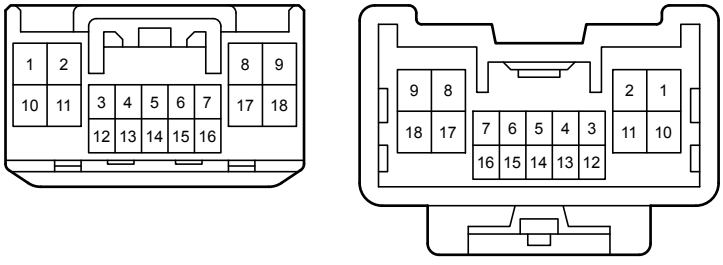


GM4
White

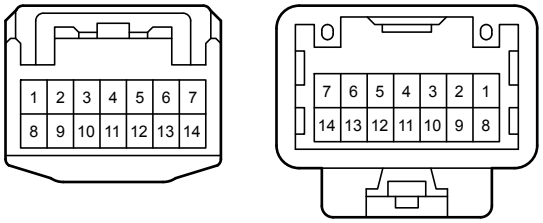

GN1
Black

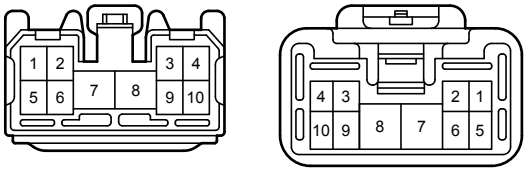

GN2
White

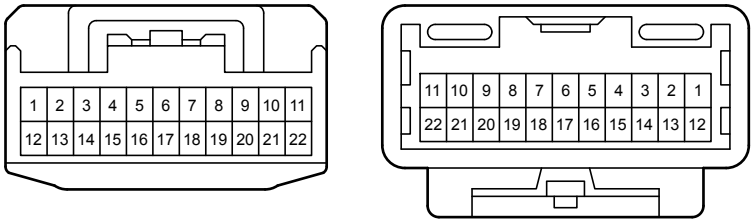

GN3
White

