



(IG)
(IG)
10A
RH ECU–IG
10A
IGN
14 5D
20 5A
B
7 RE
7 RH
B
G
W
G
10
9
15
16
IG1
IG2
CA1L
CA1H
GND
CA2H
CA2L
4
W–B
G40
Gateway ECU
13
12
Y
SB
9 RH
6 RH
8 RH
5 RH
9 RI
6 RI
8 RI
5 RI
Y
(*2)
SB
(*2)
Y
(HID Type)
SB
(HID Type)
Y
SB
6 AG8
14 AG8
9 AG8
25 AG8
B
(*2)
W
(*2)
B
(HID Type)
W
(HID Type)
4
6
12
13
CANH
CANL
CAN+
CAN–
A23
Seat Belt
Control ECU
A28
Headlamp
Swivel ECU
F6
Parking Assist ECU
CANH
CANL
7
6
B
(*1)
W
(*1)
8 FG2
16 FG2
SB
(*1)
W
(*1)
1 B
2 B
1 A
2 A
2
3
ST–Plug
1
1 C
G66(A), G67(B), G68(C)
Junction Connector
W–B
12 RH
12 RA
12 LM
11 LI
W–B
W–B
W–B
7
6
G65
Junction
Connector
G1


* 1 : w/ Navigation System
* 2 : w/ Pre–Crash Safety System

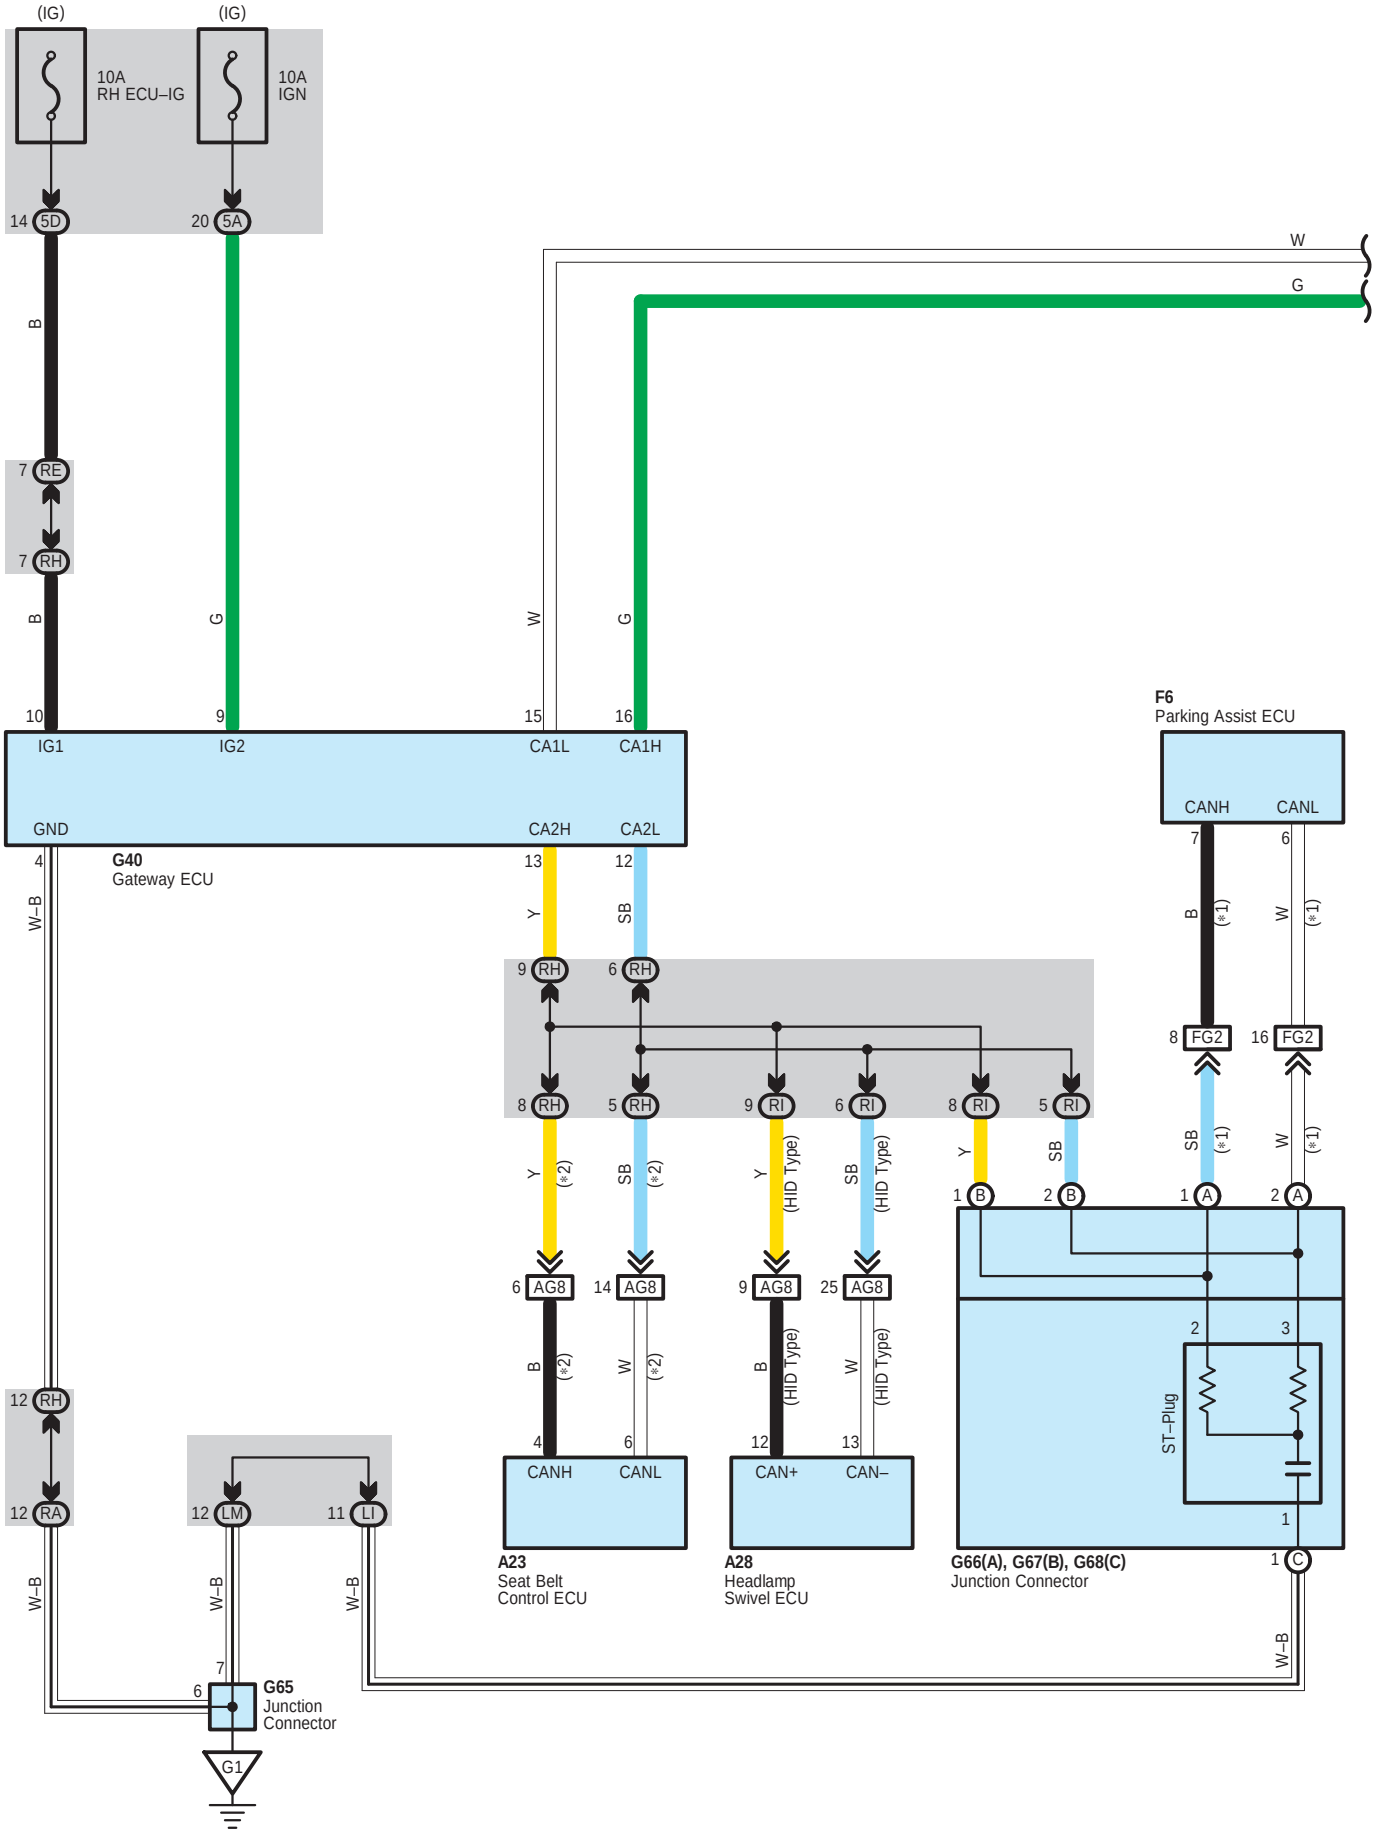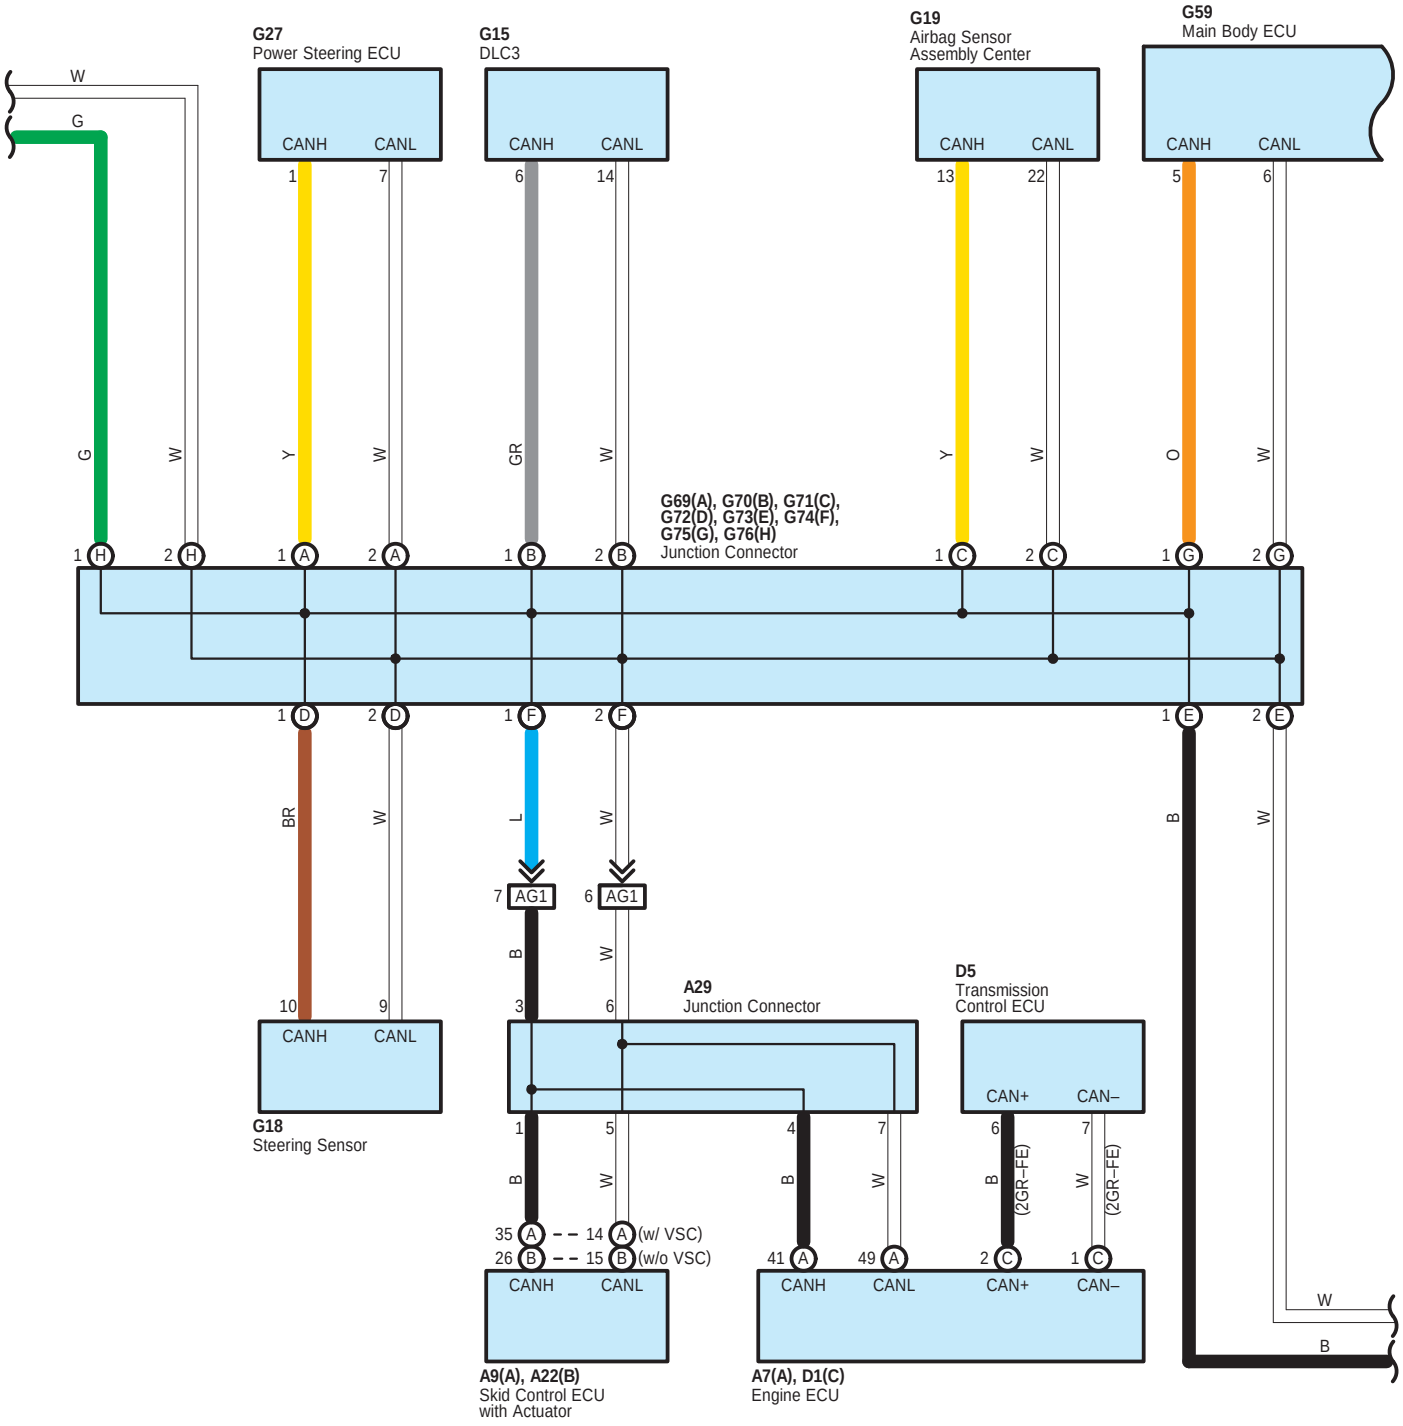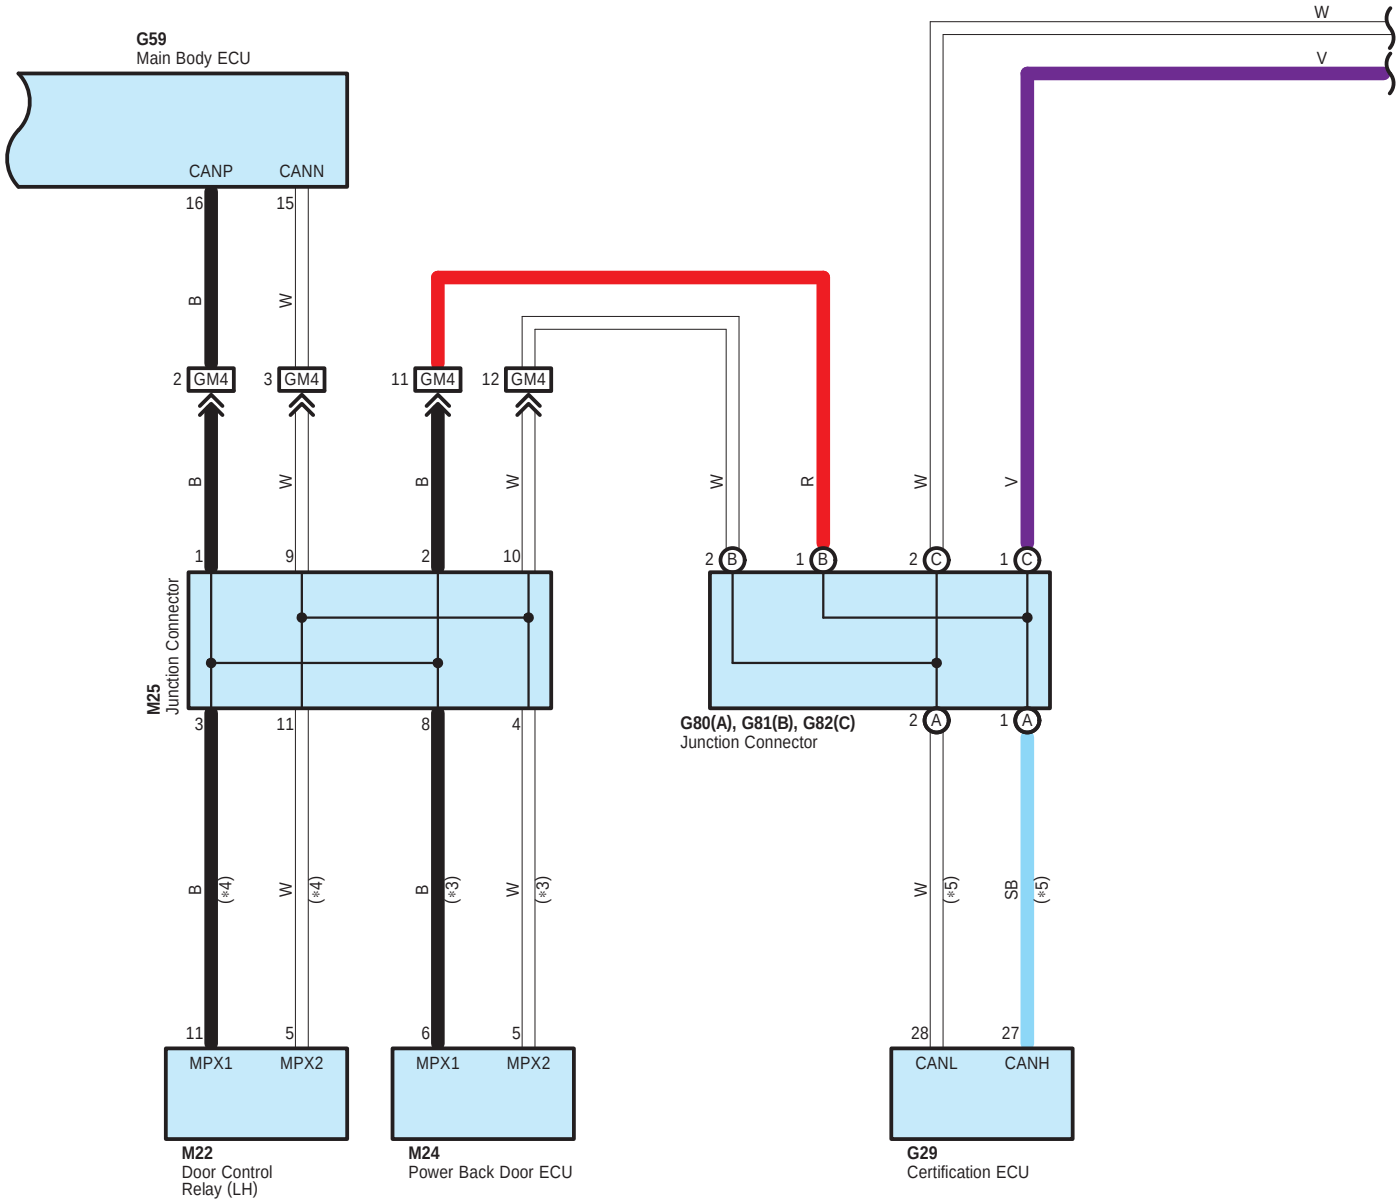


G59
Main Body ECU
CANP
CANN
16
15
B
W
2 GM4
3 GM4
11 GM4
12 GM4
W
V
B
W
B
W
W
R
W
V
1
9
2
10
2 B
1 B
2 C
1 C
M25
Junction Connector
G80(A), G81(B), G82(C)
Junction Connector
2 A
1 A
3
11
8
4
B (*4)
W (*4)
B (*3)
W (*3)
W (*5)
SB (*5)
11
5
6
5
28
27
MPX1
MPX2
MPX1
MPX2
CANL
CANH
M22
Door Control
Relay (LH)
M24
Power Back Door ECU
G29
Certification ECU



W
W
B
B

* 3 : w/ Power Back Door
* 4 : w/ Power Slide Door
* 5 : w/ Power Switch

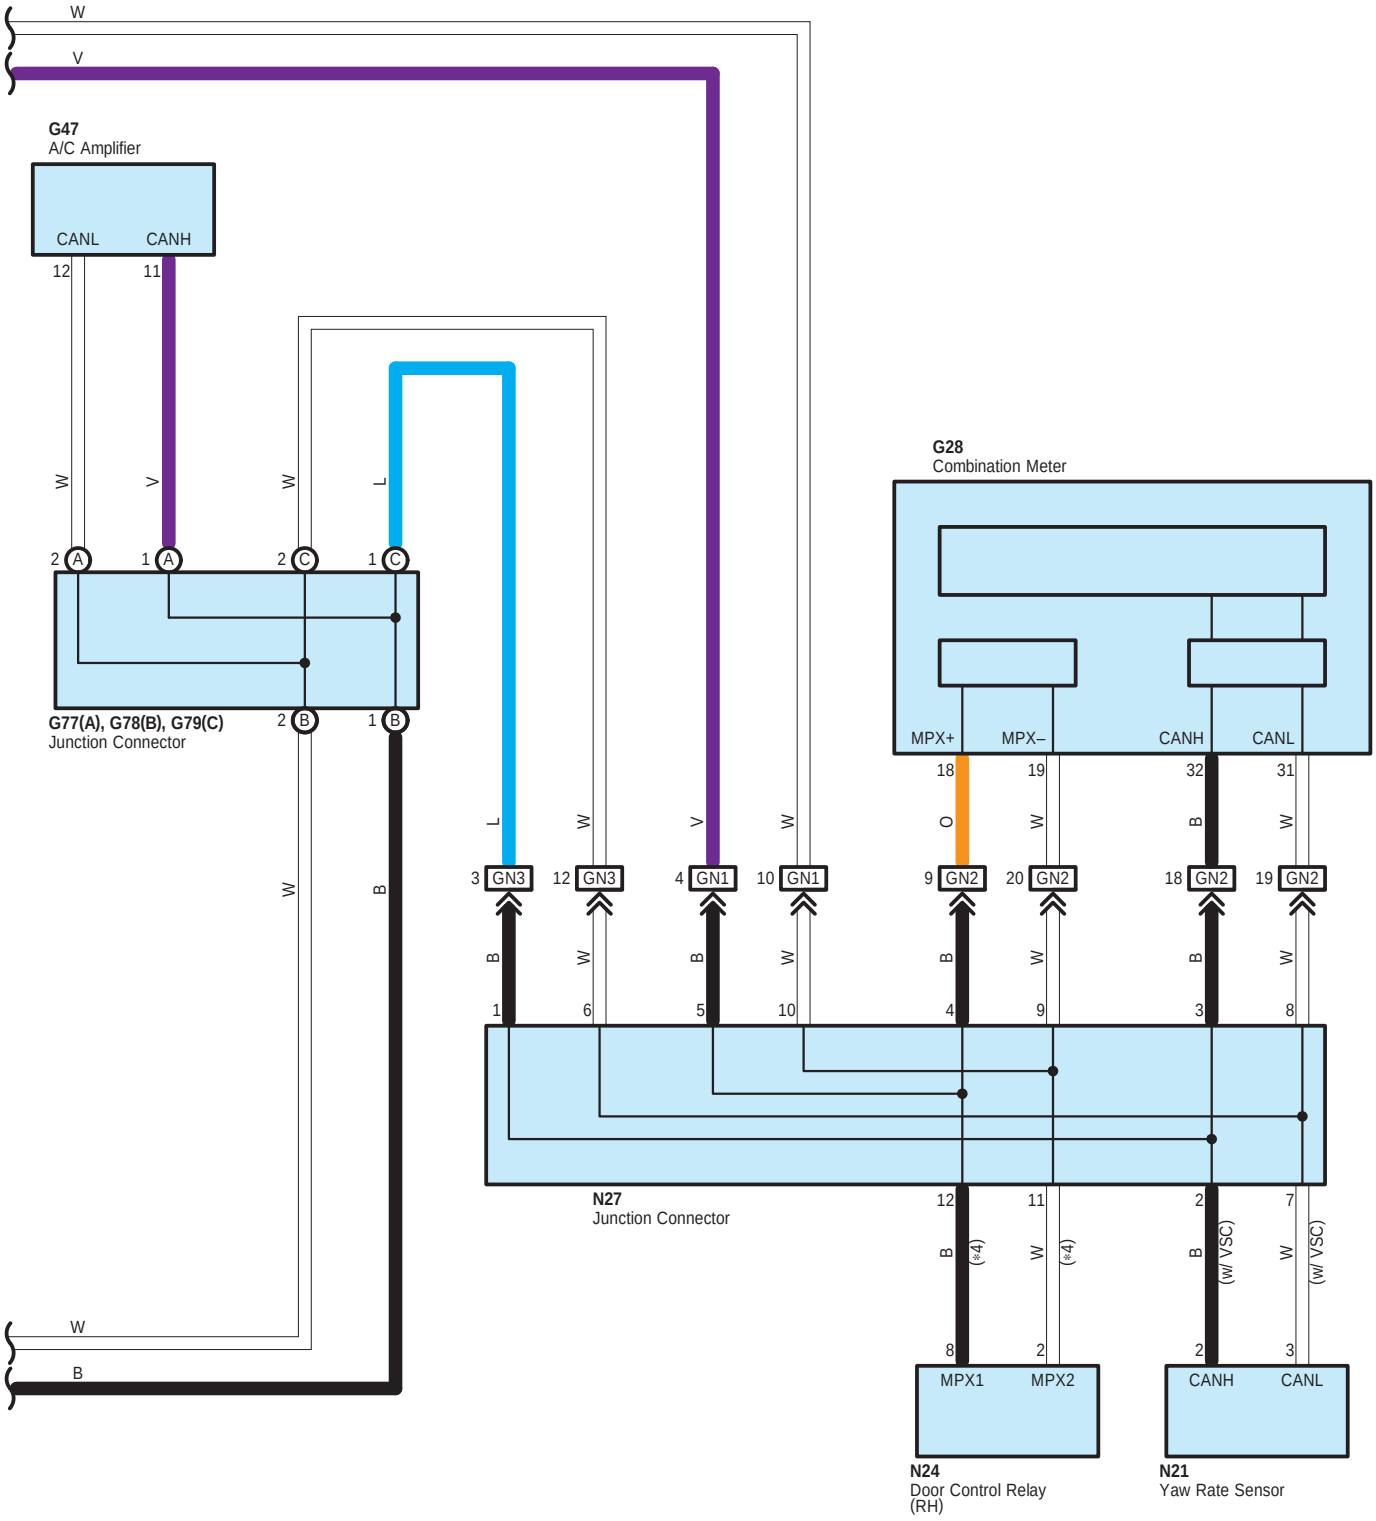


A 7

Black

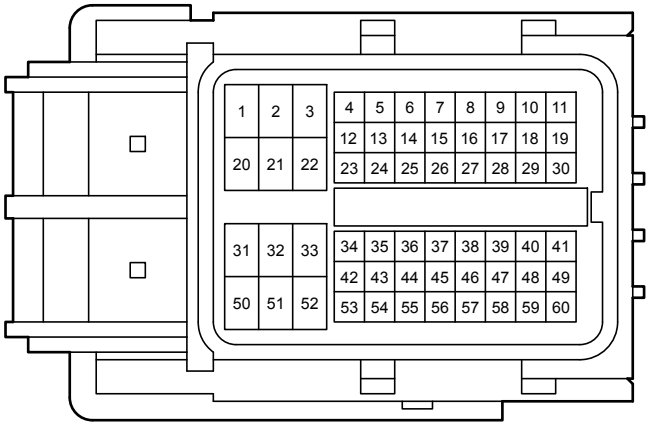


A 9

Black

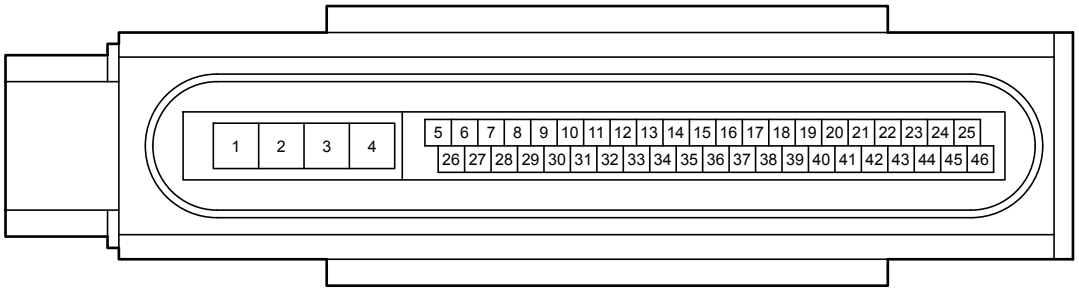


A 22

Black

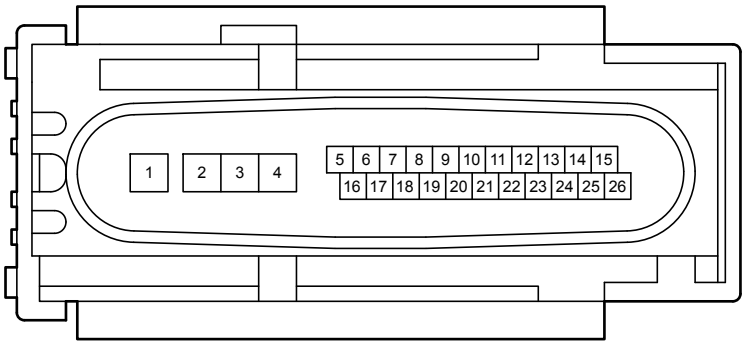


A 23

White

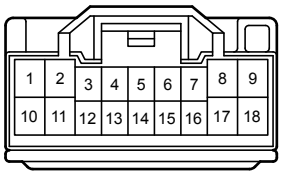


A 28

White

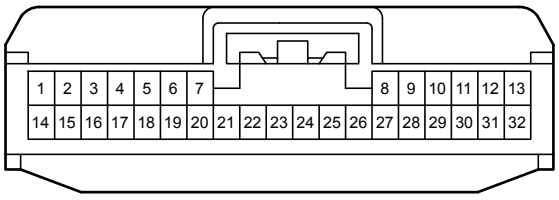


A 29


White

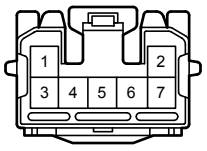


D 1
Black

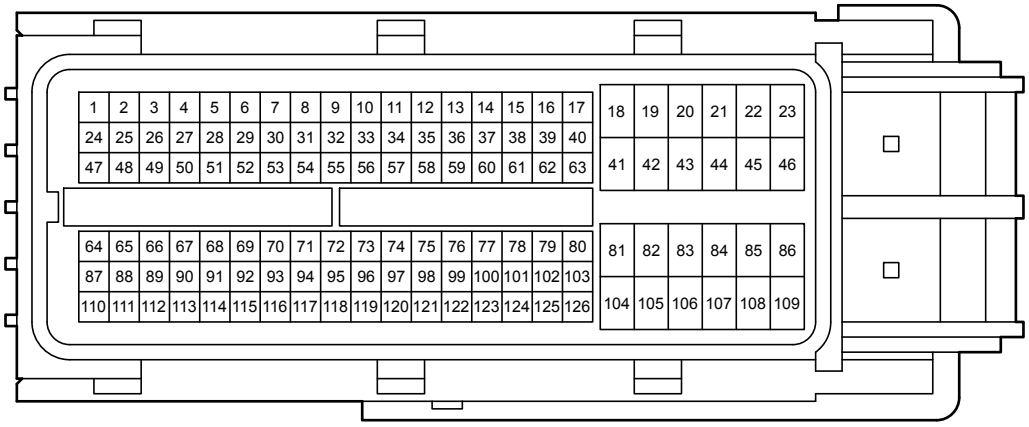


D 5
Black

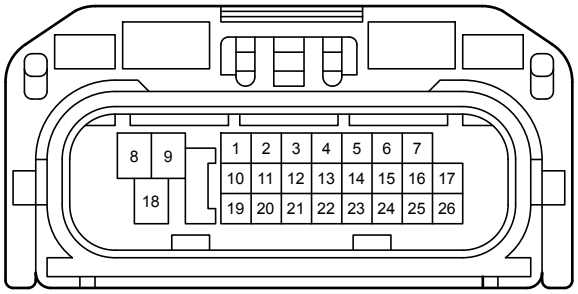


F 6
Black

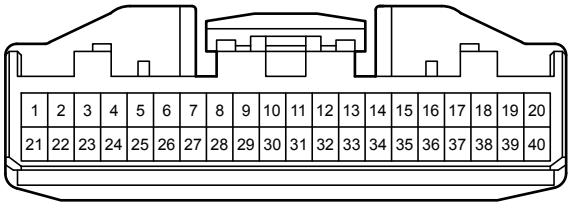


G 15
White

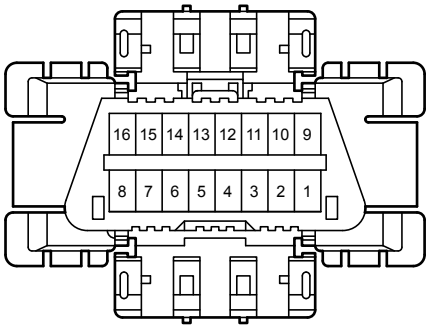


G 18
Gray

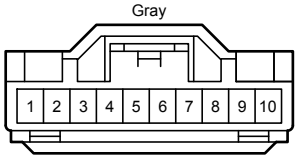


G 19
Yellow

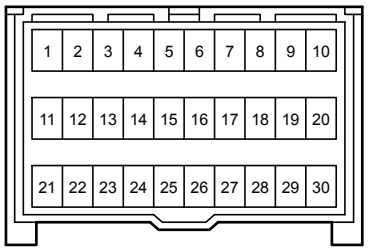


G 27
White

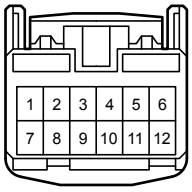


G 28
White

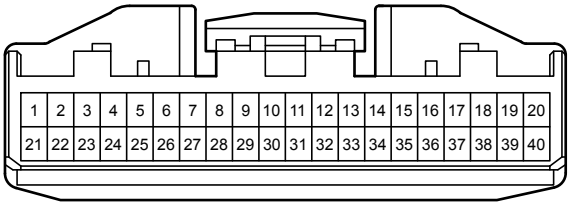


G 29
White

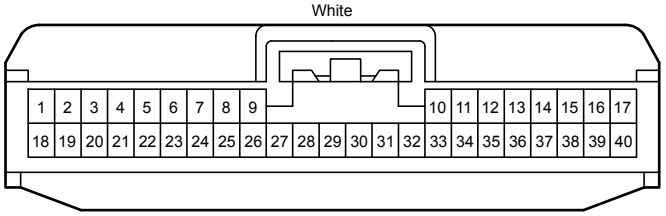


G 40
White

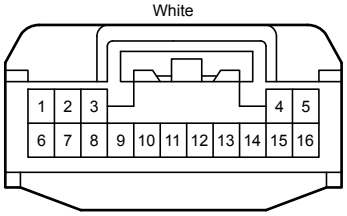


G 47
White

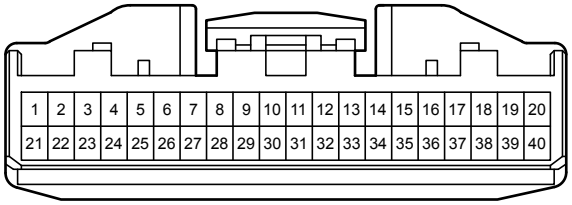


G 59
White

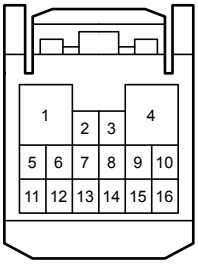


G 65
Black

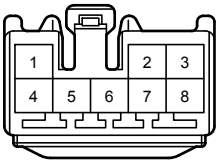

G 66
White




G 67
White




G 68
White




G 69
White




G 70
White




G 71
White




G 72
White




G 73
White




G 74
White




G 75
White




G 76
White




G 77
White




G 78
White




G 79
White




G 80
White




G 81
White




G 82
White




M 22
White

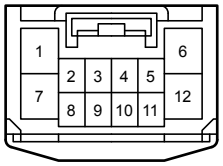


M 24
White

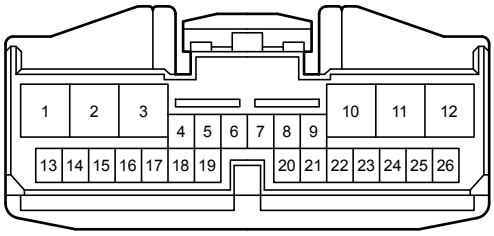


M 25
White

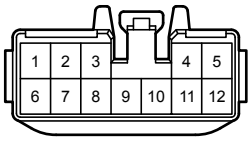


N 21
Black

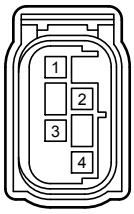


N 24
White

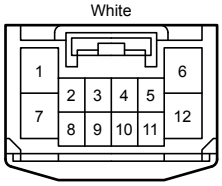


N 27
Black

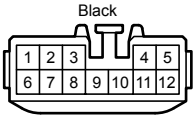


5A
White

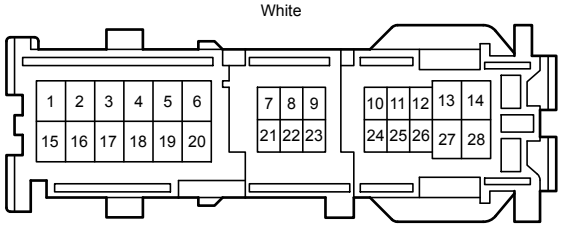


5D
White

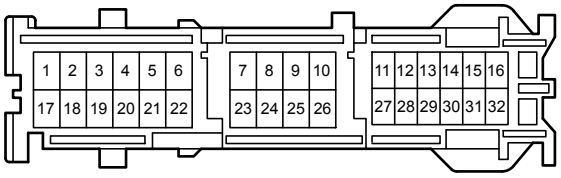


LI
White




LM
White




RA
White




RE
White




RH
Gray




RI
White




AG1
White

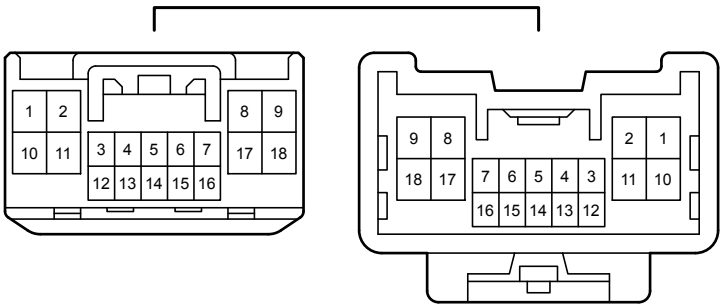


AG8
Gray

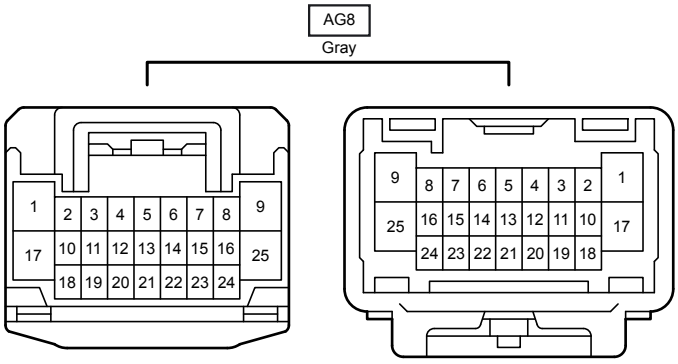


FG2
White

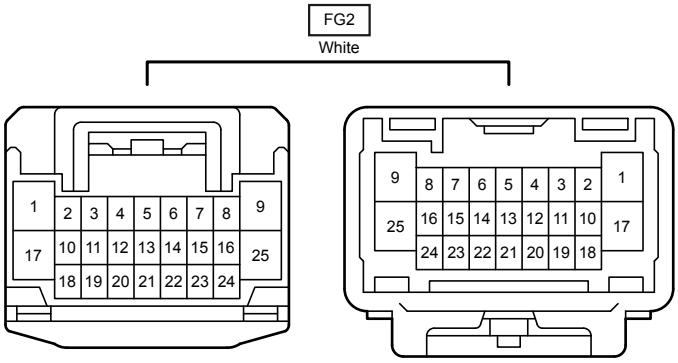


GM4
White

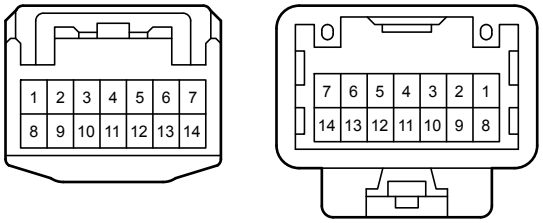

GN1
Black

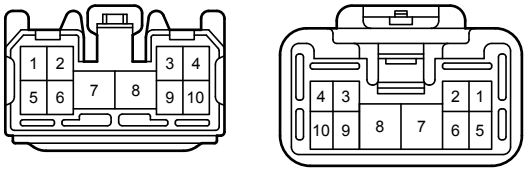

GN2
White

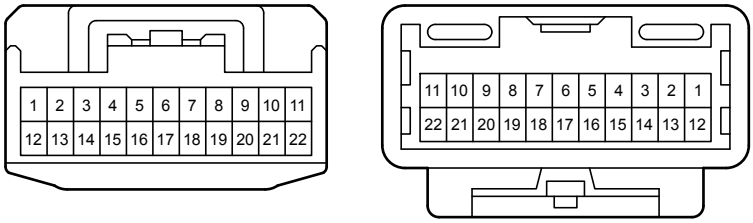

GN3
White

