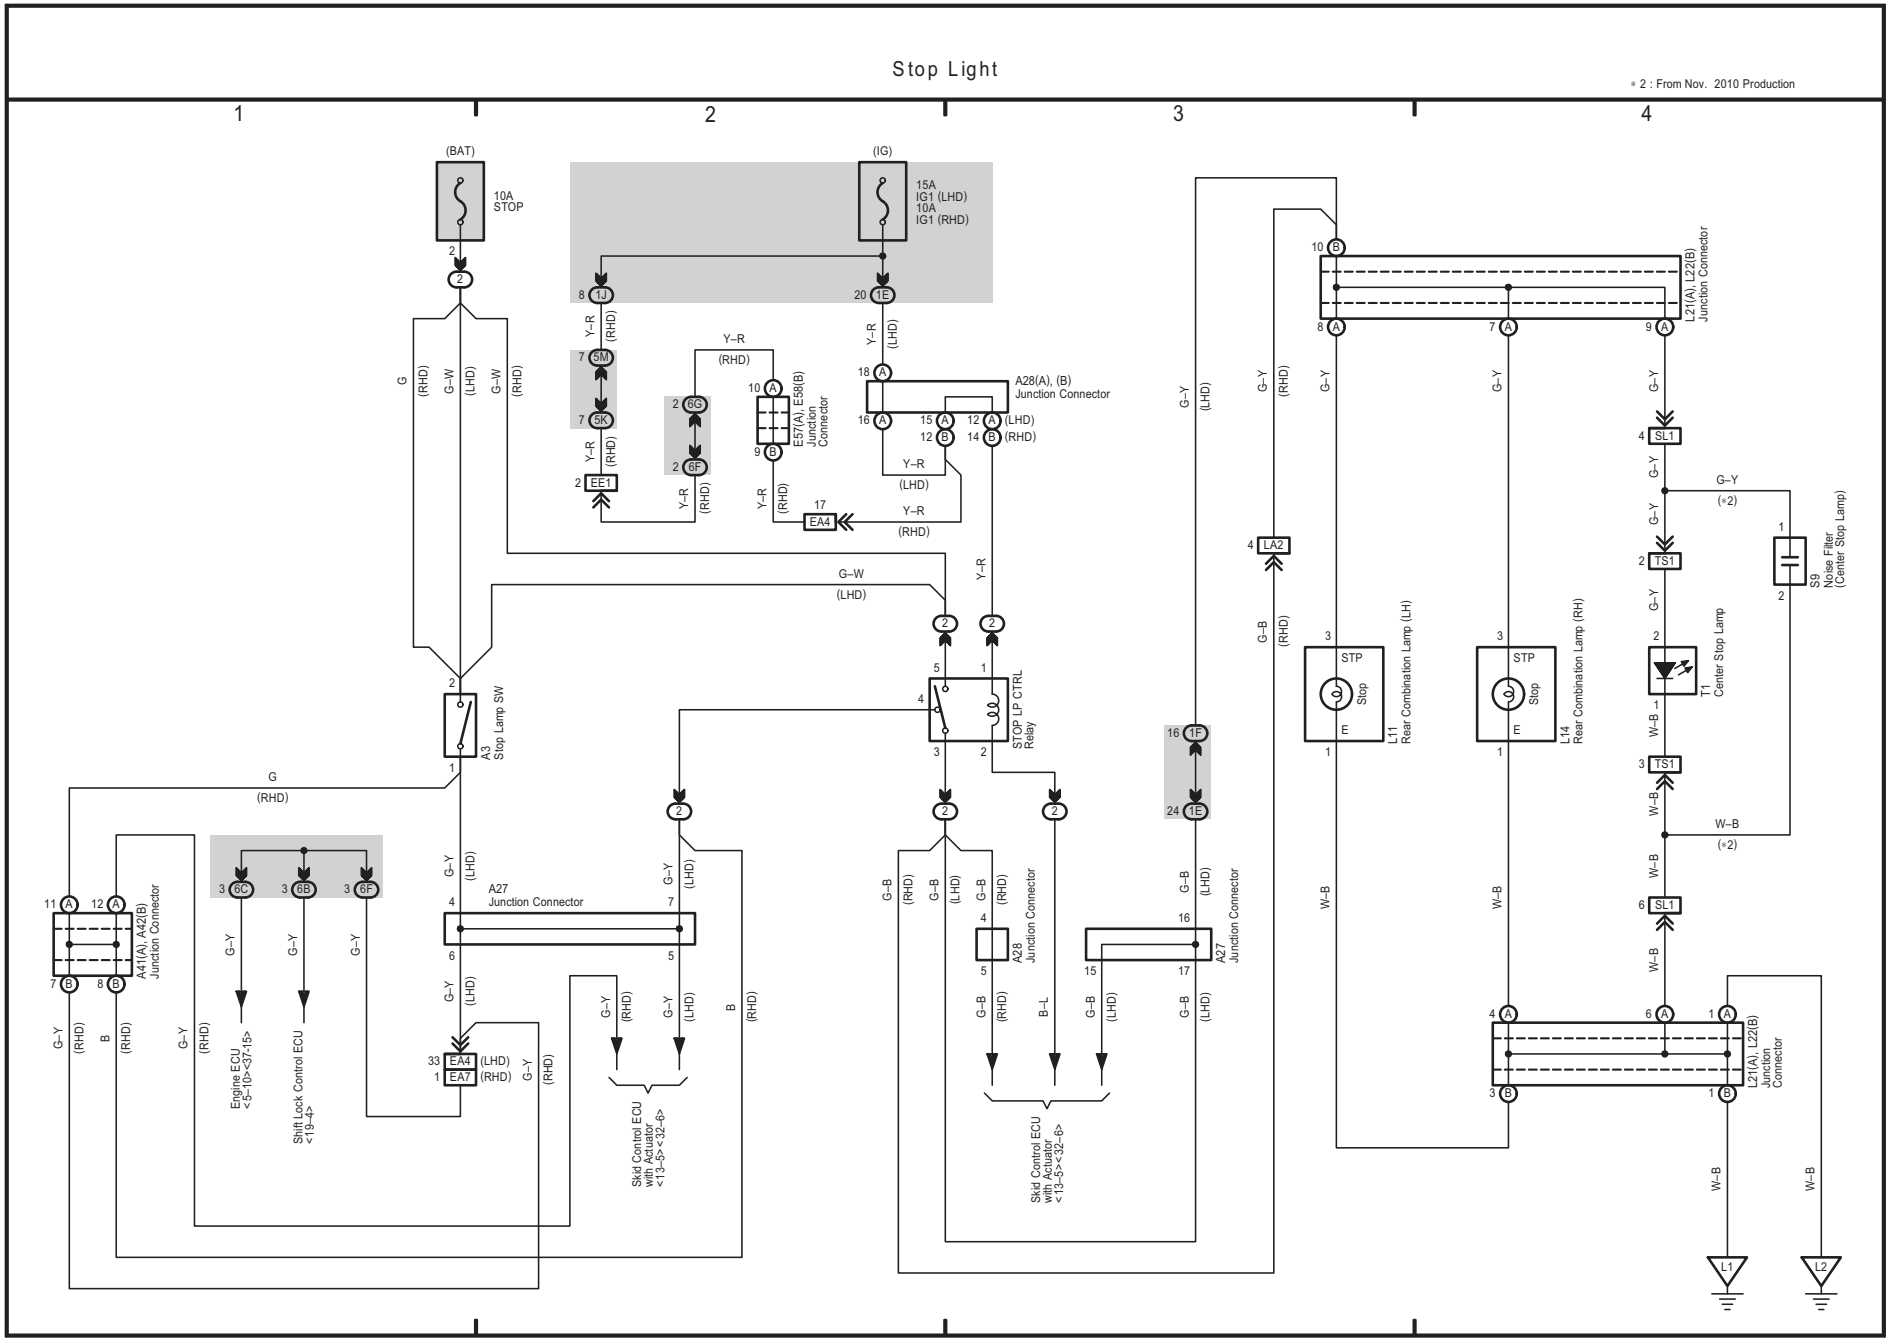

Stop Light
* 2 : From Nov. 2010 Production
1
2
3
4
(BAT)
10A
STOP
(IG)
15A
IG1 (LHD)
10A
IG1 (RHD)
A3
Stop Lamp SW
STOP LP CTRL
Relay
A27
Junction Connector
A28
Junction Connector
A28(A), (B)
Junction Connector
E57(A), E58(B)
Junction
Connector
A41(A), A42(B)
Junction Connector
L21(A), L22(B)
Junction Connector
L11
Rear Combination Lamp (LH)
L14
Rear Combination Lamp (RH)
S9
Noise Filter
(Center Stop Lamp)
T1
Center Stop Lamp
Engine ECU
<5-10><37-15>
Shift Lock Control ECU
<19-4>
Skid Control ECU
with Actuator
<13-5><32-6>
Skid Control ECU
with Actuator
<13-5><32-6>
L1
L2