

* 1:Before Nov. 2010 Production
* 2:From Nov. 2010 Production
* 5:From Aug. 2012 Production
Single Fuel Tank Except China
* 6:From Aug. 2014 Production
w/ Air Injection Control Driver
* 7:Except *6
Q5
Q4
R6
Q3
R7
R2
(*2)
I5
(*1)
I4
R5
I1
I2
R3
b2
T1
I3
b1
S5
S6
S3
c1
S7
S4
S1
X1
S8
N8
N2
N4
N6
Q1
R1
Q2
R4
J2
J1
J3
J6
(*2)
J4
(*1)
J5
X2
e1
O1
(*7)
P2
(*5)
O2
(*7)
O3
(*6)
N3
N9
N5
N7
d2
N1
S9
S2
d1
M1

I 1 Door Courtesy SW (Front RH)
I 2 Door Courtesy SW (Rear RH Upper Side)
I 3 Door Courtesy SW (Rear RH Lower Side)
I 4 Pretensioner (RH)
I 5 Pretensioner (RH)
J 1 Door Courtesy SW (Front LH)
J 2 Door Courtesy SW (Rear LH Upper Side)
J 3 Door Courtesy SW (Rear LH Lower Side)
J 4 Pretensioner (LH)
J 5 Front Seat Outer Belt (LH)
J 6 Pretensioner (LH)
M 1 Ultrasonic Sensor (Rear Center RH)
N 1 Ultrasonic Sensor (Rear Center LH)
N 2 Rear Turn Signal Light RH (Rear Light Assembly RH)
N 3 Rear Turn Signal Light LH (Rear Light Assembly LH)
N 4 Rear Fog Light RH (Rear Light Assembly RH)
N 5 Rear Fog Light LH (Rear Light Assembly LH)
N 6 License Plate Light Assembly RH
N 7 License Plate Light Assembly LH
N 8 Ultrasonic Sensor (Rear Center RH)
N 9 Ultrasonic Sensor (Rear Center LH)
O 1 Fuel Pump Control ECU Assembly
O 2 Fuel Pump Control ECU Assembly
O 3 Fuel Pump Control ECU Assembly
P 2 Short Connector
Q 1 Traction Control SW (Active TRC)
Q 2 Diff. Lock SW
Q 3 Crawl Control Switch Assembly
Q 4 Map Lamp Assembly
Q 5 Junction Connector
R 1 Option Connector (EC Mirror and Off-road Lamp)
R 2 Room Lamp (Front)
R 3 Room Lamp (Rear)
R 4 Speaker (Roof LH)
R 5 Speaker (Roof RH)
R 6 Inner Rear View Mirror Assembly
R 7 Map Lamp Assembly
S 1 License Plate Lamp
S 2 Door ECU (Back)
S 3 Rear Wiper Motor Assembly
S 4 Back Door Lock Assembly
S 5 Door ECU (Back)
S 6 Back Window Lock Assembly
S 7 Back Door Lock Cylinder Assembly
S 8 Diode (Back Door)
S 9 Noise Filter (Center Stop Lamp)
T 1 Center Stop Lamp
X 1 Speed Sensor (Rear RH)
X 2 Speed Sensor (Rear LH)
b 1 Rear Window Defogger
b 2 Rear Window Defogger
c 1 Rear Television Camera Assembly

d 1 Ultrasonic Sensor (Rear Center RH)
d 2 Ultrasonic Sensor (Rear Center LH)
e 1 Fuel Sub-Tank Fuel Sender Gage Assembly

I1
Black

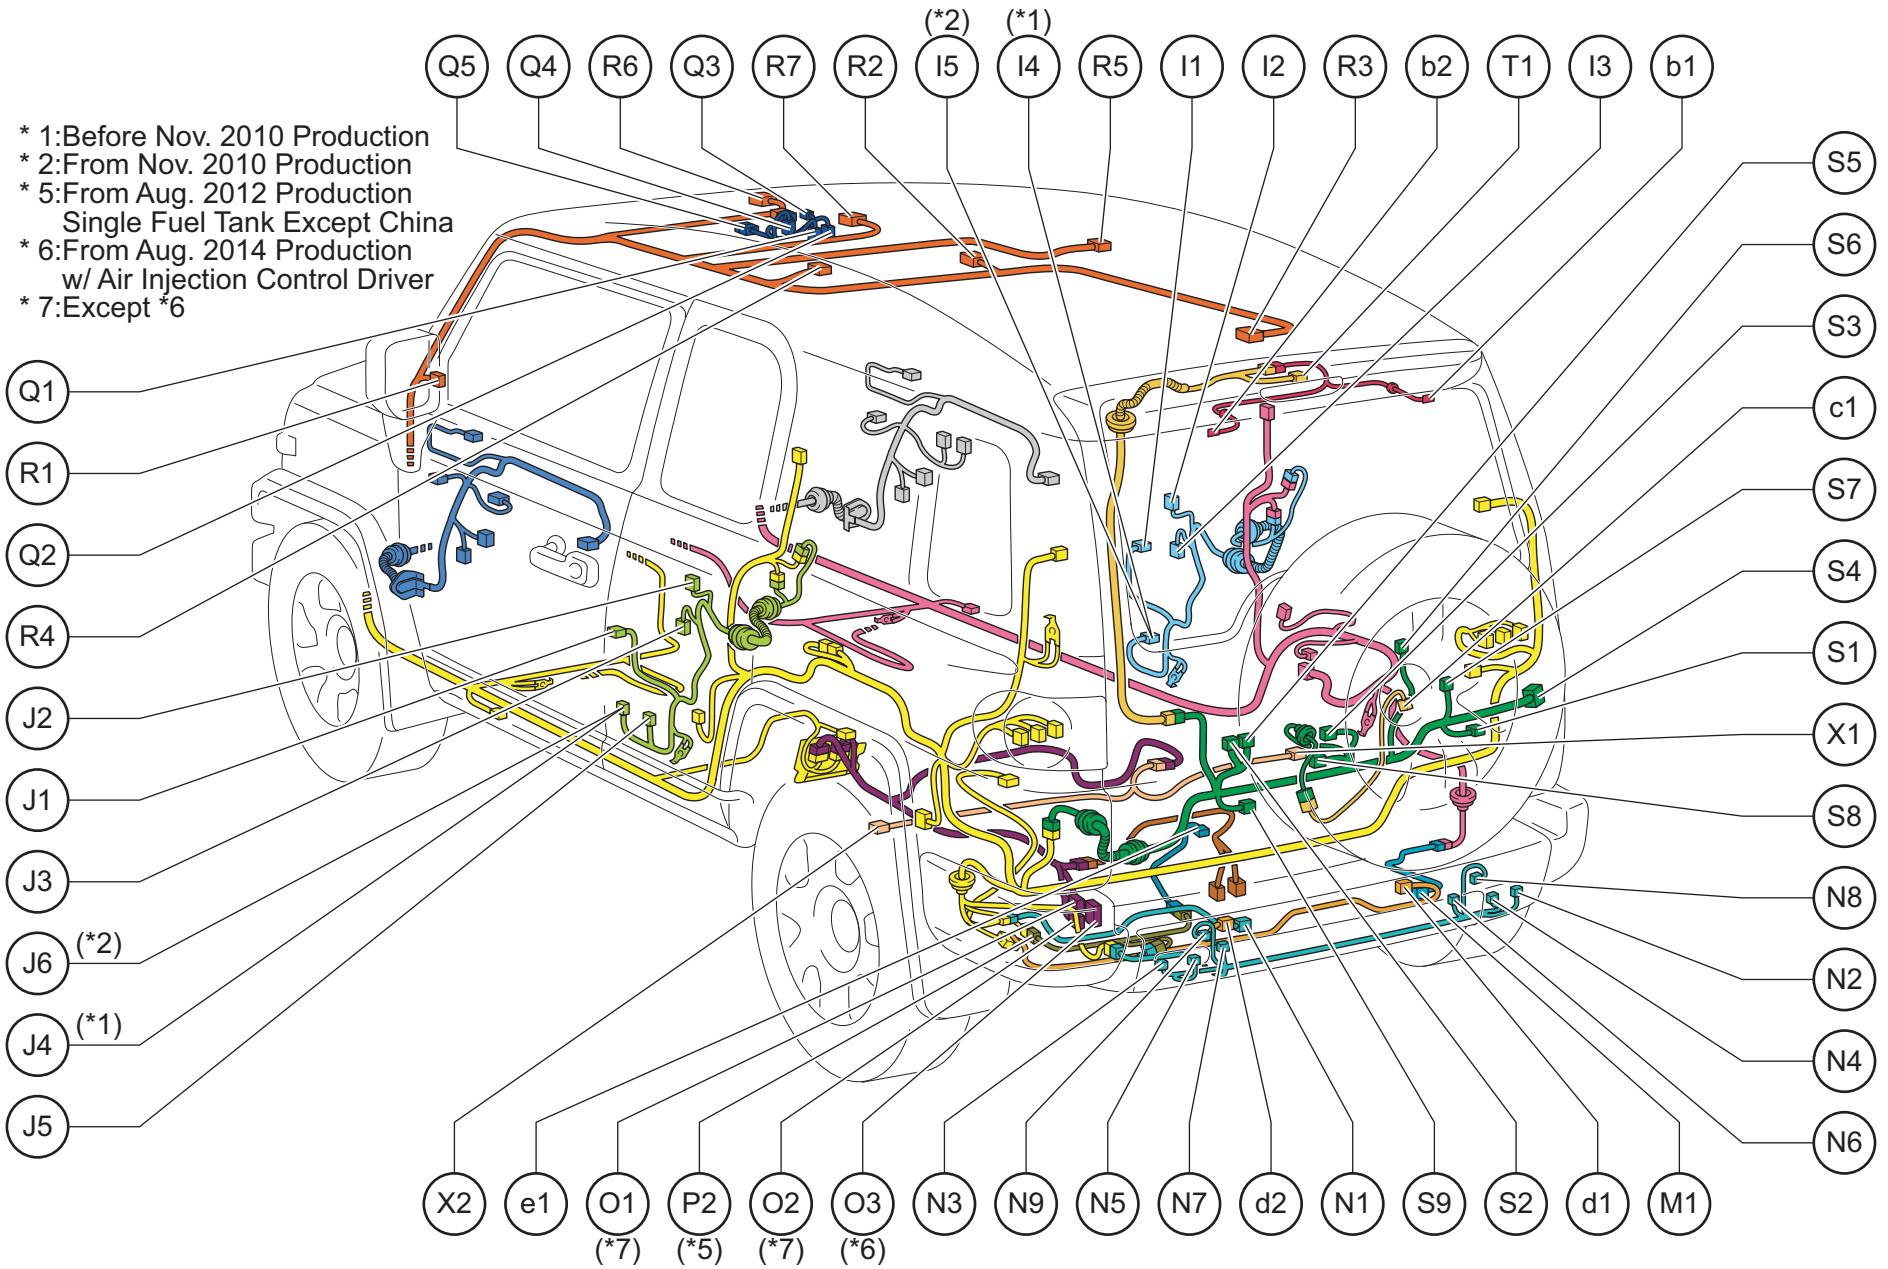


I2




I3
Gray



I4
Black

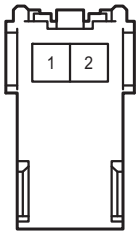

I5
Black




J1
Black




J2
White



J3
Gray




J4
Yellow

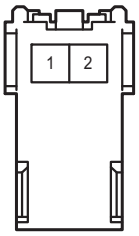


J5
Black




J6
Black



M1
Black



N1
Black




N2
Gray




N3
Gray



N4
Black

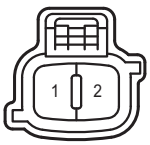

N5
Black

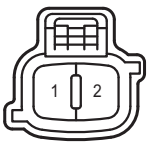


N6
Black




N7
Black



N8
Black

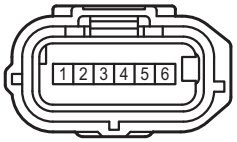


N9
Black

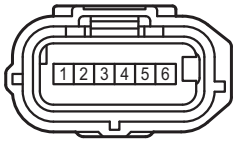


O1
Black



O2
Black

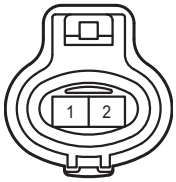


O3
Black

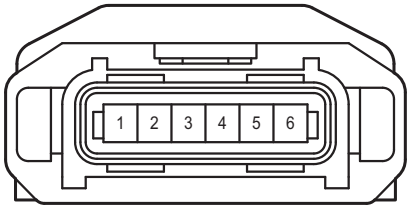

P2
Gray




Q1
Black

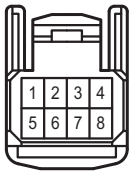

Q2
Gray




Q3
White

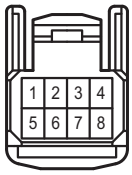


Q4
Blue




Q5
Black

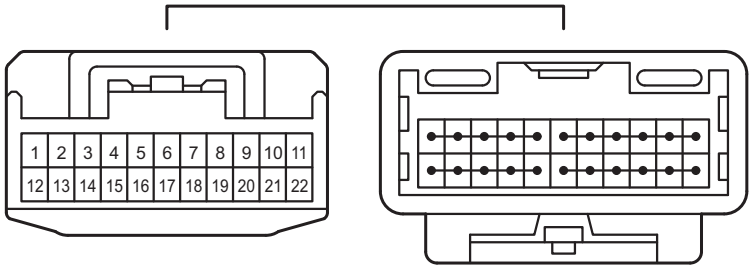


R1
White

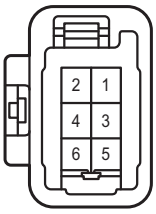

R2
White



R3
White




R4
White




R5
White



R6
White

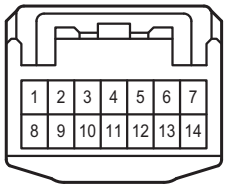

R7
White



S1
Gray




S2
White




S3
Gray




S4
Black

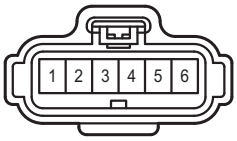


S5
White

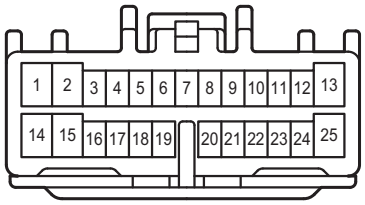


S6
White



S7
White




S8
Gray



S9
Gray



T1
Gray

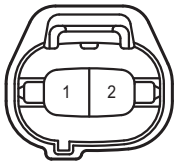


X1
Black



X2
Black




b1




b2




c1
Black

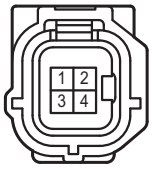

d1
Black

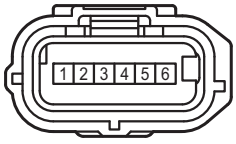

d2
Black

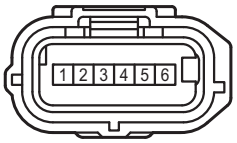

e1
Black

